

Fordson

TRADE MARK

TRACTOR

PARTS PRICE LIST

Effective June 1, 1927

Ford Motor Company
DETROIT, MICHIGAN

Doug
Holt

Fordson

TRADE MARK

TRACTOR

Parts Price List

Effective June 1, 1927
Prices subject to change without notice




PYNN'S GARAGE
MEREDITH, NEW HAMPSHIRE

Ford Motor Company
DETROIT, MICH.

Fordson Tractor

Parts Price List

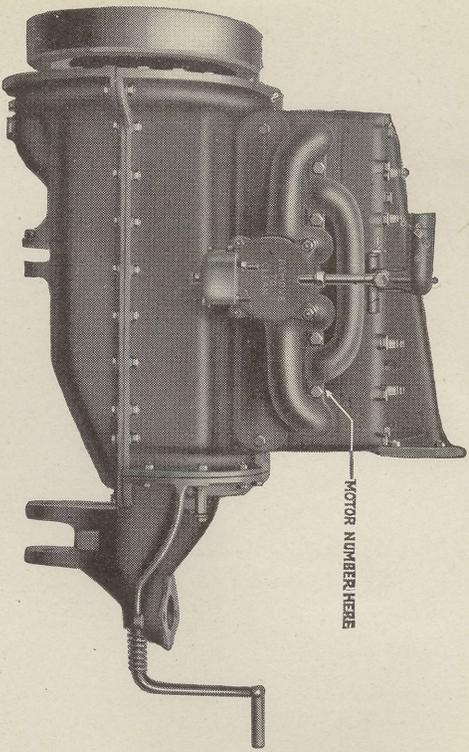

Instructions for Ordering Parts


1. Always give number of Tractor; it is stamped on the motor on the right-hand side. (See Plate above.)
2. Always give number and name of each part ordered.
3. All prices net f. o. b. Branch, Factory or Dealer.
4. Specify whether shipments are to be forwarded by mail, express or freight.
5. Orders for parts should be written separately from correspondence pertaining to other matters.
6. Parts should be ordered from Dealer.



Copyright, 1927
Ford Motor Company
Detroit, Mich.

PYNN'S GARAGE
MERRIDITH, NEW HAMPSHIRE

Price List of Fordson Tractor Parts

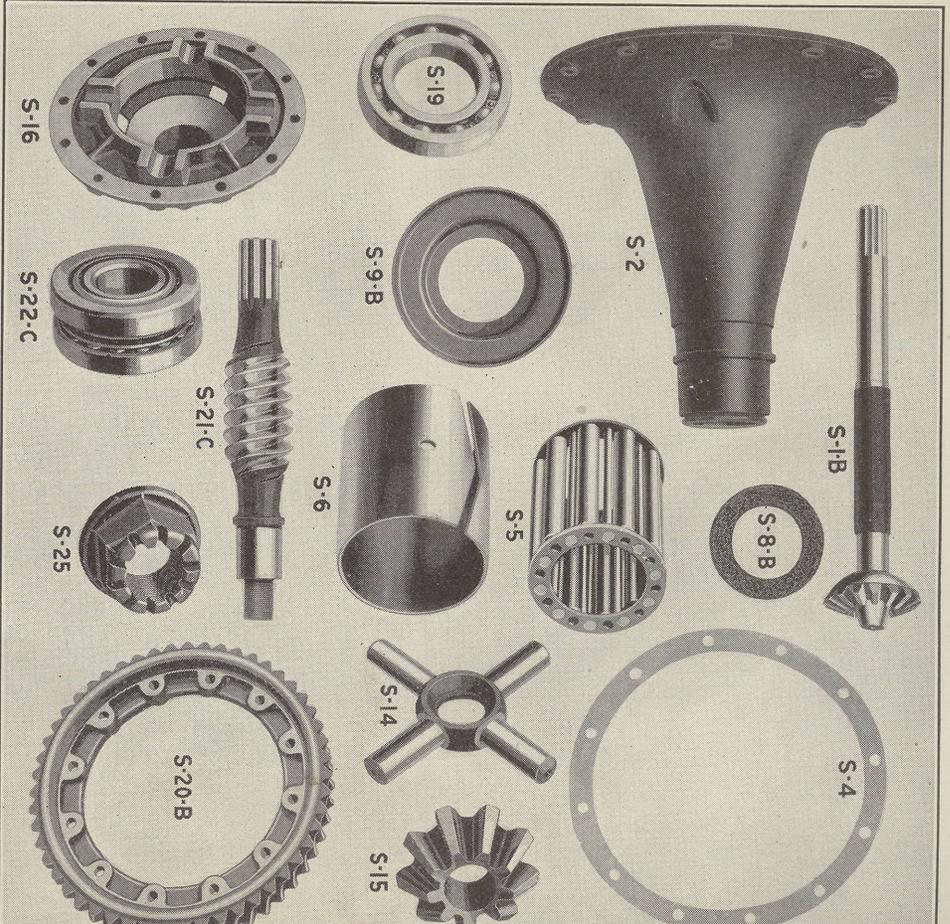

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
-------------	------	----------------	------------------	------	------


REAR AXLE

S1B	Rear axle shaft and gear	Cast iron	F1305B	1926-27	2	
S2	Rear axle housing—R. or L.	Cast iron	F1674	1917-27	2	
S3	Rear axle housing cap screw	$\frac{5}{8}$ " x $1\frac{3}{8}$ " x 12 tds.	F1648	1917-27	2	
S4	Rear axle housing gasket	Paper	F1895	1917-27	2	
S5	Rear axle roller bearing		1 40	F2035	1917-27	2
S6	Rear axle roller brg. sleeve	Steel	35	F2036	1917-27	2
S7	Rear axle shaft brg. cover	Steel	05	F1630	1917-27	2
S8B	Rear axle shaft felt—inner	Steel	05	F1632B	1922-27	2
S8C	Rear axle shaft felt—outer	Steel	10	F1634	1922-27	2
S9B	Rear axle shaft felt retainer	Steel	03	F 820	1917-27	2
S10	Rear axle housing plug	$\frac{1}{2}$ " pipe plug	03	F1340	1917-27	2
S13	Differential gear lock ring	Steel	1 Pt.			
S14	Differential pinion spider	Steel	03	F1315	1917-27	2
S15	Differential pinion	Steel	1 60	F1313	1917-27	4
S16	Differential housing	Cast iron	4 00	F1314	1917-27	4
S17	Differential housing bolt	$\frac{1}{2}$ " x $2\frac{1}{8}$ " x 20 tds.	05	F1152	1917-27	12
S18	Differential housing bolt nut	$\frac{1}{2}$ " x 20 tds.	10	F 567	1917-27	12
S19	Differential housing ball	$\frac{3}{8}$ " dia. inside, $\frac{6}{16}$ " dia. outside	12 00	F1536	1917-27	2
S20B	WORM GEAR	Bronze—51 teeth	22 00	F1294B	1920-27	1
S21D	Worm and nut assembly		13 00	F1407	1922-27	1

Fordson Tractor Parts Price List

I N D E X

	PAGE		PAGE
Air Washer	25	Kerosene Tank	8
Axle (Front)	6	Magneto and Flywheel	11
Axle (Rear)	5, 6	Motor	10, 11
Brake	12, 13	Paint	30
Church	14	Pulley (Belt)	28
Coil (Spark)	26, 27	Radiator	17
Commutator	11	Rim (Extension)	28
Cotter Pins	30	Seat	27
Cover (Tractor)	29	Starting Crank	15
Dash	15	Steering Gear	16, 17
Fan	17, 18	Tools	28
Fender	29, 30	Transmission	12
Foot Bracket	27	Vaporizer (Holley)	18, 19, 21
Gasoline Tank	8, 10	Vaporizer (Kingston)	21, 22, 25
Gear Shifter	14	Wheels	6, 7
Grouser	29	Wiring	27

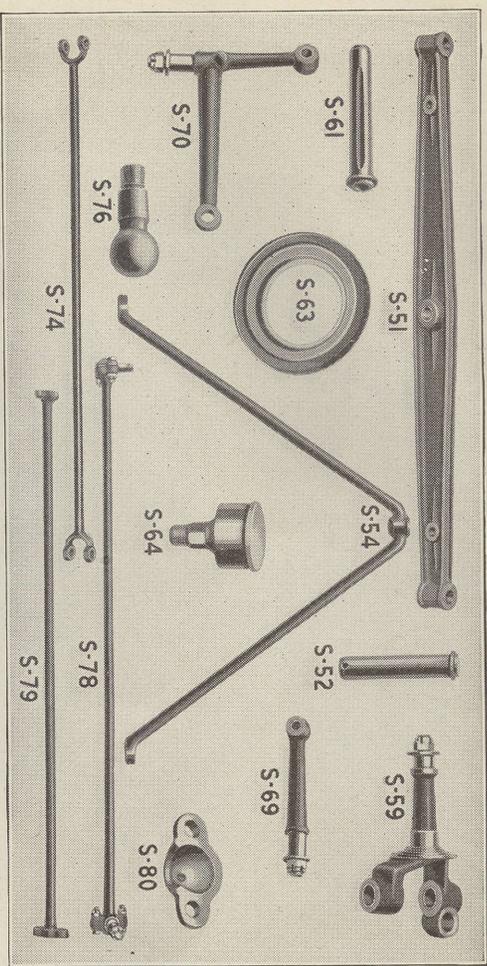

Catalog No.	Name	Specifications	List	Factory No.	Year	Unit
-------------	------	----------------	------	-------------	------	------

REAR AXLE—Continued

S22C	Worm shaft thrust roller brg.	1 1/2" x 12 thds.	\$16 00	F1524T	1917-27	1
S25	Worm nut.	1 1/2" x 12 thds.	50	F1406	1917-27	1
S26	Worm shaft thrust roller bearing race.		2 50	F3114	1917-27	

FRONT AXLE

S51	Front axle—with bushing.	Steel	7 00	F2272	1917-27	1
S52	Front axle trunnion.	1" x 4 3/4"	30	F1450	1917-27	1
S53	Front axle trunn. bushing.	Steel	05	F1451	1917-27	1
S54	RADIUS ROD—WITH BUSHING.	Steel	2 50	F2273	1917-27	1
S55	Radius rod bushing.	Steel	05	F1482	1917-27	1
S56	Radius rod pin.	3/4" x 3 1/8"	15	F1483	1917-27	1
S57	Radius rod bolt.	3/4" x 2 3/8" x 18 thds.	10	F1387	1917-27	2
S58	Radius rod bolt nut.	(Same as T2598) 3/8" x 18 thds.	08	T 124	1917-27	2

S59	SPINDLE BODY		4 00	F2309	1917-27	2
S60	Spindle body bushing.	Steel	10	F1606	1917-27	2
S61	Spindle pin.	1" x 6 1/4"	50	F1607	1917-27	2
S62	Spindle pin washer.	Steel	05	F1609	1917-27	4
S63	Front wheel dust ring.		10	F2509	1917-27	2
S64	Spindle pin grease cup.	(Same as T2579)	15	T 195	1917-27	2
S65	Spindle felt.	Felt (used on 1st 35000 trs.)	10	F1640	1917-19	2
S66	Spindle felt retainer.	Steel (used on 1st 35000 trs.)	05	F1608R	1917-19	2
S67	Spindle washer.	Steel	03	F1611	1917-27	2
S68	Spindle nut.	3/4" x 16 thds.	05	F 686	1917-27	2


S69	SPINDLE ARM FRONT—RIGHT—ASSEMBLY.		1 00	F2311	1917-27	1
S70	SPINDLE ARM FRONT—LEFT—ASSEMBLY.		2 00	F2312	1917-27	1
S71	Spindle arm bushing.	Steel (Order S67)	05	F1328	1917-27	2
S72	Spindle arm nut.	3/4" x 16 thds. (Order S68)	1 30	F1586	1917-27	2
S73	Spindle connecting rod.	Steel	10	F1339	1917-27	2
S74	Spindle conn. rod yoke pin.	1/8" x 2 7/8"	30	F1614	1917-27	2
S75	Spindle arm ball nut.	5/8" x 18 (Order S58)	3 00	F2224	1917-27	1

S76	STEERING GEAR CONN. ROD ASSEMBLY.		1 75	F1809	1917-27	1
S77	Steering gear conn. rod cap bolt.	Steel	20	F 427	1917-27	2
S78	Steering gear conn. rod cap nut.	1/2" x 1 1/2" x 20 thds.	05	F1753	1917-27	4
S79	Steering gear conn. rod cap.	Steel	05	F1753	1917-27	4
S80	Steering gear conn. rod cap.	Steel	05	F1753	1917-27	4
S81	Steering gear conn. rod cap.	Steel	05	F1753	1917-27	4
S82	Steering gear conn. rod cap nut.	1/2" x 20 thds.	05	F1999	1917-23	4

WHEELS

S100	FRONT WHEEL ASSEMBLY.		14 00	F2039	1917-27	2
S101	Front wheel hub cap.	Steel	20	F1603	1917-27	2
S102	Front wheel spindle bearing outside—cup.	2 1/8" dia. outside.	45	F2600	1917-27	2

*Beginning with tractor No. 32,764.

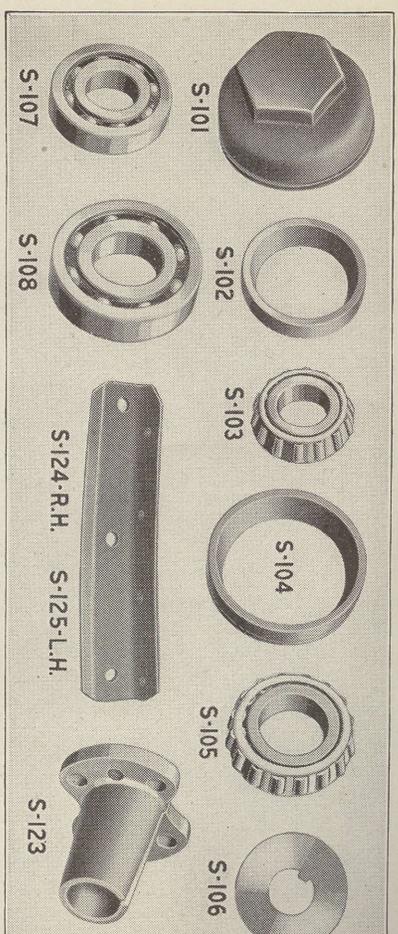


Catalog No.	Name	Specifications	List	Factory No.	Year	Unit
-------------	------	----------------	------	-------------	------	------

WHEELS—Continued

S103	Front wheel spindle bearing outside—cone and roller.	1 1/8" dia. inside.	\$ 1 00	F2601	1917-27	2
S104	Front wheel spindle bearing inside—cup.	3 1/8" outside dia.	80	F2602	1917-27	2
S105	Front wheel spindle bearing inside—cone and roller.	1 1/8" inside dia.	1 75	F2603	1917-27	2
S106	Front wheel spindle washer.	1 1/8" dia. inside, 2 1/8" dia. outside.	05	F2574	1917-27	2
S107	Front wheel ball bearing.	1 1/8" dia. inside, 3 1/8" dia. outside.	3 50	F1553	1917	2

S108	Front wheel ball bearing.	1 1/8" dia. inside, 3 1/8" dia. outside.	4 50	F1552	1917	2
S120	REAR WHEEL ASSY—R.	Less bushing.	36 00	F2223	1917-27	1
S121	REAR WHEEL ASSY—L.	Less bushing.	36 00	F1777	1917-27	1
S122	Rear wheel hub cap screw.	1/2" x 2 1/4" x 10 thds.	15	F 790	1917-27	8
S123	Rear wheel bushing.	Steel.	4 00	F1303	1917-27	2
S124	Rear wheel cleat—right.		50	F 675	1917-27	14
S125	Rear wheel cleat—left.		50	F 676	1917-27	14
S128	Rear wheel cleat rivet.	1/8" x 1 1/2" Iron rivet.	02	F 635	1917-27	112

*Beginning with tractor No. 32,764. †Not subject to regular discount.

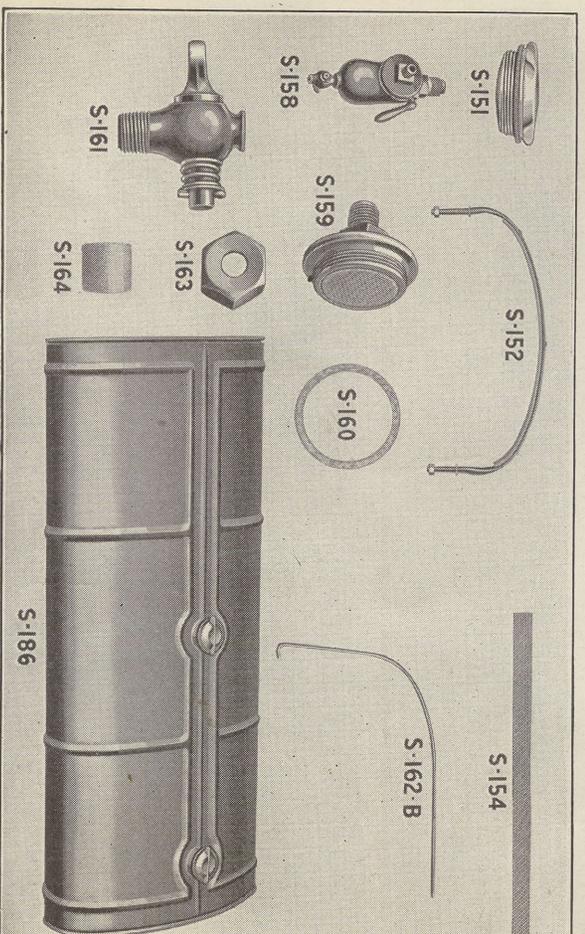


*Beginning with tractor No. 32,764.

Catalog No.	Name	Specifications	List Factory No.	Year Unit
-------------	------	----------------	------------------	-----------

KEROSENE TANK


S151	KEROSENE TANK ASSY. (Order S186)		\$ 0 15	T1317 1917-27	1
	KEROSENE TANK CAP. (Same as T2901B)		75	F1926 1917-27	1
†S152	Kerosene tank strap assy.	Die casting			
††S153	Kerosene tank strap—rear assembly				
S154	Kerosene tank strap lining.	Cotton webbing.	75	F1927R 1917-22	1
S155	Kerosene tank strap rivet.	(Same as T1058)	10	F1579 1917-27	2
S156	Kerosene tank strap lock		01	T108 1917-27	6
S157	Kerosene tank strap nut.	Steel.	01	T5636 1917-27	4
S158	Sediment bulb assembly	1/8" x 20 thds (Same as T2902B)	03	F 584 1917-27	4
S159	Sediment bulb flange.	Including pet cock (Same as T2061X)	90	T2088 1917-24	1
S160	Sediment bulb pet cock.	(Same as T2094X)	25	T2051 1917-24	1
S161	Sediment bulb pet cock.	(Same as T3079)	03	T2094 1917-24	1
S162B	Kerosene feed tube pack nut.	(Order S163)	15	T1515 1917-24	1
S163	Sediment bulb pack nut.	(Same as T2910)	20	F1931BR 1917-24	1
S164	Sed. bulb pack nut packing.	Steel, 1/2" x 18 thds. (Same as T2913)	05	T1374 1917-24	1
			02	T5892 1917-24	1

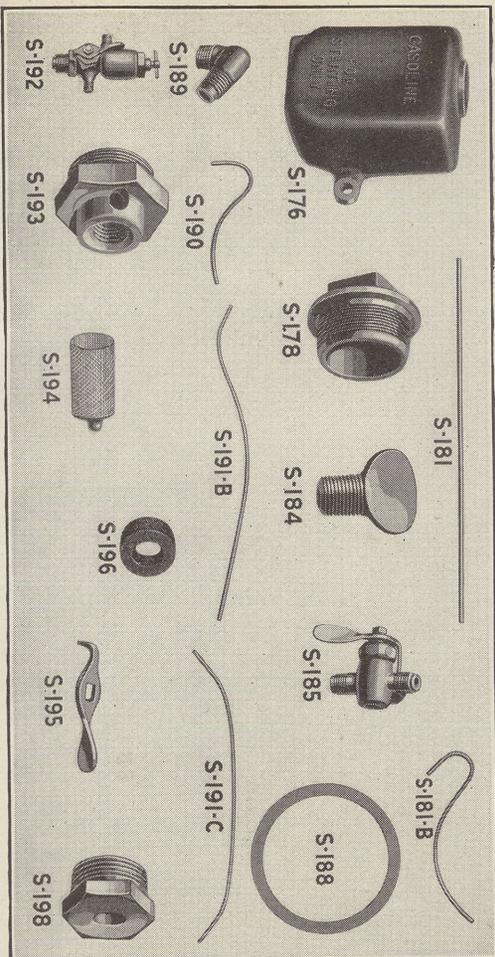

CASOLINE TANK

S176	Gasoline tank. (Cast iron (Same as T2901) Die Casting (Order S151))	3 50	F2024R	1917-25	1
†S178	Gasoline tank plug.	30	F2027R	1917-24	1
	Gasoline tank plug gasket.				
	Gasoline tank pet cock.	20	F1930R	1917-25	1
S181	Gasoline feed tube—short.	10	F3398R	1922-25	1
S182	Gasoline feed tube pack nut.	05	F 560	1922-25	2
S183	Gasoline tank cap screw.				
S184	Aux. gas tank plug.	01	F2247	1917-26	2
S185	Fuel valve (two way).	65	F1939R	1917-23	
††S186	FUEL TANK ASSY.	12 00	F1618B	1924-27	
S187	Fuel tank filler plug and gasket assy.				
S188	Fuel tank filler plug gasket.	02	T1306	1924-27	
S189	Gasoline tank elbow.	20	F4286	1924-27	
S190	Gasoline tank feed tube.	10	F1932	1924-27	
S191B	Fuel feed tube.	25	F1933B	1924-26	

†Two required on tractors with breather on dash. ††Used only on tractors without breather on dash.
 ††Begining with tractor No. 393, 410. When replacing old style fuel tank also supply one (1) of S190.
 ††When replacing plug having 1/4" hole with plug having 1/2" hole also install S185.

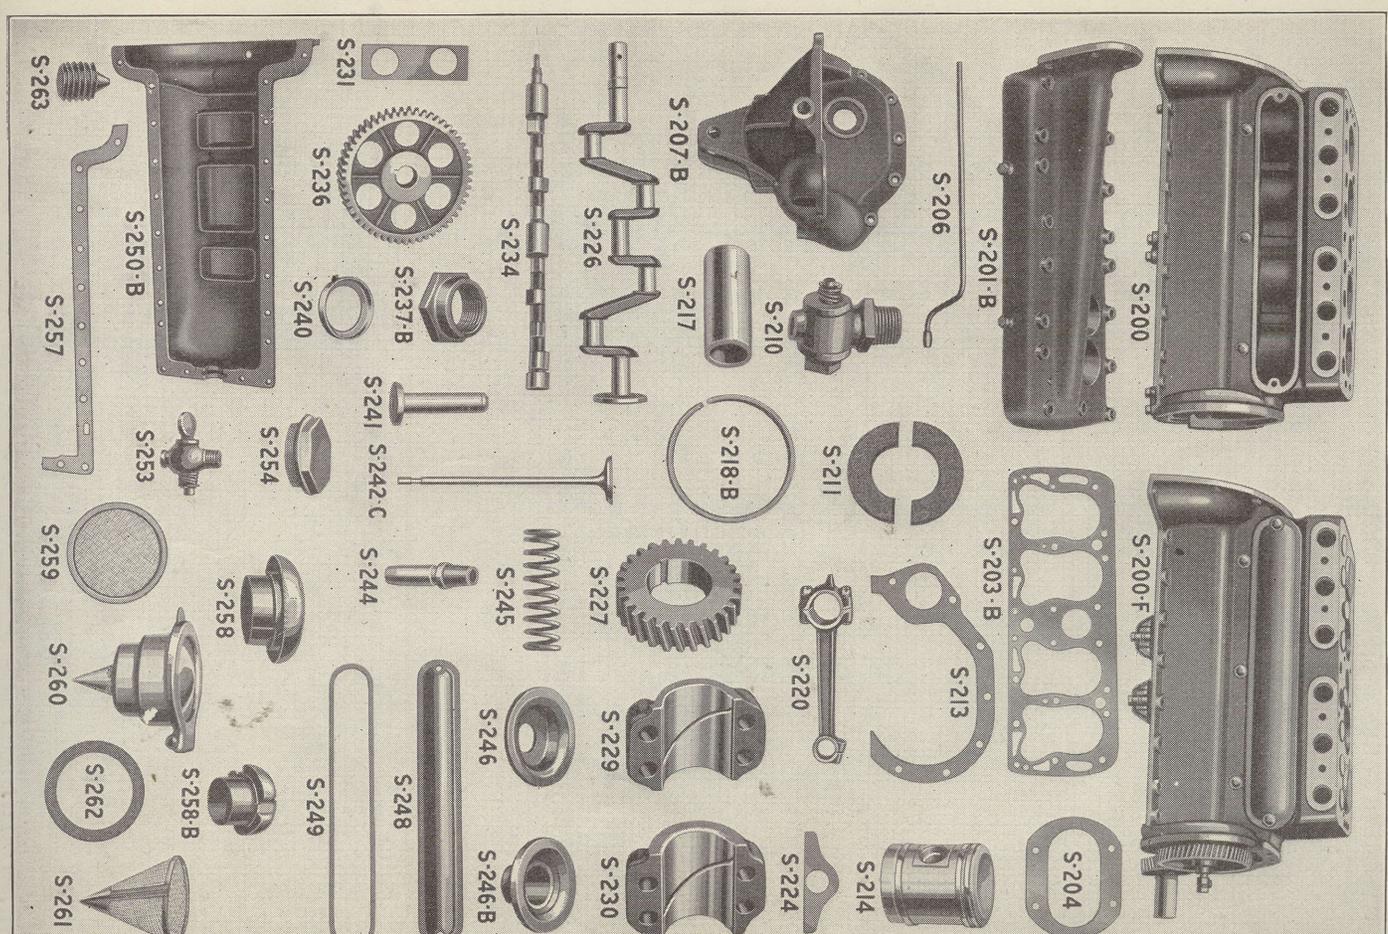

Catalog No.	Name	Specifications	List	Factory No.	Year	Unit
-------------	------	----------------	------	-------------	------	------

GASOLINE TANK—Continued

S191C	Fuel feed tube	(Used with S188 and S1100)	\$ 0 25	F1933GR	1924-25	
S191D	Fuel feed tube	(Used with S1100)	25	F1933D	1925-26	
S191E	Fuel feed tube	(Used with S1200)	25	F1933E	1927	
S192	SPRIMENT PLUG ASSY		1 25	F2900	1924-27	
S193	Sediment bulb screen		15	T2148	1924-27	
S194	Fueler		15	T2147	1924-27	
S195	Sediment bulb screen assy		05	F2904	1924-27	
S196	Sediment bulb valve handle		02	F3094	1924-27	
S197	Sediment bulb valve packing		02	T1818	1924-27	
S198	Sediment bulb valve stem nut	(Same as T3134)	10	T2151	1924-27	

MOTOR

S199	Engine assy. (See illustration page 2)		\$200 00	F2490	1917-27	1
S200	CYLINDER	Cast iron	130 00	F2260D	1917-27	1
S200F	Cylinder assy.	Std. cyl. std. crankshaft	110 00	F3134R	1917-27	1
S201B	Cylinder head	High compression	12 00	F134C	1917-27	1
S201D	Cylinder head	1/2" x 3 3/8" x 13 tnds.	05 00	F134D	1917-27	22
S202	Cylinder head cap screw		50	F157B	1917-27	1
S203B	Cylinder head gasket		15	F1567	1917-27	1
S205	Cylinder plug	Copper asbestos	03	F1844	1917-27	3
S206	Cylinder oil pipe	Steel, 1 1/4" dia.	30	F1816R	1917-25	1
S207B	Cylinder front cover	Cast iron	12 00	F1816B	1926-27	1
S208	Cylinder front cover bolt	1/2" x 2 1/2" x 20 tnds.	05	F 583	1917-27	2
S210	Cyl. front cover drain cock	1/8" x 20 tnds. (Order S157)	40	F1769	1917-27	1
S211	Cyl. front cover cap screw	1/2" x 1 1/4" x 13 tnds. (Order S182)	05	F 716	1917-27	8

Cyl. front cover screw lock

S213	Washer	1/2" std. (Order S183)	05	F1899	1917-25	3
S214	Piston front cover gasket	Yellowed	2 75	F2260D	1917-27	1
S215	Piston COMPLETE	Cast iron	2 75	F2260D	1917-27	4
S216	Piston complete	0.02" oversize	2 75	F2260D	1917-27	4
S216B	Piston complete	3/8" oversize	2 75	F2264E	1917-27	4
S216C	Piston complete	0.10" oversize	2 75	F2264I	1917-27	4
S216F	Piston complete	Die cast	2 75	F2264F3	1927	4
S217	Piston pin	(Used with steel or die cast piston)	75	F1168A	1917-27	4
S217B	Piston pin	(Use with steel or die cast piston)	75	F1168B	1926-27	4
S217C	Piston pin retainer	(Use with S217B)	05	F4413	1917-27	1
S218	Piston ring	0.05" oversize	15	F 363DR	1917-27	12
S218B	Piston ring	Standardize	15	F 363B	1917-27	12
S219	Piston ring	0.07" oversize	15	F 363CR	1917-27	12
S219C	Piston ring	(Used with steel or die cast piston)	15	F 363ER	1917-27	12
S219D	Piston ring	0.10" oversize	15	F 363F	1925-27	12
S220B	CONN. ROD ASSEMBLY	Does not include S223	4 00	F2263B	1917-27	4
S220C	Connecting rod assembly	(Use with steel or die cast piston)	4 00	F2263AR	1917-27	4
S221	Connecting rod cap bolt	1/2" x 2 1/4" x 20 tnds.	4 00	F2263D	1926-27	4
S222	Conn. rod cap bolt nut	1/2" x 20 tnds.	15	F1380	1917-27	8
S223	Conn. rod clamp screw	1/2" x 1 3/8" x 20 tnds.	01	F 117	1917-27	8
S224	Connecting rod shim	Brass, .003"	15	F1070	1917-27	24
S226	GRANKSHAFT	Steel	27 50	F1145F	1917-27	1
S227	Grankshaft time gear	Steel	1 00	F 144	1917-27	1
S228	Grankshaft key	(Same as T3348)	03	T 930	1917-27	1
S229	Grankshaft bearing cap	Steel	1 00	F 137B	1917-27	2
S229B	Grankshaft bearing cap	Under-size	1 00	F 137AR	1917-27	2
S230B	Grankshaft brg. cap No. 3	Under-size	1 50	F2563AR	1917-27	1
S231	Grankshaft brg. cap No. 4	Tin plate, .006"	1 00	F2563AR	1917-27	30
S232	Grankshaft brg. cap shim	Steel, 1/8" x 2 1/2" x 12 tnds.	10	F 565	1917-27	12
S233	Grankshaft bearing cap emer-					
S234	Agency shift	Brass, .003"	01	F2446	1917-27	1
S236	Camsbat key	Steel	8 00	F 446	1917-27	1
S236B	Camsbat gear	(Order S228)	1 50	F 143	1917-27	1
S237B	Camsbat gear shim	Cast iron	10	F 143R	1917-27	1
S238	Camsbat nut—large	(Same as T3220)	03	T 471	1917-27	1
S239	Camsbat nut—small	(Same as T3207)	01	T 466	1917-27	1
S240	Camsbat time gear rivet	(Same as T3206)	02	T 468B	1917-27	1
S241	Valve push rod	Steel	30	F1041	1917-27	8

†Not subject to regular discount.


Catalog No.	Name	Specifications	List	Factory No.	Year	Unit
-------------	------	----------------	------	-------------	------	------

MOTOR—Continued

S242C	Valve (intake and exhaust)	Steel, 3/8" O. S. stem, 1/8" O. S. head	\$ 0 45	F 109C1	1917-27	8
S242D	Valve (intake and exhaust)	3/8" O. S. stem, 1/8" O. S. head	45	F109DIR	1917-27	8
S242E	Valve (intake and exhaust)	3/8" O. S. stem, 1/8" O. S. head	45	F109E	1917-27	8
S243	Valve spring cover screw	1/2" x 1 1/2" x 13 tnds.	05	F1917	1917-25	8
S244	Valve bushing	Cast iron	15	F 112BR	1917-27	8
S244B	Valve bushing	3 1/4" long	10	F 397A	1917-27	8
S245	Valve spring	Steel	03	F 398R	1917-23	8
S246	Valve spring seat	Steel	05	F 107AR	1923-27	8
S247	Valve spring seat pin	Steel	01	F 124R	1917-23	8
S247B	Valve spring seat retainer	Steel	05	F 108	1923-27	8
S248	Valve spring cover	Cast iron	25	F 717	1917-27	1
S249	Valve spring cover gasket	Cork or yellowoid	10	F1783	1917-27	1
S250B	CRANKCASE	Cast iron	15 00	F1331B	1917-27	1

COMMUTATOR

S251	Crankcase oil slinger	1/8" x 20 tnds. (Order S157)	05	F1332	1926-27	18
S253	Crankcase pet cock	Brass	15	F1768	1917-27	2
S254	Crankcase drain plug	(Order S707)	15	F1884A	1917-27	1
S257	Crankcase pipe plug	1/2" pipe plug (Order S10)	05	F1892	1917-27	1
S258	Breather cover assembly	Paper	20	F2015AR	1917-22	1
S258B	Breather cover assembly	(Same as T3068)	10	T4468	1923-25	1
S259	Breather strainer	Wire cloth	05	F2016R	1917-22	1
S260	Oil filter gauze assembly		65	F2015B	1923-27	1
S26	Oil filter felt		20	F4068	1923-27	1
S263	Oil filter cover	1/2"—13 threads	03	F4078	1923-27	1
S264	Oil filter hinge spring		10	F4076	1923-27	1
S265	Oil filter hinge pin		10	F3265	1923-27	1
S266	Oil filter hinge pin		01	F3266	1923-27	1

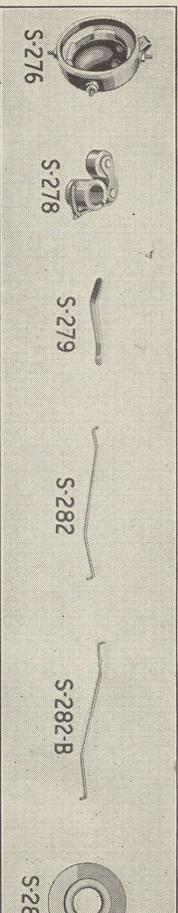


MAGNETO AND FLYWHEEL

S276	Comm. case with fibre	(Same as T3221)	60	T5908A	1917-25	1
S277	Comm. lock nut	(Same as T3210)	01	T 472B	1917-25	8
S278	Comm. brush assembly	(Same as T3165)	20	F1481	1917-25	1
S279	Comm. case spring	Spring steel	05	F1750	1917-27	1
S280	Comm. case spring stud	Steel (Order S157)	10	F2022	1917-27	1
S282	Comm. spring stud nut	Steel	10	F1656AR	1917-24	1
S282B	Comm. control rod		10	F1656B	1924-27	1
S283	Comm. felt retainer assembly		10	F 396	1924-27	1

COMMUTATOR

S300	MAGNETO COIL ASSEMBLY		7 00	F1841	1917-27	1
S301	Magneto coil support shim	Tin plate	01	F 948	1917-27	3
S302	Magneto coil support screw	1/2" x 1 1/4" x 13 tnds.	05	F 1260	1917-27	3
S303	PRIMARY CONTACT ASSY	(Same as T3260B)	30	T1548B	1917-27	2
S304	PRIMARY INSULATING LOCK NUT	(Same as T3261B)	01	T1508	1917-27	1
S305	Flywheel	Cast iron	12 50	F1445	1917-27	1
S306	Flywheel magnet (16 per set)	(Same as T3276B) - per set	4 00	T5933	1917-27	1
S307	Flywheel magnet clamp	Brass	03	F 623	1917-27	16
S308	Flywheel mag. clamp screw	(Same as T3257)	03	F 518	1917-27	16
S309	Flywheel magnet support	(Same as T3258)	05	T 535C	1917-27	16
S310	Flywheel magnet bolt	(Same as T3259)	03	T 537B	1917-27	16
S311	Flywheel magnet washer	(Same as T3255)	01	T 624	1917-27	16
S313	Flywheel stud	1 1/2" inside dia., 2 1/8" out- side dia. (Order S107)	20	F 451	1917-27	1

*†Used with tractors having breather on dash. †Used with steel valve. ‡Solid in sets only.

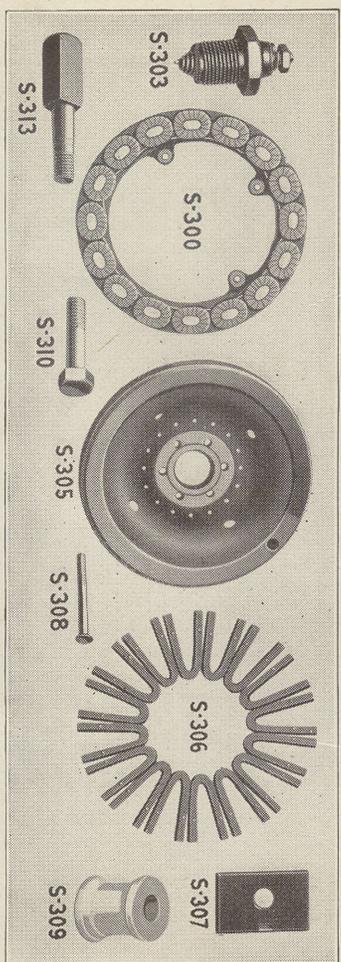

Catalog No.	Name	Specifications	List	Factory No.	Year	Unit
-------------	------	----------------	------	-------------	------	------


TRANSMISSION

S325	Trans. housing gasket	Cast iron	*\$35 00	F1673	1917-27	1
S326	Trans. housing gasket	Paper	03	F1894	1917-27	1
S327	Trans. housing plate	Semi-steel	5 00	F1078AK	1917-27	1
S328	Trans. housing plate gasket	Cast iron	5 00	F1678B	1923-27	1
S329	Trans. housing plate pin	Steel	03	F1928	1917-27	1
S330	Trans. housing plate cap screw	Steel	10	F1735	1917-27	1
S331	Trans. housing bolt	1/2" S302 1/2" x 20 thds. (Order S208)	8			8
S332	Trans. housing bolt nut	1/2" S208 1/2" x 20 thds. (Order S157)	14			14
S333	Trans. housing plug	1/2" x 20 thds. (Order S10)	14			14
S334	Trans. housing cap screw	1/2" x 1 1/4" thds. (Order S182)	14			14
S335B	Trans. drive shaft	Steel	10 00	F1648B	1923-27	2
S336	Trans. shaft bevel gear	Steel	3 50	F1549	1917-27	1
S337	Trans. drive shaft nut	1 1/2" x 20 thds.	35	F1560	1917-27	1
S338	Trans. shaft—upper	Steel	6 00	F1518	1917-27	1
S338B	Trans. shaft—upper (Special ratio)	Steel	5 00	F3731	1925-27	1
S339	Trans. shaft—lower assy.	Steel	7 00	F2192	1917-27	1
S340	Trans. pinion (splined)	Steel	3 50	F1545	1917-27	2
S340B	Trans. pinion (splined) (Special ratio)	Steel	4 00	F3733	1925-27	1
S341	Trans. pinion reverse (plain)	Steel	3 50	F1546	1917-27	1
S342	Trans. gear—low (Special ratio)	Steel	6 00	F1547	1917-27	1
S342B	Trans. gear—low (Special ratio)	Steel	6 00	F3734	1925-27	1
S343B	Trans. gear—large (deep splined)	Steel	9 00	F1540C	1923-27	1
S343C	Trans. gear—large (Special ratio)	Steel	10 00	F3732	1925-27	1
S344C	Trans. reverse idler with bushing	Steel	3 50	F2265C	1923-27	1
S345	Trans. housing plate oil shield	Steel	05	F2584	1917-27	1
S346	Trans. reverse idler shaft	Steel	70	F2442AR	1917-27	1
S346B	Trans. reverse idler shaft	Steel	70	F2442B	1923-27	1
S347B	Trans. reverse idler bushing	Steel	35	F1663B	1924-27	1
S348	Trans. reverse idler collar	Steel	10	F2443R	1917-27	1
S349	Trans. shaft ball bearing—small	1" dia. inside 3 3/4" dia. outside	3 75	F1521	1917-27	2
S350	Trans. shaft ball bearing—large	1 1/2" dia. inside, 3 3/4" dia. outside	4 50	F1522	1917-27	2
S351	Trans. drive shaft and large gear ball bearing	2 1/2" dia. inside, 4 1/2" dia. outside	7 00	F1523A	1917-27	2
S352	Drawbar cap	Semi-steel	2 25	F1536	1917-27	1
S353	Drawbar cap screw	1 1/2" x 1 1/8" x 12 thds. Paper	05	F 587	1917-27	1
S354	Drawbar cap gasket	Paper	03	F1899	1917-27	4
S355	Trans. reverse idler shaft cotter pin	1/8" x 2"	10	F2475R	1917-27	1
S356	Drawbar cap extension	per doz.	1 25	F1537S	1923-26	1

BRAKE

S360	Trans. plate, reverse idler and brake assy.		11 00	F2388C	1923-27	1
S361	Brake shaft		1 50	F3310	1923-27	1


†Used only with S21C. *Not subject to regular discount.

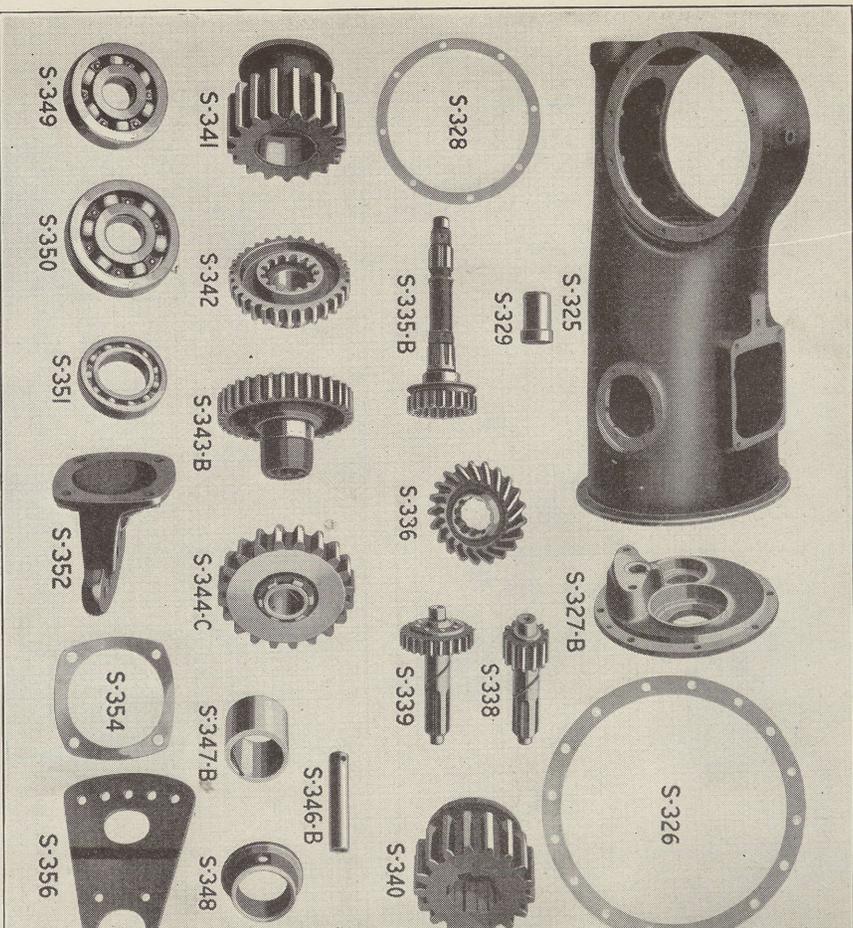

Catalog No.	Name	Specifications	List	Factory No.	Year	Unit
-------------	------	----------------	------	-------------	------	------

BRAKE—Continued

S362	Brake spring		\$ 0 15	F4053	1923-27	1
S363	Brake spring retainer nut		10	F4054	1923-27	1
S364	Brake adjusting screw		05	F4052	1923-27	1
S365	Brake plate pin		10	F3495	1923-27	2
S366B	Brake plate—stationary		10	F3493	1923-27	3
S367B	Brake plate—revolving		10	F3494	1923-27	2
S368	Brake hub		60	F3496B	1923-27	1

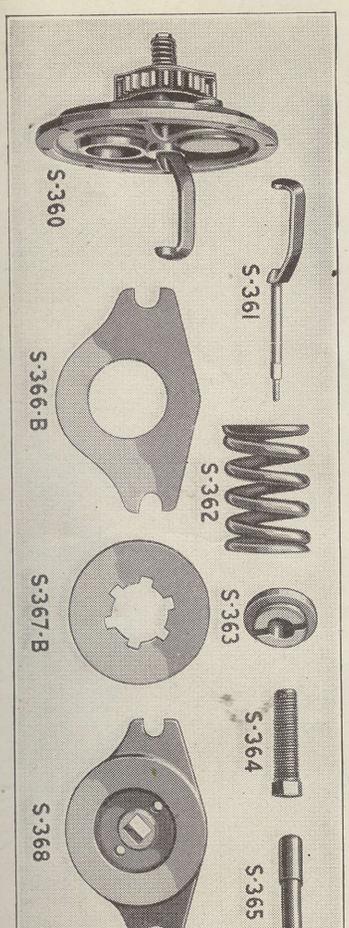

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S-375					
S-376					
S-377		Cast iron.			
S-379		Yellowoid.			
S-384		1/2" x 1 1/4" x 13 thds. (Order S182)			
S-385		Steel			
S-386		Steel			
S-387		Steel			
S-388		Steel			
S-389		Steel			
S-391		Steel			

GEAR SHIFTER

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S375	GEAR SHIFTER ASSEMBLY		\$ 8 50	F1782	1917-27
S376	Gear shifter plate gasket	Cast iron.	4 00	F1829	1917-27
S377	Gear shifter plate cap screw	Yellowoid.	05	F1896	1917-27
S379	Gear shifter lever	Steel	1 00	F1602	1917-27
S380	Gear shifter lever ball	Steel	15	F 377	1917-27
S381	Gear shifter lever ball pin	1/2" x 1 1/4" x 13 thds.	01	F1345	1917-27
S382	Gear shifter lever ball	Steel	10	F1053	1917-27
S383	Retainer				
S384	Gear shifter lever ball	1 3/4" x 1 1/8"	01	F1059	1917-27
S385	Gear shifter upper	Steel	1 00	F1531	1917-27
S386	Gear shifter lower	Steel	1 00	F1532	1917-27
S387	Gear shifter shaft	Steel	35	F1776	1917-27
S388	Gear shifter shaft pin	1/2" x 1 1/8"	01	F1564	1917-27
S389	Gear shifter plunger spring	Steel wire	15	F 534	1917-27
S390	Gear shifter plate cap	Die casting (Order S254)	03	F 534	1917-27
S391	Gear shifter interlock	Steel	05	F2202	1917-27

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S-400					
S-401					
S-402					
S-403					
S-404					
S-405					
S-406					
S-407					
S-408					
S-409					
S-410					

CLUTCH


Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S400	CLUTCH ASSEMBLY		10 00	F1660	1917-27
S401	Clutch housing—front	Steel	45	F 175	1917-27
S402	Clutch housing—rear	Cast iron and steel	2 00	F193	1917-27
S403	Clutch housing cap screw	1/4" x 1 3/8" x 28 thds.	03	F2347	1917-27
S404	Clutch housing cap screw	1/4" x 28 thds.	02	F2344	1917-27
S405	Clutch housing cap screw	Steel	15	F 416	1917-27
S406	Clutch housing cap screw	Steel	15	F 417	1917-27
S407	Clutch housing cap screw	Spring steel	10	F 944	1917-27
S408	Clutch housing cap screw	Steel	3 50	F194	1917-27
S409	Clutch housing cap screw	Malleable iron	03	F191R	1917-19 I Pr.
S410	Clutch housing cap screw	Steel	35	F1589	1917-27

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S-425					
S-426					
S-427					
S-428					
S-429					
S-430					
S-431					

STARTING CRANK

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S425	STARTING CRANK ASSY		\$ 1 20	F1844	1917-27
S426	Starting crank handle	Steel (Same as T3001)	70	F 661	1917-27
S427	Starting crank handle pin	(Same as T3902)	15	T 520A	1917-27
S428	Starting crank handle spring	(Same as T3909)	10	T 521	1917-27
S429	Starting crank handle pin	Steel (Same as T3909)	02	T 511	1917-27
S430	Starting crank handle spring	Steel	05	F 459	1917-27
S431	Starting crank handle spacer	Steel	05	F1823	1917-27
S432	Starting pin	1/2" dia. x 2 3/4"	10	F1021	1917-27

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S-451-C					
S-452					
S-453					
S-454					
S-455					
S-456					
S-457					
S-458					
S-459-B					
S-460					
S-461					
S-462					
S-463					
S-464					
S-465					
S-466					
S-467					
S-468					
S-469					
S-470					
S-471					
S-472					
S-473					
S-474					
S-475					
S-476					
S-477					
S-478					
S-479					
S-480					
S-481					
S-482					
S-483					
S-484					
S-485					
S-486					
S-487					
S-488					
S-489					
S-490					
S-491					
S-492					
S-493					
S-494					
S-495					
S-496					
S-497					
S-498					
S-499					
S-500					
S-501					
S-502					
S-503					
S-504					
S-505					
S-506					
S-507					
S-508					
S-509					
S-510					
S-511					
S-512					
S-513					
S-514					
S-515					
S-516					
S-517					
S-518					
S-519					
S-520					
S-521					
S-522					
S-523					
S-524					
S-525					
S-526					
S-527					
S-528					
S-529					
S-530					
S-531					
S-532					
S-533					
S-534					
S-535					
S-536					
S-537					
S-538					
S-539					
S-540					
S-541					
S-542					
S-543					
S-544					
S-545					
S-546					
S-547					
S-548					
S-549					
S-550					
S-551					
S-552					
S-553					
S-554					
S-555					
S-556					
S-557					
S-558					
S-559					
S-560					
S-561					
S-562					
S-563					
S-564					
S-565					
S-566					
S-567					
S-568					
S-569					
S-570					
S-571					
S-572					
S-573					
S-574					
S-575					
S-576					
S-577					
S-578					
S-579					
S-580					
S-581					
S-582					
S-583					
S-584					
S-585					
S-586					
S-587					
S-588					
S-589					
S-590					
S-591					
S-592					
S-593					
S-594					
S-595					
S-596					
S-597					
S-598					
S-599					
S-600					

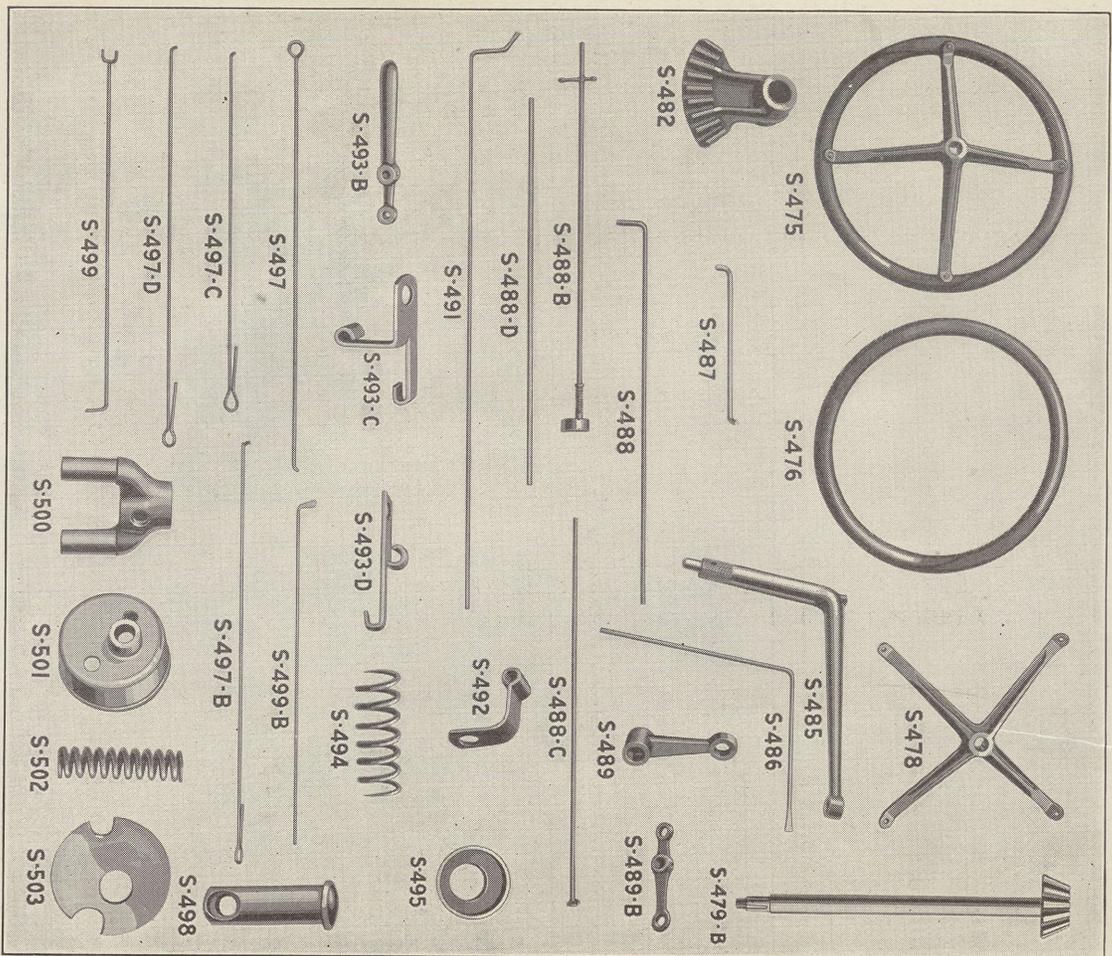

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
-------------	------	----------------	------------------	------	------

STEERING GEAR

ASSEMBLY

S476	Steering wheel rim	Steel	F1747	1917-27	1
S476B	Steering wheel rim	Steel	F1510	1917-26	1
S477	Steering wheel rim screw	Steel	T 901E	1927	1
S477B	Steering wheel lockwasher	Steel	T5346	1917-27	4
S478	Steering wheel spider	Cast iron	F1751	1920-27	1
S478B	Steering wheel spider	Cast iron	F1748	1917-26	1
S479B	Steering shaft and pinion	(Use T2545)	1 20	F1748B	1917-27
S480	Steering shaft grease cup	1 75	F1742	1917-27	1
S481	Steering shaft nut	1 10	T76A2	1917-27	1
S482	Steering sector	1 80	F1745	1917-27	1
S483	Steering sector pin	1 80	F1731	1917-27	1
			1 80	F1738	1917-27


Catalog No.	Name	Specifications	List Factory No.	Year	Unit
-------------	------	----------------	------------------	------	------

STEERING GEAR—Continued

S485	Throttle control rod	Steel	F1635	1917-27	1
S486	Throttle control rod handle	Steel	F1784	1917-27	1
S487	Throttle con. lever conn.	Steel	F1785	1917-26	1
S488	Throttle control rod	Steel	F1818AR	1917-21	1
S488B	Throttle control rod and cover assembly	Steel	F3207	1922-27	60
S488C	Throttle control rod assy.	Steel	F3201	1922-27	20
S488D	Throttle control rod	Steel	F1818B	1922-27	20
S489	Throttle control rod lever	Steel	F1654	1917-27	15
S489B	Throttle control rod lever	Steel	F3394	1922-27	15
S490	Throttle con. rod lever pin	1 8" x 5 8"	F1786	1917-27	01
S491	Spark control rod	Steel	F1655	1917-27	20
S492	Spark control rod support	Steel	F1873AR	1917-23	05
S492C	Spark control rod support	Steel	F1873C	1924-27	05
S493B	Spark control rod lever	Steel	F1875B	1917-27	15
S493C	Spark control rod bracket	Steel	F1188AR	1924	10
S493D	Spark control rod bracket	Steel	F3118C	1924-27	10
S494	Control rod and priming rod plunger spring	Steel wire	F1188	1917-27	03
S495	Control rod spring retainer	Steel	F1150	1917-27	03
S496	Control rod spring retainer pin	1 8" x 1 8"	F1781	1917-27	01
S497	Priming rod	Steel	F2037AR	1917-20	15
S497B	Priming rod	Steel	F2037B	1921-25	10
S497C	Primer rod	(Use with S1100)	F2037C	1924-26	10
S497D	Primer rod	(Use with S1100 & S1200)	F2037D	1925-27	10
S497E	Primer rod—front	(Use with S1100)	F2040	1925-26	10
S498	Primer rod—bracket	(Use with S1000)	F2041	1925-26	10
S498B	Primer rod adjusting rod	Steel	F2025AR	1917-21	15
S499	Needle valve adjusting rod	Steel	F2025B	1922-27	15
S499B	Throttle control rod yoke	Steel	F1915R	1917-21	15
S500	Throttle control rod assy.	Steel	F3200	1922-27	10
S501	Throttle control rod spring	Steel	F3199	1922-27	05
S502	Throttle control rod spring	Steel	F3198	1922-27	03
S503	Throttle control rod friction disc	Cast iron	F3201	1917-27	10
S526	Radiator top tank & lining	Cast iron	F1417	1917-27	1
S527B	Radiator top tank cover	(Replaces S527 & S530)	F1422	1917-27	1
S528	Radiator top tank cover	1 2" x 13 tnds.	F1856	1917-27	15
S529	Radiator cover bolt	Steel	F1421	1917-27	03
S531	Radiator cover ring	1 3 8" x 28 tnds.	F3483	1917-27	03
S532	Radiator tank cap stud	1 4" x 28 tnds. 8 x 10 tnds.	F2884	1917-27	05
S533	Radiator top tank stud	1 4" x 28 tnds. 8 x 10 tnds.	F3484	1917-27	02
S534	Radiator top tank rivet	1 8" x 5 8" spile (Order S155)			
S535	Rad. top tank cotton lining	Cotton webbing (Order S155)			
S536	Radiator top tank conn.	1 2" x 1 1 2" x 13 tnds.	F1405	1917-27	3
S538	Radiator tank cap screw	1 8" x 1 1 2" x 28 tnds.	F2346	1917-27	03
S540	Radiator tank cap screw	1 8" x 28 tnds. (Order S409)	F 391	1917-27	10
S541	Radiator core assembly	Assembly	F1832	1917-27	40
S542	Rad. overflow tube & gland	Brass tube	F1833	1917-27	10
S543	Radiator strip—front	Steel	F1834	1917-27	1
S544	Radiator side member	Cast iron	F1836	1917-27	2
S545	Radiator bottom tank	Cast iron	F1837	1917-27	2
S546	Rad. bottom tank spacer	Steel	F1853	1917-27	02
S547	Rad. bottom tank cap screw	1 5 8" x 1 3 tnds.	F2353	1917-27	05
S548	Radiator tank gasket	Yellumoid	F1907	1917-27	15
S549	Radiator top tank gasket	Copper, asbestos	F1568	1917-27	05
S550	Rad. bottom tank gasket	Copper, asbestos	F1568	1917-27	05
S551	Radiator fin	Copper	F 708	1917-27	75
S552	Radiator header—bottom	Cast iron	F2486	1917-27	10
S553	Radiator header—top	Cast iron	F 801	1917-27	05
S554	Rad. comm. bolt	1 8" x 1 1 2" x 20 tnds. (Order S208)			
S575	Rad. comm. bolt nut	1 8" x 20 tnds. (Order S157)			
S576	Rad. comm. 1/2" lock washer	1 8" std. (Order S158)			
S577	Rad. 1/2" lock washer	1 2" std. (Order S183)			

FAN

S575	FAN ASSEMBLY	Assembly	F1846	1917-27	7
S576	Fan shaft	Steel	F1514	1917-27	90
S577	Fan shaft nut	1 8" x 18 tnds. (Order S58)	F2377	1917-27	40
S578	Fan shaft retainer	Steel	F2462	1917-27	35
S579	Fan blade assembly	Cast iron	F2379	1917-27	1
S580	Fan pulley	Cast iron	F2564	1917-27	02
S581	Fan pulley gasket	Vellumoid	F2575	1920-27	05
S582	Fan pulley dust ring	Steel stamping	T633	1917-27	03
S583	Fan pulley plug	(Use T3880)	F1502	1917-27	1
S584	Fan drive pulley	Cast iron			1

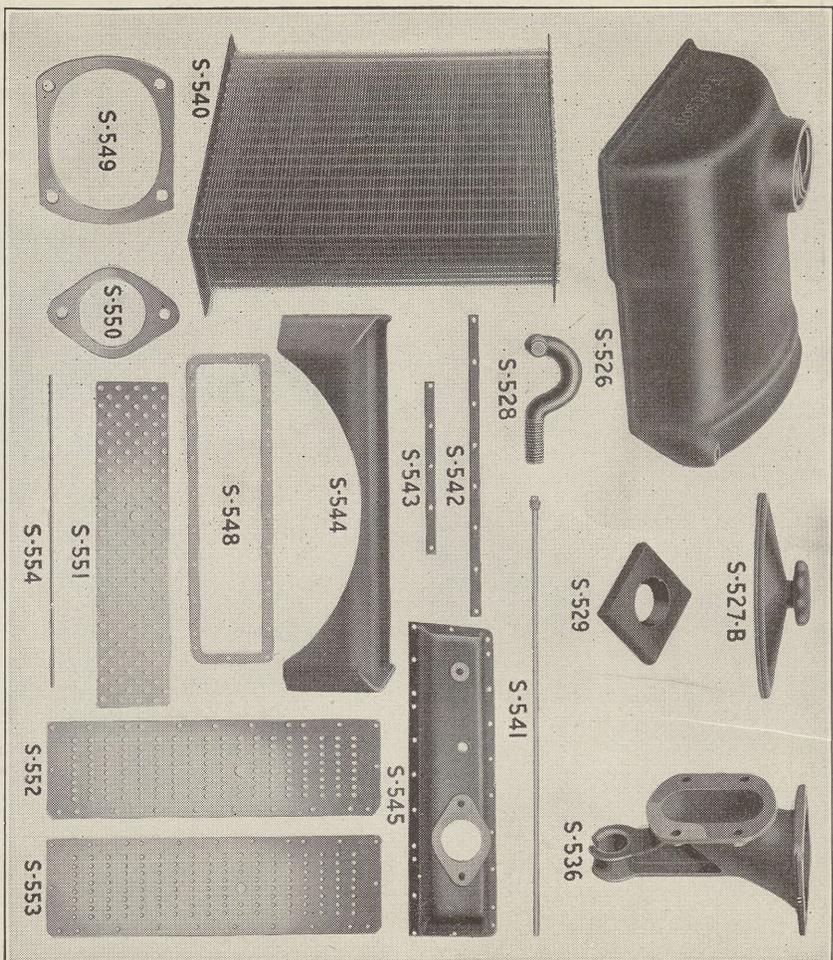


Catalog No.	Name	Specifications	List	Factory No.	Year	Unit
-------------	------	----------------	------	-------------	------	------

FAN—Continued

S885	Fan drive pulley pin	Steel. $\frac{1}{2}$ " x $\frac{11}{16}$ " x 20 thds.	\$ 0 05	F1575	1917-27	1
S886	Fan screw	$\frac{1}{4}$ " x $\frac{11}{16}$ " x 20 thds.	05	F2438	1917-27	4
S889	Fan ball bearing	$\frac{11}{16}$ " inside dia., 1 $\frac{1}{8}$ " outside dia.	1 60	F1527	1917-27	2
S590	Fan washer	Steel	05	F1496	1917-27	1
S591	Fan belt	Special fabric, 1 $\frac{1}{8}$ " x $\frac{3}{8}$ " thick	60	F1467	1917-27	1

HOLLEY VAPORIZER

S601	Mixer chamber assembly		7 00	F234-1R	1917-21	1
S602	Mixing chamber assembly		4 50	F1431	1922-25	1
S603	Mixer chamber	Cast iron	3 00	F234-2R	1917-21	1
S604	Mixing chamber	Steel	2 50	F14358	1922-25	1
S605	Mixing chamber cover	Steel	20	F10797R	1917-21	1
S606	Mixing chamber cover screw	(Order S-628B)	30	F14373R	1922-25	1
S607	Mixing chamber to manifold cap screw	(Old No. 604B)	05	F15091AR	1917-25	1
S608	Mixer chamber gasket	Copper, asbestos	05	F221-58R	1917-25	1
S609	AIR VALVE	Brass	50	F220-60R	1917-25	1
S610	Air valve guide	Die casting	30	F10850AR	1917-25	1
S611	Throat choke tube	Die casting	25	F221-68R	1917-25	1
S612	Throat retainer screw	Steel	10	F220-65R	1917-25	1
S613	Shifter valve	Steel	50	F234-4R	1917-21	1
S614	Shifter valve button	Cast iron	05	F234-9R	1917-21	1
S615	Shifter valve plunger	Cast iron	03	F220-78R	1917-21	1
S616	Shifter valve spring	Cast iron	20	F234-7R	1917-21	1
S617	STRANGLING THROTTLE LEVER AND VALVE ASSEMBLY		50	F234-12R	1917-25	1

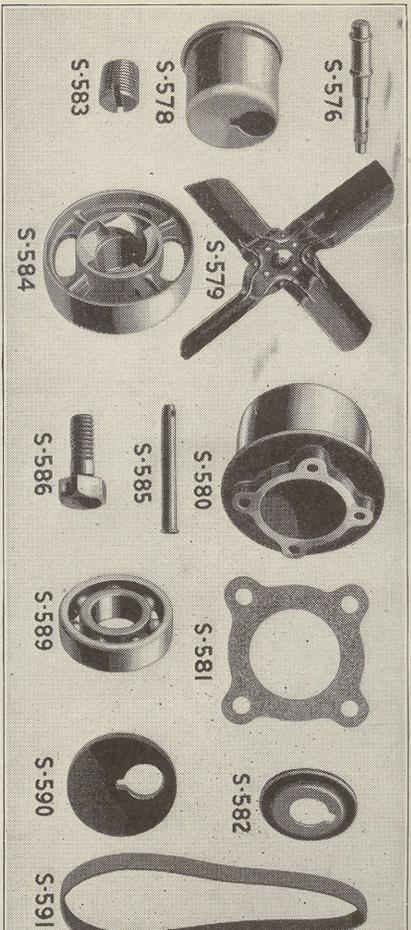

Catalog No.	Name	Specifications	List	Factory No.	Year	Unit
-------------	------	----------------	------	-------------	------	------

HOLLEY VAPORIZER—Continued


S616B	Strangling throttle lever and rod assembly	Steel	\$ 0 25	F14408AR	1922-25	1
S617	Strangling throttle plate	Steel	03	F220-93R	1917-25	1
S618	Strangling throttle plate pin	Brass	01	T6325A	1917-25	1
S619	Throttle lever assembly	Steel	60	F234-11R	1917-21	1
S620	Throttle plate	Steel	05	F1220AR	1917-21	1
S620B	Throttle plate pin	Order S-618	05	F143659AR	1922-25	1
S622	Vapor tube pack nut	Steel	10	F221-52	1917-25	1
S623B	Vapor tube packing	Brass	10	F14208R	1917-25	1
S623C	Vapor tube bushing	Steel	05	F14207R	1917-25	1
S624	Float chamber assembly	Steel, $\frac{1}{2}$ " x $\frac{1}{2}$ " x 32 thds.	5 00	F234-75R	1917-21	1
S624B	Float chamber cover screw	Steel, $\frac{1}{4}$ " x $\frac{1}{2}$ " x 20 thds.	4 50	F15002AR	1922-25	1
S625	Float chamber	Cast iron	2 25	F234-17R	1917-21	1
S626	Float chamber cover	Steel	2 25	F15920R	1922-25	1
S626B	Float chamber cover screw	Cast iron	15	F15268R	1922-25	1
S627	Float chamber cover spring	Steel	50	F15268R	1922-25	1
S628	Float chamber cover	Steel	15	F15268R	1917-21	1
S628B	Float chamber cover screw	Steel, $\frac{1}{4}$ " x $\frac{1}{2}$ " x 32 thds.	05	F234-59R	1917-21	1
S629	Float chamber cover spacer	Steel	03	F234-40R	1917-21	1
S630	Float chamber Welch plug	Steel stamping	05	F15524	1922-25	1
S631	Float	Copper	30	F234-29R	1917-21	1
S631B	Float	Copper	30	F15262AR	1922-25	1
S632	Float lever and clamp screw	Brass	15	F15205	1922-25	1
S632B	Float lever and screw	Brass	15	F15205	1922-25	1
S633	Float lever pin	Brass	15	F234-19R	1917-21	1
S633B	Float valve lever pin	Brass	03	F234-36R	1922-25	1
S634	Float valve	Brass	40	F234-83R	1917-21	1
S634B	Float valve seal	(Use T6220)	15	T6220-43R	1917-21	1
S635	Float valve seal	Brass	15	F234-49R	1917-21	1
S635B	Float valve seal	Brass	20	F15577	1922-25	1
S636	Adjusting needle, point and valve assembly	Brass	60	F234-80	1917-21	1
S637	Adjusting needle, spring	Steel	05	F234-81R	1917-21	1
S638	Adjusting needle, bushing	Steel	15	F234-23R	1917-21	1
S639	Adjusting needle point assembly	Brass	15	F234-23R	1917-21	1
S639B	Adjusting needle head and block	Brass	40	F234-56R	1917-21	1
S640	Adjusting needle, pilot	Brass	45	F14914AR	1922-25	1
S641	Adjusting needle, pilot	Brass	40	F234-67	1917-25	1
S642	High hand for speed nozzle	Copper, asbestos	20	F10849R	1917-21	1
S643	Nozzle gasket	Steel	03	F220-47R	1917-21	1
S644	Nozzle plug	Steel	15	F220-43R	1917-21	1
S645	Nozzle plug gasket	Copper, asbestos	03	F220-44R	1917-21	1
S646	Pipe plug, $\frac{1}{4}$ "	Steel (Order S583)	10	F16303	1917-25	1
S647	Float chamber gasket	Steel (Order S583)	03	F234-27R	1917-21	1
S648	MANIFOLD & STUD ASSY		7 50	F234-76R	1917-21	1
S648B	Manifold and stud assembly	Steel	6 00	F14434AR	1922-25	1
S649B	Manifold stud	Steel	1 50	F15001	1917-25	1
S650	Manifold outlet and studs	(Order S649B)	1 50	F234-71R	1917-21	1
S651	Manifold outlet stud nut	Brass	05	F10999	1917-25	1
S652	Vaporizer to cyl stud nut	(Use T6549)	05	T6549	1917-25	1
S653	Vaporizer to C.I. stud nut	Steel	05	T78	1917-25	1
S654	Manifold gland	Steel	02	F1044	1917-25	1
S655	Manifold lock washer	$\frac{3}{8}$ " std.	03	F1621	1917-25	1
S657	Manifold gasket	Copper, asbestos	03	F1043	1917-25	1

KINGSTON VAPORIZER—Continued

S1020B	Low speed needle, head and stem assy.	1/8" - 20 thd.	\$ 0 90	F1511B	1924-26
S1021	Low speed tube plug nut.	1/8" - 20 thd.	15	F1438R	1924-26
S1022	Low speed binder post		10	F1269R	1924
S1023	High speed needle and head assy.		40	F14914B	1924
S1024	High speed needle stem binder post		20	F1338AR	1924
S1024B	High speed needle stem binder post		20	F1338B	1924-26
S1026	High speed needle stem binder post nut	(Order S1022)			
S1026	Fuel cup		50	F1430	1924-26
S1027	Fuel cup gasket—upper		03	F1018	1924-26
S1028	Fuel cup gasket—lower	(Same as T6157B)	05	T6367F	1924-26
S1029	Fuel cup clamp nut	(Same as T6169B)	10	T4810D	1924-26
S1030	Fuel cup assy.		50	F15272B	1924-26
S1031	Air valve		40	F1254	1924-26
S1032	Air valve shaft and plug assy.		20	F1250	1924-26
S1033	Air valve stop assy.		15	F1495	1924-26
S1034	Drain valve assy.	(Same as T6169)	10	T6329B	1924-26
S1035	Drain valve body clamp nut	(Same as T6162)	05	T6395	1924-26
S1036	Drain valve nut	(Same as T6151)	15	T6328C	1924-26
S1038	Gasoline inlet elbow	(Order S189)			
S1039	Fuel valve seat		20	T6321DR	1924-26
S1040	Fuel valve needle assy.		30	T6324CR	1924-26
S1041	Fuel valve lever pin		03	F15313B	1924-26
S1042	Venturi		1	F1425	1924-26
S1043	Intake manifold floater		45	F10850B	1924-26
S1044	Screw for fastening venturi		10	F1463	1924-26
S1044	Carburetor connection to manifold gasket		05	F1427	1924-26
S1045	Carburetor connection to manifold cap screw		05	F1493	1924-26
S1046	Carburetor connection to carburetor cap screw		03	F1042	1924-26
S1047	Carburetor connection to carburetor cap screw nut	(Order S672)			
S1048	Carburetor connection to carburetor gasket		03	F881	1924-26
S1049	Strainer body		20	F1442R	1924
S1050	Strainer gasket		03	F1543R	1924
S1051	Strainer post		15	F1530R	1924
S1052	Strainer screen		05	F1318R	1924
S1053	Strainer cap		10	F1317R	1924
S1054	Strainer cap gasket		02	F1316R	1924
S1055	Heat valve lever		10	F1504	1924-26
S1056	Heat valve disc		05	F1505	1924-26
S1057	Heat valve staple		03	F1506	1924-26
S1058	Venturi lock screw gasket		02	F1507	1924-26

HOLLEY VAPORIZER

S1100	VAPORIZER COMPLETE		15 00	F1175C	1925-27
S1101B	FLOAT CHAMBER ASSY.		5 00	F15002C	1925-27
S1102B	Fuel passage plug and bracket assy.	(Order S687)	3 00	F19101B	1925-27
S1104B	Float chamber cover and drain valve plug and handle assy.	(Order S645)	65	F19102B	1925-27
S1106	Adjusting needle assy.	(Order S634B)	45	F14916B	1925-27
S1107	Adjusting needle seat assy.		15	F18806	1925-27
S1108	Adjusting needle seat assy.	(Same as T6205)	30	F15272C	1925-27
S1109	Adj. needle seat plug gasket	(Order S633B)	02	T6367B	1925-27
S1110	Float lever pin	(Order S628B)	10	F17641	1925-27
S1111	Float chamber cover screw	(Order S635B)	03	F18690	1925-27
S1112	Float valve seat		10	F1616B	1925-27
S1113	Float chamber cover gasket		10	F18804	1925-27
S1114	Adjusting needle bushing		5	F14431B	1925-27
S1115	Adjusting needle seat		30	F14408C	1925-27
S1116	MIXER CHAMBER ASSY.		10	F17641	1925-27
S1117	Strangling lever and rod assy.	(Order S698)	10	F14462	1925-27
S1118	Throttle lever and rod assy.	(Order S684)	01	F12589	1925-27
S1119	Mixer chamber primer plate pin	(Order S695)	10	F17637	1925-27
S1120	Throttle plate screw	(Order S699)	50	F17639	1925-27
S1121	Throttle stop lever plate		05	F17639	1925-27
S1122	Throttle stop lever plate stud				
S1123	Air valve				
S1124	Air valve shaft retainer screw				
S1125	Air valve				
S1126	Air valve				
S1127	Air valve shaft retainer screw				

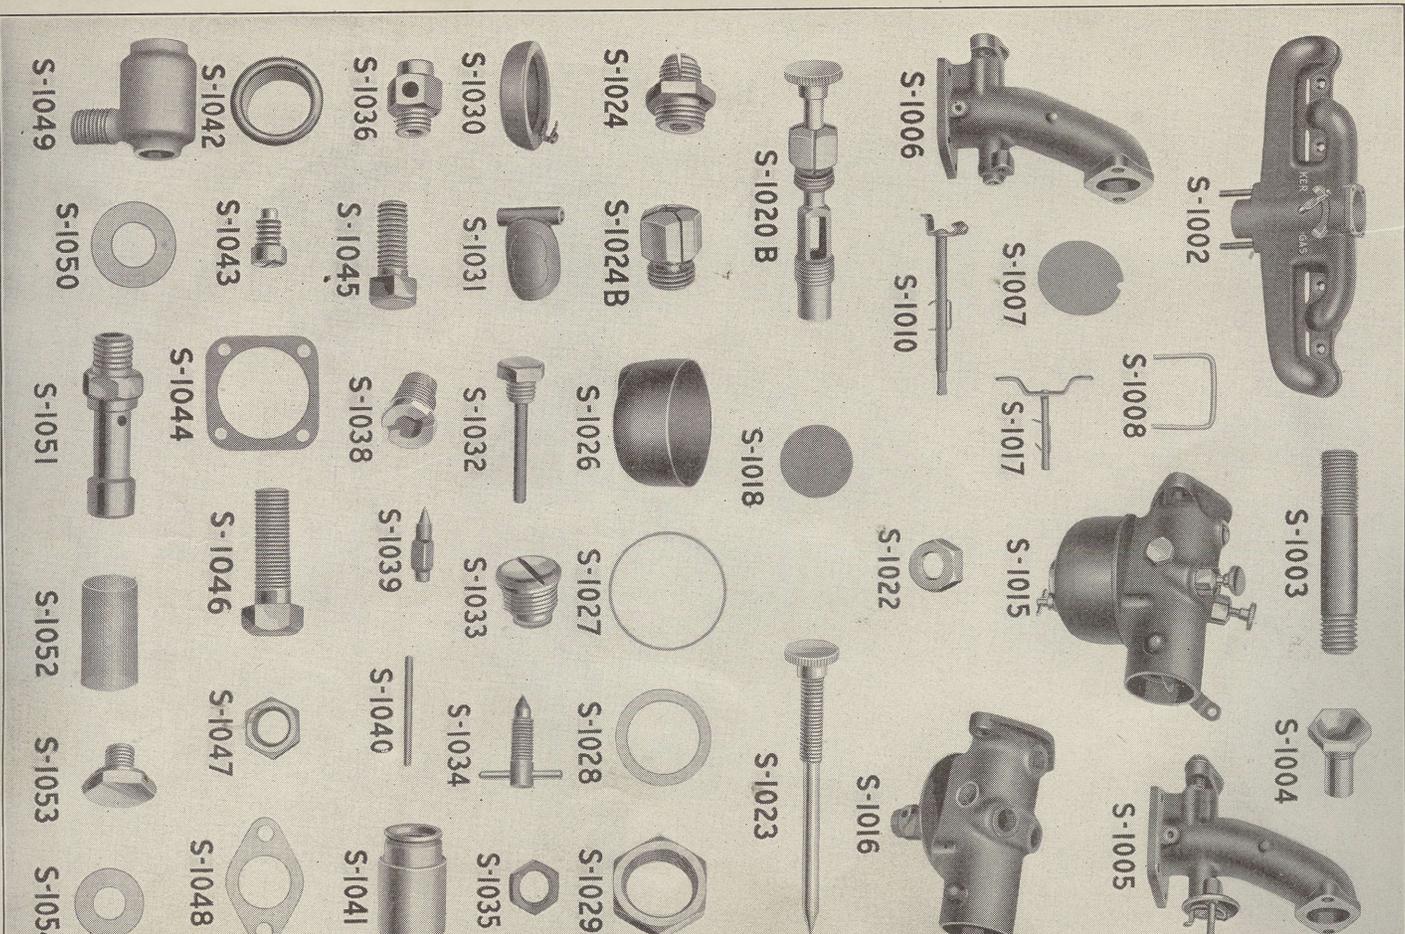

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S-1100	Mixer chamber				
S-1101 B	Mixer chamber to manifold gasket				
S-1102 B	Mixer chamber to manifold screw				
S-1103	Mixer chamber to manifold gasket				
S-1104 B	Mixer chamber to manifold gasket				
S-1106	Throttle stop lever and rod				
S-1107	Throttle stop lever and rod				
S-1108	Throttle stop lever and rod				
S-1109	Throttle stop lever and rod				
S-1110	Throttle stop lever and rod				
S-1111	Throttle stop lever and rod				
S-1112	Throttle stop lever and rod				
S-1113	Throttle stop lever and rod				
S-1114	Throttle stop lever and rod				
S-1115	Throttle stop lever and rod				
S-1117	Throttle stop lever and rod				
S-1118	Throttle stop lever and rod				
S-1119	Throttle stop lever and rod				
S-1120	Throttle stop lever and rod				
S-1121	Throttle stop lever and rod				
S-1122	Throttle stop lever and rod				
S-1123	Throttle stop lever and rod				
S-1124	Throttle stop lever and rod				
S-1125	Throttle stop lever and rod				
S-1126	Throttle stop lever and rod				
S-1127	Throttle stop lever and rod				
S-1128	Throttle stop lever and rod				
S-1129	Throttle stop lever and rod				
S-1130	Throttle stop lever and rod				
S-1131	Throttle stop lever and rod				
S-1132	Throttle stop lever and rod				
S-1133	Throttle stop lever and rod				
S-1134	Throttle stop lever and rod				
S-1136	Throttle stop lever and rod				
S-1137	Throttle stop lever and rod				
S-1142	Throttle stop lever and rod				
S-1143	Throttle stop lever and rod				
S-1144	Throttle stop lever and rod				
S-1145	Throttle stop lever and rod				
S-1146	Throttle stop lever and rod				
S-1147	Throttle stop lever and rod				
S-1148	Throttle stop lever and rod				
S-1149	Throttle stop lever and rod				
S-1150	Throttle stop lever and rod				
S-1151	Throttle stop lever and rod				
S-1152	Throttle stop lever and rod				

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
-------------	------	----------------	------------------	------	------






HOLLEY VAPORIZER—Continued

S1128	Mixer chamber plug				
S1129	Mixer chamber plug				
S1130	Strangling throttle lever stop screw				
S1131	Throttle plate				
S1132	Strangling throttle plate				
S1133	Governor hange cover				
S1136	MANIFOLD AND STUD ASSEMBLY				
S1137	Mixer to manifold screw lock washer				
S1138	Stud nut				
S1139	Vapor outlet tube				
S1140	Vapor outlet tube nut				
S1141	Manifold vaporizing plate bushing				
S1142	Manifold cover				

Catalog No.	Name	Specifications	List Factory No.	Year	Unit
S1143	Floar chamber screw				
S1144	Fuel jet				
S1145	Mixer chamber to manifold screw				
S1146	Mixer chamber to manifold gasket				
S1147	Manifold cover plate bushing				
S1148	Manifold vaporizing plate				
S1149	Manifold cover plate				
S1150	Primary air tube				
S1151	Floar chamber gasket				
S1152	Manifold cover stud				
S1201	Throttle stop lever and rod				
S1202	Throttle stop lever and rod				
S1203	Throttle stop lever and rod				
S1204	Throttle stop lever and rod				
S1205	Throttle stop lever and rod				
S1206	Throttle stop lever and rod				
S1209	Throttle stop lever and rod				
S1210	Throttle stop lever and rod				
S1211	Throttle stop lever and rod				
S1212	Throttle stop lever and rod				
S1214	Throttle stop lever and rod				
S1215	Throttle stop lever and rod				
S1222	Mixing chamber to manifold gasket				
S1224	Initial air inlet tube				
S1225	Vaporizer outlet pipe				
S1226	Manifold cover assy.				
S1227	Fuel jet				
S1228	Manifold cover gasket				
S1229	Manifold cover cap screw				
S1230	Floar chamber assy.				
S1231	Floar chamber				
S1232	Adj. needle bushing				
S1233	Adj. needle assy.				
S1234	Drain valve				
S1235	Floar chamber cover and bracket assy.				
S1236	Floar chamber cover screw				
S1237	Floar chamber cover lock washer				
S1238	Floar lever pin				
S1239	Floar lever pin				
S1240	Floar valve stem				
S1241	Floar valve				

KINGSTON VAPORIZER

S1200	Vaporizer assy.				
S1201	Manifold and stud assy.				
S1204	Mixing chamber assy.				
S1205	Mixing chamber				
S1206	Choke throttle lever and rod assy.				
S1207	Choke throttle disc				
S1209	Air valve assembly				
S1210	Air valve shaft assembly				
S1211	Air valve shaft plug				
S1212	Mixing chamber primer plug				
S1214	Throttle stop lever and rod assy.				
S1215	Throttle disc				
S1222	Throttle lever stop screw				
S1224	Initial air inlet tube				
S1225	Vaporizer outlet pipe				
S1226	Manifold cover assy.				
S1227	Fuel jet				
S1228	Manifold cover gasket				
S1229	Manifold cover cap screw				
S1230	Floar chamber assy.				
S1231	Floar chamber				
S1232	Adj. needle bushing				
S1233	Adj. needle assy.				
S1234	Drain valve				
S1235	Floar chamber cover and bracket assy.				
S1236	Floar chamber cover screw				
S1237	Floar chamber cover lock washer				
S1238	Floar lever pin				
S1239	Floar lever pin				
S1240	Floar valve stem				
S1241	Floar valve				

  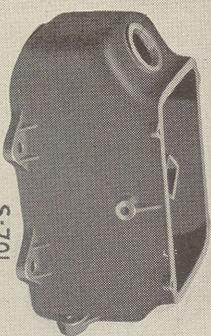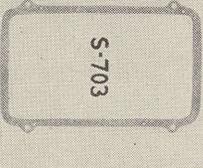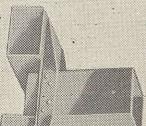Catalog No.	Name	Specifications	List Factory No.	Year Unit
S-701				
S-702				
S-703				
S-704				
S-706				
S-707				
S-708				
S-709				
S-710-B				
S-710-C				
S-711				
S-717				




AIR WASHER

S700B	AIR WASHER ASSY.	(Used with S189)	\$12.00	F1994B	1917-27
S701	Air washer bowl	Cast iron	6.00	F1879	1917-27
S702	Air washer cover	Cast iron	1.60	F1880	1917-27
S703	Air washer cover gasket	Vulcanoid or cork	0.05	F2196	1917-27
S704	Air washer filler plate	Brass	35	F2546	1917-27
S706	Air washer drain plug	(Order S254)			
S707	Air washer tube—small	Die casting (Order S254)			
S708	Air washer tube—large	Cast iron	1.20	F1883	1917-27
S709	Air washer tube felt collar	Copper, asbestos	0.03	F1883B	1917-27
S709B	Air washer tube—small	Copper, asbestos	0.03	F1885	1917-27
S710	Air washer tube—large	Vulcanoid	0.03	F2030	1917-27
S710B	Air washer tube—large	Sheet iron	25	F1882AR	1917-27
S710C	Air washer tube	Sheet iron	20	F1882B	1917-27
S710D	Air washer tube	Sheet iron	25	F1881B	1917-27
S710E	Air washer tube	(Kingston)	25	F1881C	1917-27
S710F	Air washer tube	(Used with S1100 & S1200)	25	F1881D	1917-27
S711	Air washer tube felt collar	Felt	05	F2010B	1917-27
S714	Air washer cap screw	1/4" x 1" x 28 thds. (Order S538)			
S715	Air washer cap screw	1/4" x 28 thds. (Order S404)			
S716	Air washer cap screw	1/4" x 3/4" x 20 thds. (Order S182)			
S717	Air washer cap screw	1/2" x 1 1/4" x 13 thds. (Order S182)			
S718	Air washer cap screw	1/2" x 2 1/8" x 12 thds. Assembly			
S719	Air washer cap screw	(Same as S3019B)			
S720	Air washer cap screw	Rubber			

SPARK COIL








S725B	COIL		11.00	F2012B	1917-27
S726B	Coil box with cover		4.00	F2360B	1917-27
S727	Coil box cover	(Use T5004)	30	F7910	1917-18
S728	Coil box cover		70	F355AR	1919-24
S728B	COIL BOX COVER ASSY.	(Same as T5004B)	50	F7910B	1924-27
S729	Coil box terminal sleeve	Porcelain	03	F1914R	1917-24
S730	Coil switch assembly	(Same as T5010)	80	F5873R	1917-18
S731	Coil switch lever	(Same as T5006)	05	F5815A	1917-18
S732	Coil unit	(Same as T5007)	1.50	F5845	1917-27
S733	Coil vibrator bridge with contact point	(Same as T5009)	08	F6702	1917-27
S734B	Coil vibrator and lower bridge assembly	(Same as T5008B)	06	F6737B	1917-27
S737	Coil box stud nut		05	F2921	1917-27
S738	Coil box cap screw	1/4" x 3/4" x 20 thds. (Order S714)	03	F2922	1917-27

  †Used on Tractors without breather on dash. **Used with Tractors having breather on dash.
 ††Beginning with Tractor 213,300. *Used on Tractors up to No. 31,807.
 †††For use on Air Washer when threads are worn so S254 cannot be used.

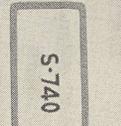Catalog No.	Name	Specifications	List Factory No.	Year Unit
S-726-B				
S-731				
S-733				
S-734-B				
S-728-B				
S-740				
S-730				
S-748				
S-732				
S-746				
S-749				

WIRING

S750B	Spark plug wire	(Cyls. No. 1 & 2)	10	F1211	1917-26
S751B	Spark plug wire	(Nos. 3 and 4 cyl.) Use T5027	10	T1366R	1917-26
S751D	Spark plug wire	(Cyls. No. 2 & 3) (Order S750B)	10	F1209	1927
S752	Magneto to coil wire	(Cyls. No. 1 & 4) Use with S725	10	F1215R	1917-24
S753	Magneto to coil wire	(Order S751D)	50	F1214B	1917-26
S753B	Communtator wire assembly	4-way cable	55	F1214B	1927
S754	Communtator cable support	Steel	03	F2108R	1917-26
S755	Magneto to switch wire assy.		15	F1216	1924-27
S756	Wiring clamp		20	F135	1927
S757	Wiring clamp screw		03	F2285	1927
S757B	Wiring clamp screw washer	(Order S675)			

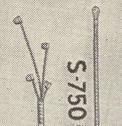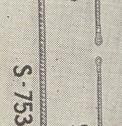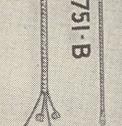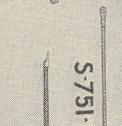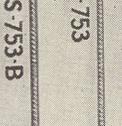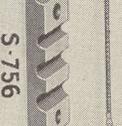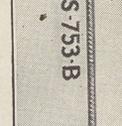S-750-B		S-751-B		S-751-D		S-752	
S-753		S-755		S-754		S-756	
S-753-B							


SEAT

S775	SEAT	Steel	1.00	F1743	1917-27
S776	Seat spring	Steel	1.00	F1633	1917-27
S777	Seat spring bolt	1/4" x 1 1/2" x 13	03	F1624	1917-27
S777B	Seat spring bolt nut	(Same as T1114B)	02	F1729	1917-27
S777C	Seat spring bolt lock washer	3/4" x 1 1/2" x 10	15	F1746	1917-27
S779	Seat spring cap screw	3/4" std.	02	F2191	1917-27
S780	Seat spring cap screw lock washer				

FOOT BRACKET

S790	FOOT BRACKET	Cast iron	1.25	F1749	1917-27
S791	Foot bracket gasket	Paper	01	F1900	1917-27
S792	Foot bracket cap screw	1/2" x 1 1/4" x 13 thds. (Order S182)			


*Used on Tractors up to No. 31,807.

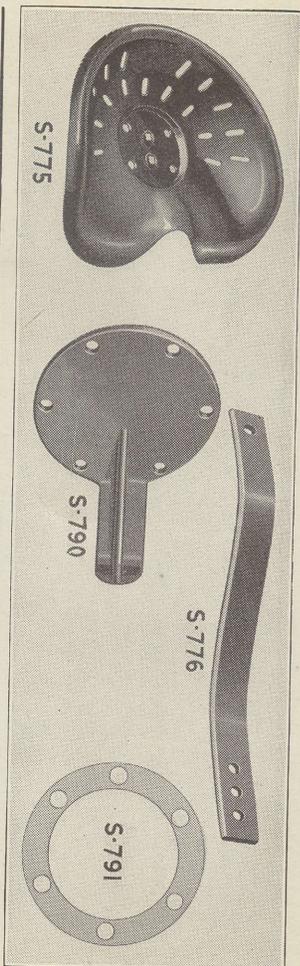

Catalog No.	Name	Specifications	List Factory No.	Year Unit
-------------	------	----------------	------------------	-----------

TOOLS

S800	Tool box assembly	1 1/2" x 1 1/2" x 13 thds.	Order S243	1917-27	1
	Tool box cap screw	1/2" x 1 1/2" x 13 thds.	Order S243	1917-27	1
	Tool box washer	8"	(Order S546)	1917-27	2
S803	Pliers	9"	F1903	1917-27	1
S804	Wescott wrench	8"	F1904	1917-27	1
S806	Combination spark plug and crankcase bolt wrench	(Same as T2335)	F1984	1917-27	1
S807	Wrench for 1 1/8" and 1/2" nut	Steel	T5893	1917-27	40
S808	Wrench for 1 1/8" cap screw	Steel	F2095	1917-27	20
S809	Wrench for 1 1/8" cap screw	Steel	F2372	1917-27	60
S810	Kear wheel bar	Steel	F2366	1917-27	75
S811	Front hub cap wrench	Steel	F2097	1917-27	1
S812B	Valve seat reamer	Steel	F2197	1917-27	1
			5Z459	1917-27	1

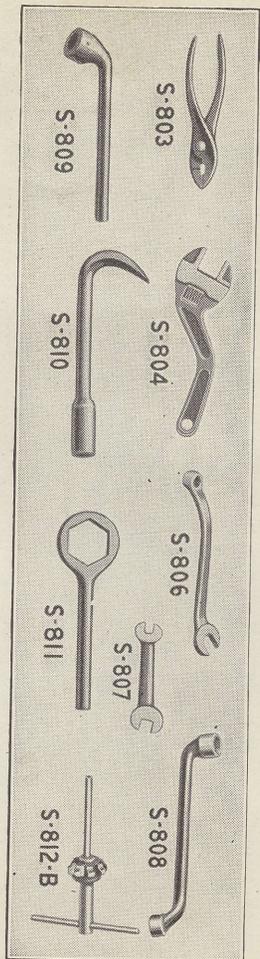

BELT PULLEY ATTACHMENT

PULLEY ATTACHMENT COMPLETE


S901	Pulley drive gear (and shaft)	\$22 00	F2451A	1917-27	
S902	Pulley drive gear housing	9 00	F1389	1917-27	
S903	Drive pulley assembly	4 00	F2429	1917-27	
S904	Pulley drive bushing	6 00	F3130A1	1917-27	
S907	Pulley drive packing assy.	85	F3131	1917-27	
		25	F3125	1924-27	
	Pulley drive gear nut	(Order S68)			
	Pulley drive gear washer	(Order S67)			
	Pulley drive gear bearing—outside	(Order S350)			
	Pulley drive gear bearing—inside	(Order S108)			

EXTENSION RIM

EXTENSION RIM ASSEMBLY COMPLETE

S910	Extension rim bolts, washers and spacers for attaching	15 00	F2450	1917-27	2
S910B	Extension rim assembly less bolts, nuts, washers and spacers	14 25	F2448	1917-27	2
S911	Extension rim cleat	25	F2512	17-27	10
S912	Extension rim bolt	3/8" x 1 1/2" x 20 thds.	(Order S157)	14	Per rim
S915	Extension rim spacer nut	1 1/8" x 20 thds.	(Order S157)	14	Per rim
S916	Extension rim cleat rivet	3/8" x 1 1/4" std.	F2513	17-27	14
			F634	17-27	20
				Per rim	

†Not subject to regular discount.

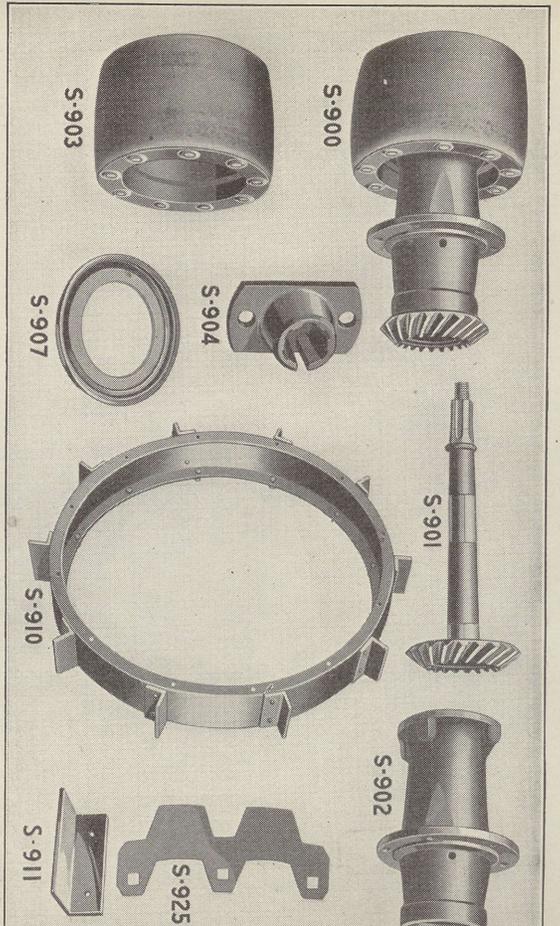


Catalog No.	Name	Specifications	List Factory No.	Year Unit
-------------	------	----------------	------------------	-----------

TRACTOR COVER

S920	Tractor cover	Canvas	\$ 3 50	F2187B	1917-27	1
------	---------------	--------	---------	--------	---------	---

GROUSER

S925	Grouser		60	F2297	1920-27	28
S926	Grouser bolt		05	F2095	1920-27	84
S927	Grouser bolt nut		02	F2096	1920-27	84

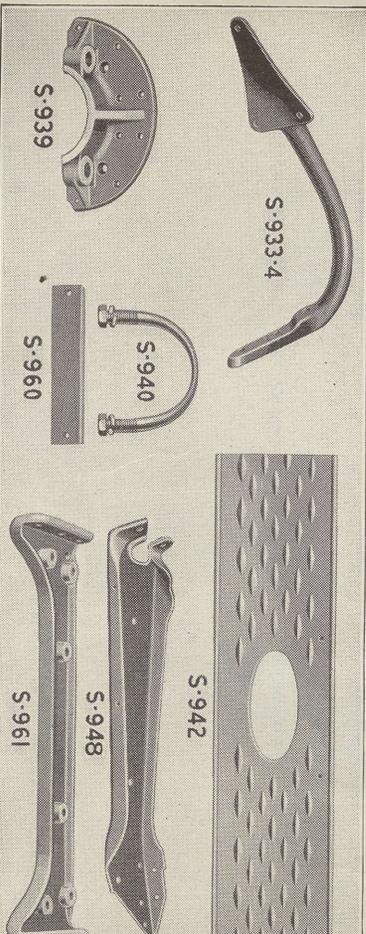

FENDER

S931B	Fender—right		120 00	F3000B	1924-27	1
S932B	Fender—left		120 00	F3001B	1924-27	1
S933	Fender iron—right	Steel	2 25	F3024	1924-27	1
S934	Fender iron—left	Steel	2 25	F3025	1924-27	1
S935	Fender iron to dash bolt—long	1/4" — 20 thds.	05	F3032	1924-27	2
	Fender iron to dash bolt—short			(Order S208)		
S938	Fender iron to dash bolt nut	(Order S157)				
S939	Fender axle bracket	(Same as T3078C)	1 00	T5636	1924-27	6
		Malleable iron		F3015	1924-27	2

†Not subject to regular discount.

Catalog No. Name Specifications List Factory No. Year Unit

FENDER—Continued

S940	Fender axle bracket clamp. Steel— $\frac{3}{4}$ "—16 thds.	\$ 0 40	F3018B, 1924-27	2
	Fender axle brkt. clamp nut. (Order S481)		1924-27	2
S942	Fender step	1 00	F3027AR, 1924-26	1
S942B	Fender step	1 00	F3027C, 1927	1
S943	Fender step bolt	03	T5510, 1924-27	2
S943B	Fender step to support bolt	03	T340, 1924-27	4
S944	Fender step bolt nut	02	T1363, 1924-27	4
S945	Fender step bolt lock washer	01	T7254, 1924-27	8
S947	Fender rear support—right	1 75	F3050BR, 1924-26	1
S947B	Fender rear support—left	1 75	F3050C, 1927	1
S948	Fender rear support—left	1 75	F3051BR, 1924-26	1
S948B	Fender rear support—left	1 75	F3051C, 1927	1
S949	Fender support bolt—long	02	F3029, 1924-27	8
S950	Fender support bolt—short	01	T1897, 1924-27	4
	Fender support bolt nut		1924-27	12
	Fender support bolt lock washer			12
†S960	Fender step block	05	F3028, 1924-26	2
†S961	Fender adapter	2 50	F2976R, 1917-24	1
†S962	Adapter cap screw—short	03	F582R, 1917-24	4
†	Adapter cap screw—long			2
†	Adapter cap screw washer			2
†	Adapter bolt			6
†	Adapter bolt nut			6
†	Adapter bolt lock washer			6

PAINT

M210	Gray paint— $\frac{1}{2}$ gal. can	2 00		
M210	Gray paint—5 gal. can	13 25		
M212	Red paint—1 qt. can	1 00		
M213	Black paint— $\frac{1}{2}$ pt. can	1 40		

COTTER PINS

Name	Price	Factory No.
* $\frac{1}{16}$ " x $\frac{3}{8}$ " cotter pin	\$0 05 per doz.	T7992
** $\frac{1}{16}$ " x $\frac{1}{2}$ " cotter pin	03	T 544
** $\frac{3}{32}$ " x $\frac{1}{2}$ " cotter pin	"	T 753
** $\frac{3}{32}$ " x $\frac{3}{4}$ " cotter pin	03	T 421
** $\frac{3}{32}$ " x $\frac{1}{2}$ " cotter pin	05	T 614
** $\frac{3}{8}$ " x $\frac{1}{2}$ " cotter pin	03	T 82
** $\frac{3}{8}$ " x $\frac{3}{4}$ " cotter pin	"	T1328
* $\frac{1}{8}$ " x $\frac{1}{2}$ " cotter pin	05	F1592
* $\frac{1}{8}$ " x $\frac{3}{4}$ " cotter pin	05	F1671
* $\frac{1}{8}$ " x $\frac{1}{2}$ " cotter pin	05	F1593
* $\frac{1}{8}$ " x $\frac{3}{4}$ " cotter pin	10	F2475R

†Not subject to regular discounts.

††Used when installing fenders on Tractors without breather on dash.

*#0.25 per gross—0.75 per thousand.

**#0.20 per gross—0.30 per thousand.

