

**Fordson**

TRADE MARK

**TRACTOR**

**MANUAL**

AND

**PARTS PRICE**

**LIST**

**HENRY FORD & SON, Inc.**  
DEARBORN,  
MICH.

Copyright, 1917  
HENRY FORD & SON  
Dearborn, Mich.  
U. S. A.

**Fordson**  
TRADE MARK

**TRACTOR**

*Manual  
and  
Parts Price  
List*

Price 25 cents


*Henry Ford & Son, Inc.  
Dearborn, Mich., U.S.A.  
Factories:  
Dearborn, Mich., U.S.A.  
Cork, Ireland.*

# Fordson Tractor

PRICE LIST OF PARTS

EFFECTIVE JULY 1st, 1918

*Instructions for  
Ordering Parts*

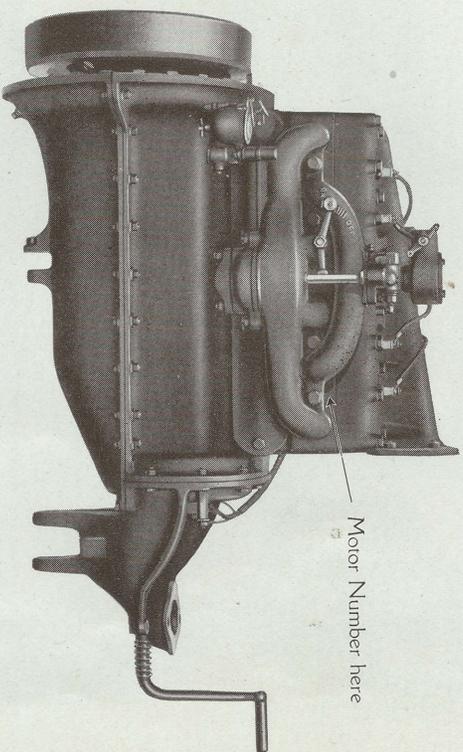

Motor Number here

1. Always give number of Tractor; it is stamped on the motor on the right-hand side. (See Plate above.)
2. Always give number and name of each part ordered.
3. All prices net f. o. b. Dearborn, Michigan, U. S. A.
4. Specify whether shipments are to be forwarded by mail, express or freight.
5. Orders for parts should be written separately from correspondence pertaining to other matters.
6. Address all orders for parts to Service Department.

**HENRY FORD & SON, Inc.**

Dearborn, Michigan, U. S. A.

*Factories*

DEARBORN, MICH., U. S. A.

CORK, IRELAND

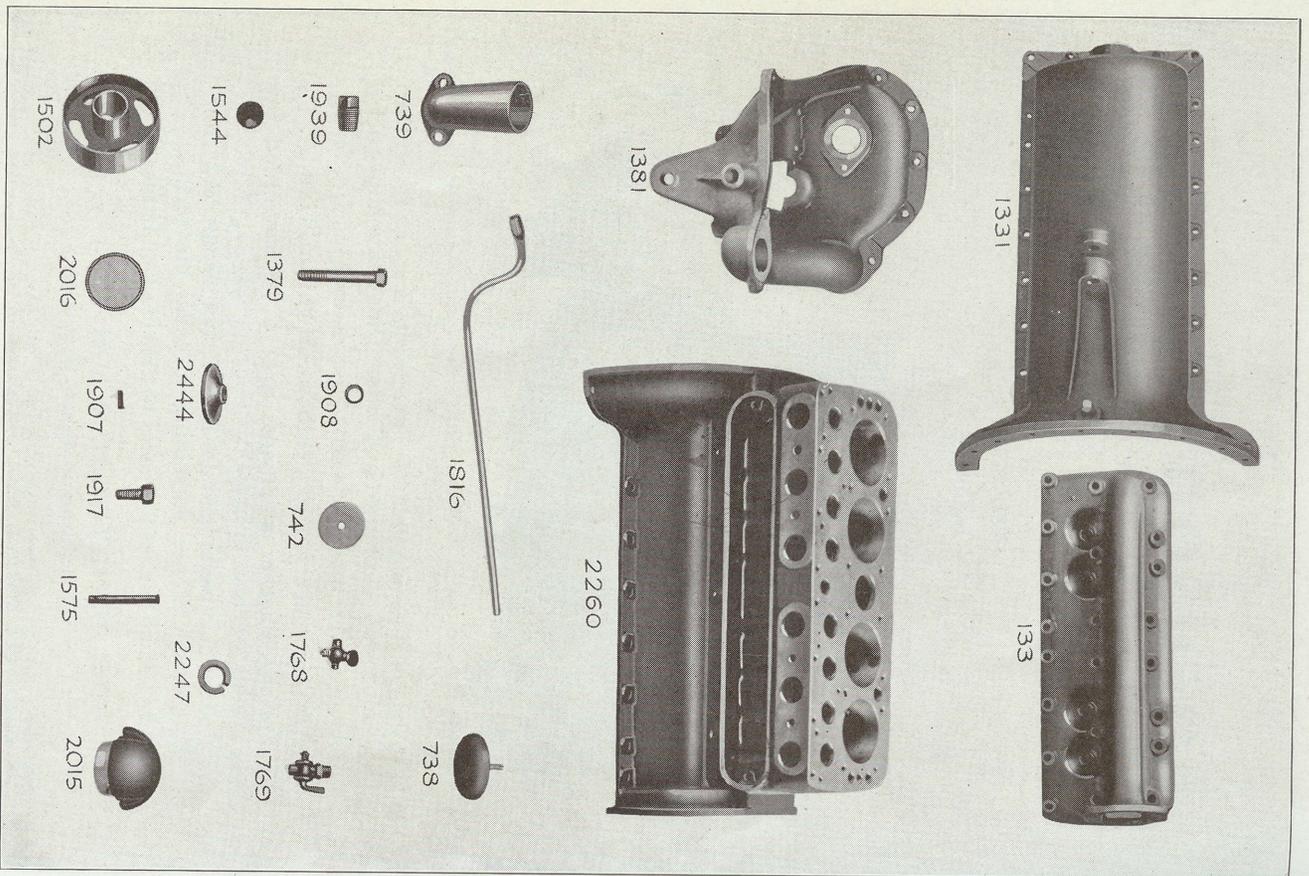


Plate No. 50

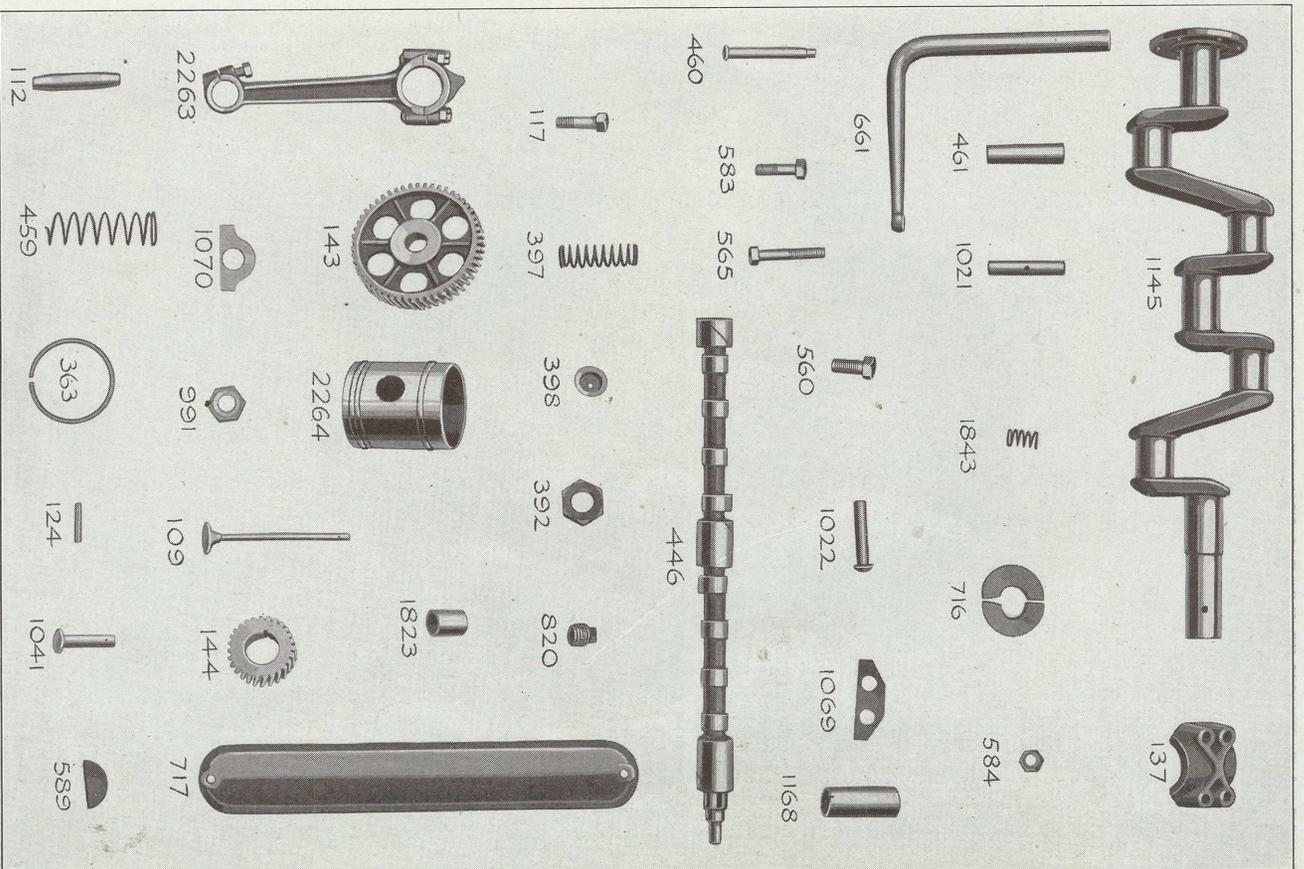


Plate No. 51

Part No.	Name of Part	Plate No.	Specifications	Price	No. Req. per Tractor	Mating Weight
<b>MOTOR</b>						
<b>*2260 CYLINDER ASSEMBLY</b>						
133	Cylinder Head	50	Cast Iron	\$60 00	1	195 lb.
1379	Cylinder Head Cap Screw	50	1/4" x 3 3/8" x 13 thds.	15 00	22	52 lb.
1544	Cylinder Plug	50	Steel 1 1/4" diam.	05 00	1	4.02
1816	Cylinder Oil Pipe	50	Steel	05 00	1	7.02
1381	Cylinder Front Cover	50	Cast Iron	12 00	1	4.5 lb.
583	Cylinder Front Cover Bolt	51	1/2" x 1 1/2" x 20 thds.	05 00	3	2.02
584	Cylinder Front Cover Nut	51	1/2" x 20 thds.	05 00	3	2.02
1769	Cylinder Front Cover Drain Cock	50	Brass and Mall. Iron	60 00	1	7.02
716	Cylinder Front Cover Felt	51	Felt	10 00	1 Pr.	7.02
560	Cylinder Front Cover Cap Screw	51	1/2" x 1 1/4" x 13 thds.	05 00	10	2.02
2247	Lock Washer	50	1/2" x 13 thds.	05 00	3	2.02
2203	Cylinder Front Cover Plug	50	1/2" Std. 1/2 x 13 thds.	05 00	2	2.02
1331	CRANK CASE	50	Cast Iron	14 00	1	62 lb.
583	Crank Case Bolt	51	1/4" x 1 1/2" x 20 thds.	05 00	18	1.02
584	Crank Case Nut	51	1/4" x 20 thds.	05 00	18	1.02
1768	Crank Case Pet Cook	50	Brass	20 00	2	2.02
2444	Crank Case Plug	50	Steel 1 1/2" diameter	05 00	1	1.02
820	Crank Case Pipe Plug	51	1/8" Pipe Plug	05 00	2	1.02
1939	Crank Case Pipe Plug	50	1/8" Pipe Plug	05 00	2	1.02
<b>1145 CRANK SHAFT</b>						
144	Crankschaft Time Gear	51	Steel	30 00	1	46 lb.
589	Crankschaft Key	51	No. A Woodruff Key	05 00	1	1 lb. 14.02
137	Crankschaft Bearing Cap Shim	51	Steel	3 00	3	2 lb. 6.02
1069	Crankschaft Bearing Cap Shim	51	Tin Plate	6 for 20	30	1.02
565	Crankschaft Bearing Cap Screw	51	Steel 1/4" x 3 1/4" x 12 thds	05 00	12	4.02
<b>*2264 PISTON COMPLETE</b>						
2264B	Piston Complete	51	0.025" Oversize	4 50	4	3 lb. 15.02
2264C	Piston Complete	51	0.032" Oversize	4 50	4	3 lb. 15.02
1168	Piston Pin	51	Steel 3/32 dia.	8 50	4	8.02
363B	Piston Ring	51	0.032" Oversize	25 00	12	2.02
363C	Piston Ring	51	0.032" Oversize	25 00	12	2.02
<b>§2263 CONNECTING ROD ASSEMBLY</b>						
1378	Connecting Rod Cap Bolt	51	1/2" x 2 1/4" x 20 thds.	6 00	4	3 lb. 10.02
1380	Connecting Rod Cap Bolt Nut	51	1/2" x 20 thds.	05 00	8	2.02
117	Connecting Rod Clamp Screw	51	1/8" x 1 1/8" x 20 thds.	10 00	4	4.02
1070	Connecting Rod Shim	51	Brass	6 for 05	24	1.02
<b>446 CAM SHAFT</b>						
589	Cam Shaft Key	51	Steel	15 00	1	13 lb.
443	Cam Shaft Gear	51	No. A Woodruff Key	05 00	1	1 lb. 14.02
392	Cam Shaft Nut—Large	51	Cast Iron	2 00	1	4 lb. 12.02
1907	Cam Shaft Timer Gear Rivet	50	Steel 1 1/2" x 1/8"	15 00	1	1.02
1908	Cam Shaft Timer Gear Cap	50	Steel 1/8" x 3/8"	05 00	1	1.02
991	Cam Shaft Nut—Small	51	Steel 1/8" x 13 thds.	10 00	1	1.02
2198	Cam Shaft Bushing	51	1/8" x 13 thds.	30 00	3	6.02
<b>1041 VALVE PUSH ROD</b>						
109	Valve (Intake and Exhaust)	51	Steel	25 00	8	5.02
1917	Valve Spring Cover Screw	50	Assembly 1/2" x 1 1/4" x 13 thds.	35 00	8	5.02
112	Valve Bushing	51	Cast Iron	05 00	2	2.02
397	Valve Spring Seat	51	3 1/2" long	35 00	8	3.02
398	Valve Spring Seat	51	Steel	10 00	8	3.02
124	Valve Spring Seat Pin	51	Steel	05 00	8	3.02
717	Valve Spring Cover	51	Steel	10 for 75	8	2 lb. 1.02
<b>1844 STARTING CRANK ASSEMBLY</b>						
661	Starting Crank	51	Steel	2 25	1	4 lb. 4.02
461	Starting Crank Handle	51	Cast Iron	1 00	1	3 lb. 4.02
460	Starting Crank Handle Pin	51	Steel 1" long	25 00	1	6.02
1843	Starting Crank Handle Spring	51	Steel	15 00	1	4.02
499	Starting Crank Spring	51	Steel	05 00	1	1.02
1823	Starting Crank Spacer	51	Steel	15 00	1	2.02
1021	Starting Pin	51	1/2" dia. x 2 3/4"	10 00	1	2.02
2015	Breather Cover Assembly	50	Wire Cloth	40 00	1	4.02
2016	Breather Strainer	50	Wire Cloth	10 00	1	1.02

When supplied as Spare Parts:  
 \*2260 Cylinder Assembly includes parts 137, 1069, 565, 112, 1544, 1535.  
 †2264 Piston Complete includes parts 1168, 363, 1466, 1466, 1466.  
 ‡2263 Connecting Rod Assembly includes 1378, 1380, 117, 1262, 1263 and 1070.

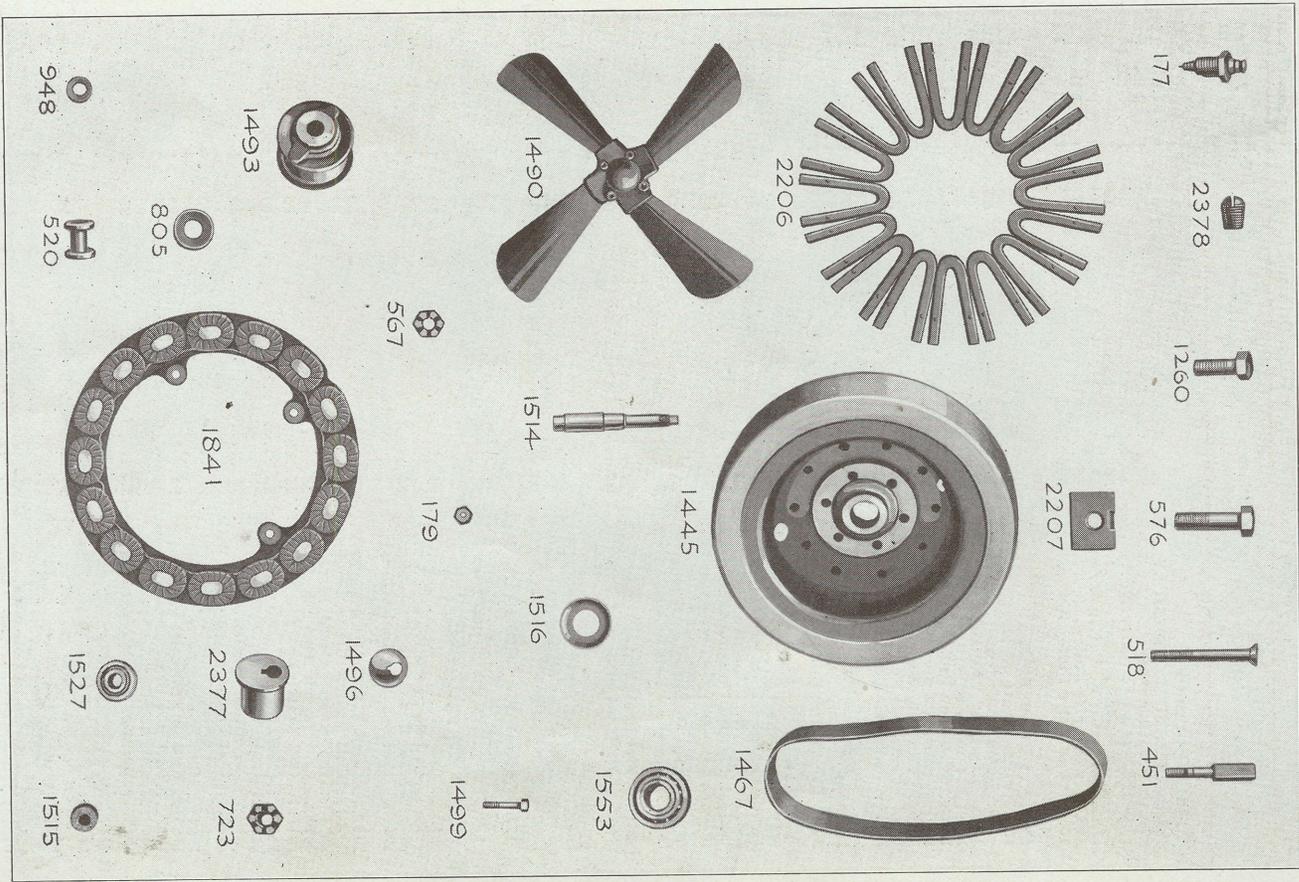


Plate No. 52

Part No.	Name of Part	Plate No.	Specifications	Price	No. Per Tractor	Req. Mailing Weight
<b>MOTOR—Continued</b>						
<b>BREATHER ASSEMBLY</b>						
†1845	Breather Body	50	Cast Iron	\$ 1 00	1	4 lb. 2 oz.
†738	Breather Cover	50	Cast Iron	60	1	3 lb. 8 oz.
†742	Breather Strainer	50	Cast Iron	20	1	10 oz.
†560	Breather Body Cap Screw	51	Cast Iron	10	1	10 oz.
1502	Fan Drive Pulley	50	Cast Iron	05	2	2 oz.
1575	Fan Drive Pulley Pin	50	Steel	1 75	1	3 lb. 5 oz.
<b>FAN ASSEMBLY</b>						
1846	FAN ASSEMBLY	52	Assembly	12 50	1	6 lb.
1514	Fan Shaft	52	Steel	1 25	1	12 oz.
723	Fan Shaft Nut	52	3/8" x 18 thds.	05	1	1 oz.
2377	Fan Shaft Retainer	52	Steel	75	1	5 oz.
1430	Fan Hub Pulley	52	Cast Iron	2 50	1	3 lb.
1493	Fan Hub Pulley	52	Cast Iron	1 05	1	2 lb.
1499	Fan Hub Screw	52	1/4" x 1 1/2" x 20 thds.	05	4	1 oz.
1515	Fan Felt Washer	52	Felt 1 1/2" dia.	05	1	1 oz.
1516	Fan Felt Retainer	52	Steel	05	1	1 oz.
1527	Fan Ball Bearing	52	1 1/2" inside dia. 1 1/2" outside dia. No. 204 R.T.	3 25	2	4 oz.
1496	Fan Washer	52	Steel	05	1	2 oz.
1467	Fan Belt	52	Cotton 2" x 3/4" thick	1 50	1	6 oz.
2378	Fan Hub Pulley Plug	52	1/8" Pipe Plug	05	1	2 oz.
<b>FLYWHEEL</b>						
1445	Flywheel	52	Cast Iron	12 00	1	112 lb.
2206	Flywheel Magnet	52	Steel	6 50	1	12 lb.
2207	Flywheel Magnet Clamp	52	Steel	05	16	1 oz.
318	Flywheel Magnet Clamp Screw	52	Brass	10	16	1 oz.
526	Flywheel Magnet Support	52	Aluminum	10	16	1 oz.
576	Flywheel Magnet Bolt	52	Steel	10	16	1 oz.
885	Flywheel Magnet Washer	52	Steel	1 1/2	2 for	1 oz.
1535	Flywheel Ball Bearing	52	1 1/2" inside dia. 2 1/2" outside dia. No. 306 R.T.	5 25	1	14 oz.
451	Flywheel Stud	52	Steel	40	6	7 oz.
567	Flywheel Stud Nut	52	Steel	2 1/2	1	14 oz.
<b>MAGNETO</b>						
1841	MAGNETO COIL ASSEMBLY	52	15 00	1	15 lb. 4 oz.	
948	Magneto Coil Support Shim	52	Tin plate	05	6 for	2 oz.
1260	Magneto Coil Support Screw	52	1/2" x 1 1/4" x 13 thds.	05	3	2 oz.
177	PRIMARY CONTACT ASSEMBLY	52	Assembly	75	1	2 oz.
179	Primary Insulating Lock Nut	52	No. 12 x 24 thds. .2 for	05	2	2 oz.
<b>IGNITION SYSTEM—COIL</b>						
2012	Coil	53	17 25	1	14 lb.	
1196	Coil Box with Cover	53	5 25	1	4 lb.	
2061	Coil Box Cover	53	1 25	1	11 oz.	
1914	Coil Box Terminal Sleeve	53	05	4	1 oz.	
2072	COIL SWITCH ASSEMBLY	53	80	1	5 oz.	
2073	Coil Switch Blade Moulding	53	20	1	2 oz.	
2074	Coil Switch Cover	53	Steel	15	1	12 oz.
2077	Coil Switch Base Assembly	53	60	1	2 oz.	
2017	Coil Switch Lever	53	Steel	05	1	3 oz.
1938	COIL UNIT	53	3 00	4	2 lb.	
2131	Coil Vibrator Bridge with Contact Point	53	25	4	1 oz.	
2120	Coil Vibrator Armature with Contact Point	53	15	4	1 oz.	
1954	Coil Box Support—R. H.	53	Malleable Iron	35	1	12 oz.
1955	Coil Box Support—L. H.	53	Malleable Iron	35	1	12 oz.
1917	Coil Box Bracket Cap Screw	53	1/2" x 1 1/4" x 13 thds.	05	2	1 oz.
608	Coil Box Cap Screw	53	1/4" x 1 1/2" x 20 thds.	05	4	1 oz.
564	Coil Box Cap Screw Nut	53	1/4" x 20 thds.	05	4	1 oz.
<b>IGNITION SYSTEM—WIRING</b>						
1210	SPARK PLUG WIRE Nos. 1 and 2 Cylinder	53	Stranded Wire	10	2	1 oz.
1212	Spark Plug Wire Nos. 3 and 4 Cylinder	53	Stranded Wire	10	2	1 oz.
1215	Magneto to Coil Wire	53	Stranded Wire	20	1	1 oz.
1214	Commutator Wire Assembly	53	4-way Cable	10	1	9 oz.
2108	Commutator Cable Support	53	Spring Steel	50	1	1 oz.
†Parts 1845, 738, 739, 742, 560, used on first 1000 Tractors only.						

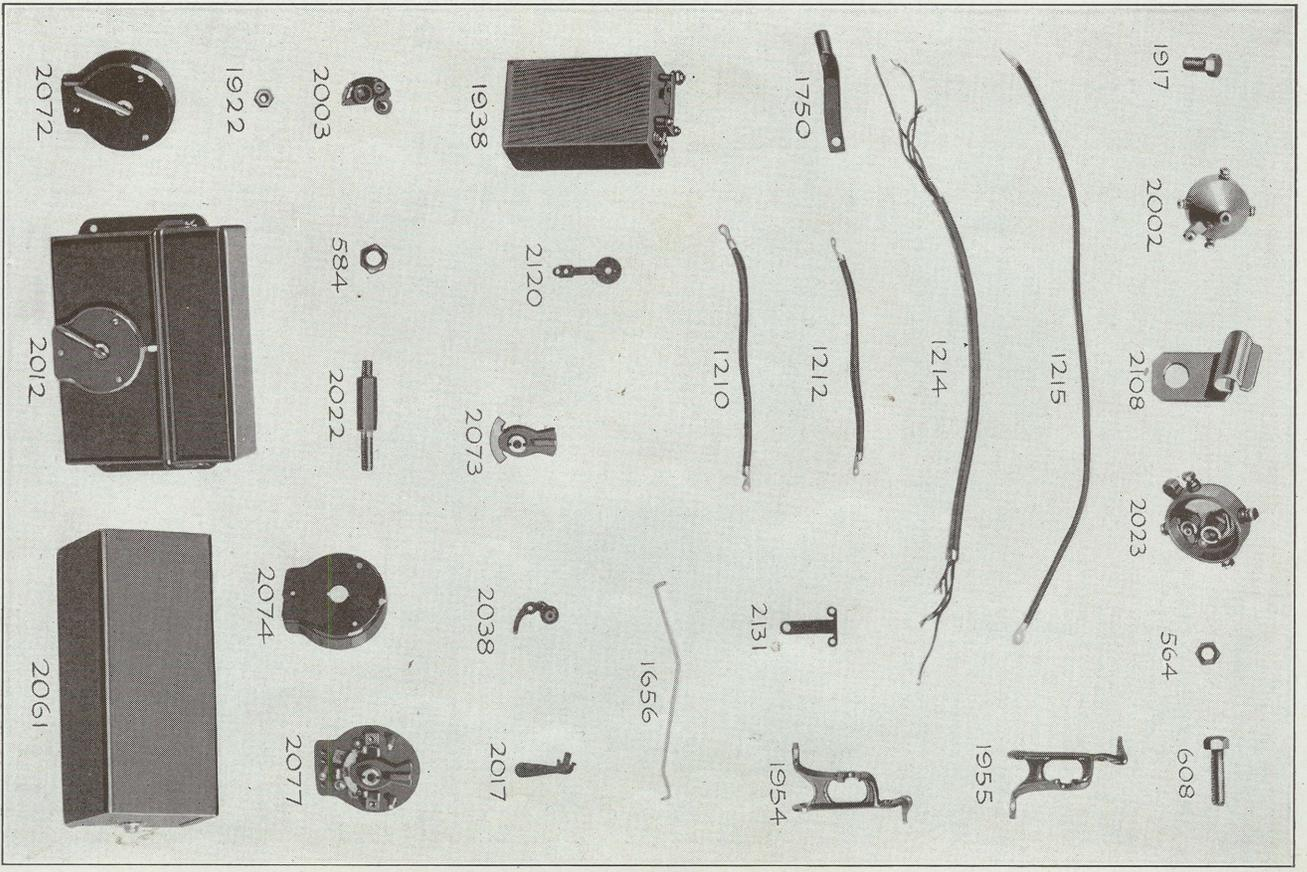


Plate No. 53

Part No.	Name of Part	Plate No.	Specifications	Price	No. Req. per Tractor	Mailing Weight
----------	--------------	-----------	----------------	-------	----------------------	----------------

**IGNITION SYSTEM—COMMUTATOR**

2023	COMMUTATOR ASSEMBLY WITH BRUSH	53		\$ 1 75	1	14.0z.
2002	Communtator Case with Ribs	53		1 00	1	10.0z.
1922	Communtator Lock Nut	53		3 for .05	8	
2009	Communtator Oiler	53	Winkley No. 3	.75	1	3.0z.
2003	Communtator Brush Assembly	53			1	
2038	Communtator Roller Arm Assembly	53		50	1	1.0z.
2004	Communtator Roller Pin	53	Steel— $\frac{3}{16}$ " x $\frac{3}{16}$ "	10	1	1.0z.
2005	Communtator Arm Pin	53	Steel— $\frac{3}{16}$ " x $\frac{3}{16}$ "	05	1	1.0z.
2007	Communtator Arm Spring	53	Music Wire	05	1	2.0z.
1750	Communtator Case Spring	53	Spring Steel	20	1	2.0z.
2022	Communtator Case Spring Stud	53	Steel	20	1	4.0z.
584	Communtator Spring Stud Nut	53	Steel	05	1	
1656	Communtator Control Rod	53	Steel	15	1	2.0z.

**RADIATOR**

1647	RADIATOR ASSEMBLY	54	Assembly	55 00	1	127 lb.
2261	Radiator Top Tank and Lining	54	Cast Iron	10 00	1	60 lb.
1418	Radiator Top Tank Cover	54	Steel	50	1	15.0z.
1422	Radiator Cover Bolt	54	$\frac{1}{2}$ " x 13 thds.	20	1	5.0z.
1836	Radiator Cover Bolt Nut	54	Steel	05	1	
1420	Radiator Cover Knob	54	Cast Iron	25	1	9.0z.
1421	Radiator Cover King	54	Steel	05	21	
2345	Radiator Tank Cap Screw	54	$\frac{1}{4}$ " x $\frac{11}{16}$ " x 28 thds.	05	9	
2284	Radiator Top Tank Stud	54	$\frac{1}{4}$ " x 28 thds. & $\frac{3}{8}$ "-16 thds.	05	5	
1578	Radiator Top Tank Rivet	54	$\frac{1}{4}$ " x $\frac{9}{16}$ " Spltd.	05	6 for	
1405	Radiator Top Tank Cotton Lining	54	Cotton Webbing	15	1	2.0z.
560	Radiator Top Tank Connection Cap Screw	54	Cast Iron	3 25	1	9 lb.
2346	Radiator Tank Cap Screw	54	$\frac{1}{2}$ " x $1\frac{1}{4}$ " x 13 thds.	05	4	2.0z.
2348	Radiator Tank Cap Screw Nut	54	$\frac{1}{2}$ " x 28 thds.	05	16	
391	Radiator Core Assembly	54	Assembly	30 00	46	28 lb.
1822	Radiator Overflow Tube and Gland	54	Brass Tube	1 00	1	6.0z.
1533	Radiator Strip (Front)	54	Steel	10	2	10.0z.
1534	Radiator Strip (Rear)	54	Steel	10	2	5.0z.
1530	Radiator Side Member	54	Cast Iron	1 75	2	10 lb.
1387	Radiator Bottom Tank	54	Cast Iron	2 50	1	
1383	Radiator Bottom Tank Spacer	54	Steel	05	1	
584	Radiator Conn. Bolt	54	$\frac{1}{2}$ " x $1\frac{1}{2}$ " x 20 thds.	05	4	1.0z.
1691	Radiator Conn. Bolt Nut	54	$\frac{1}{2}$ " x 20 thds.	05	4	
2247	Washer	54	$\frac{1}{8}$ Std.	05	4	
	Washer	54	$\frac{1}{2}$ Std.	05	4	
	Washer	54	$\frac{1}{2}$ Std.	05	4	

**TRANSMISSION**

1673	TRANSMISSION HOUSING	55	Cast Iron	50 00	1	205 lb.
1678	Trans. Housing Plate	55	Semi-Steel	4 00	1	15 lb.
1755	Trans. House Plate Pin	55	Steel	05	1	1.0z.
1260	Trans. Housing Plate Cap Screw	55	$\frac{1}{2}$ " x $1\frac{1}{2}$ " x 13 thds.	05	8	2.0z.
583	Trans. Housing Bolt	55	$\frac{1}{2}$ " x 20 thds.	05	14	1.0z.
584	Trans. Housing Bolt Nut	55	$\frac{1}{2}$ " x 20 thds.	05	14	
820	Trans. Housing Plug	55	$\frac{1}{2}$ " Pipe Plug	05	2	2.0z.
500	Trans. Housing Cap Screw	55	$\frac{1}{2}$ " x $1\frac{1}{4}$ " x 13 thds.	05	2	2.0z.
1568	Trans. Drive Shaft	55	Steel	21	1	11 lb.
1549	Trans. Shaft Bevel Gear	55	Steel	8 50	1	3 lb.
1990	Trans. Drive Shaft Nut	55	Steel	5 00	1	5.0z.
518	Trans. Shaft Upper	55	Steel	11 50	1	8.0z.
2172	Trans. Shaft Lower Assembly	55	Steel	14 00	1	9 lb.
1545	Trans. Pinion (Splined)	55	Steel	7 50	2	3 lb. 9.0z.
1546	Trans. Pinion Reverse (Plain)	55	Steel	7 50	2	3 lb. 10.0z.
1547	Trans. Gear (Large)	55	Steel	13 00	1	8 lb. 8.0z.
1540	Trans. Gear (Large)	55	Steel	20 00	1	10 lb.
2265	Trans. Reverse Idler with Bushing	55	Steel	4 00	1	2 lb. 5.0z.

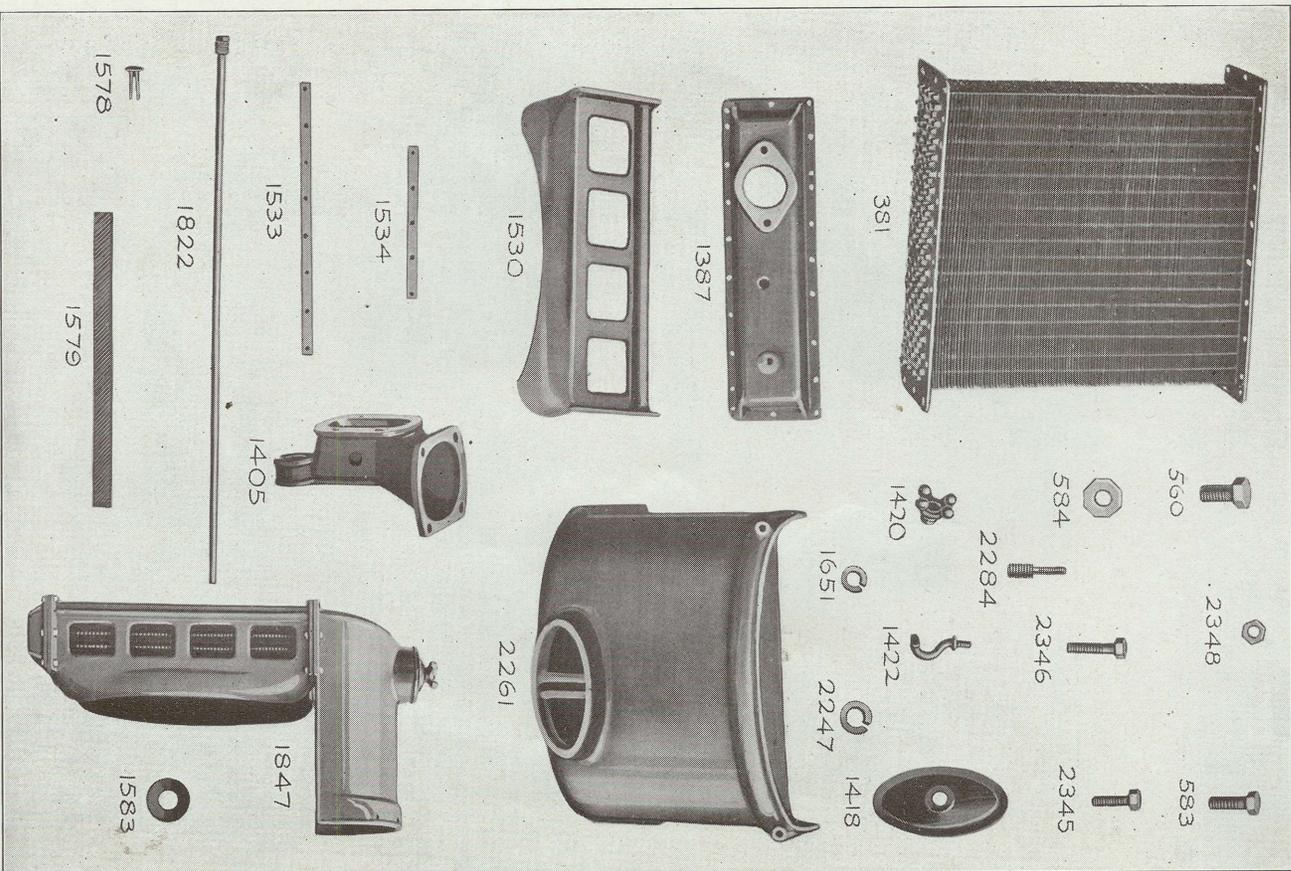


Plate No. 54

Part No.	Name of Part	Plate No.	Specifications	Price	No. Req. per Tractor	Mailng Weight
----------	--------------	-----------	----------------	-------	----------------------	---------------

TRANSMISSION—Continued

1662	Trans. Reverse Idler Shaft.	55	Steel.....	\$ 1 75	1	1 lb. 6 oz.
1663	Trans. Reverse Idler Bushing	55	Bronze.....	65	1	5 oz.
1555	Trans. Reverse Idler Shaft Pin.	55	$\frac{1}{8}$ " x $1\frac{1}{2}$ "	05	1	1 oz.
1751	Trans. Reverse Idler Collar	55	Steel.....	30	1	5 oz.
1521	Trans. Shaft Ball Bearing (Small)	55	1" dia. inside, $3\frac{1}{8}$ " dia. outside, No. 406 R. I. T.	6 50	2	1 lb. 4 oz.
1522	Trans. Shaft Ball Bearing (Large)	55	$1\frac{1}{2}$ " dia. inside, $3\frac{1}{2}$ " dia. outside, No. 406 K. I. T.	7 50	2	1 lb. 11 oz.
1523	Trans. Drive Shaft and Large Gear Ball Bearing	55	$2\frac{3}{8}$ " dia. inside, $4\frac{1}{4}$ " dia. outside, No. 214 K. I. T.	12 25	2	2 lb. 9 oz.
587	Draw Bar Cap Screw	55	$\frac{1}{2}$ " x $1\frac{1}{8}$ " x 12 thds.	2 50	1	10 lb. 5 oz.
1536	Drawbar Cap	55	Cast Iron	2 50	1	2 oz.

GEAR SHIFTER

1782	GEAR SHIFTER ASSEMBLY	56		12 00	1	16 lb.
1529	Gear Shifter Plate Cap Screw	50	Cast Iron	5 00	1	8 lb.
1602	Gear Shifter Level Pin	50	$\frac{1}{2}$ " x $1\frac{1}{2}$ " x 13 thds.	4 00	4	2 lb. 13 oz.
577	Gear Shifter Level Ball	50	Steel	35	1	4 oz.
1053	Gear Shifter Lever Ball Retainer Pin	56	Steel	10	1	2 oz.
1050	Gear Shifter Lever Ball Retainer Pin	56	$\frac{3}{8}$ " x $1\frac{1}{8}$ "	05	1	
1345	Gear Shifter Lever Ball Pin	56	$\frac{3}{8}$ " x $1\frac{1}{8}$ "	05	1	
1331	Gear Shifter—Upper	56	Steel	1 50	1	1 lb.
1332	Gear Shifter—Lower	56	Steel	1 75	2	1 lb. 1 oz.
1770	Gear Shifter Shaft	56	Steel	10 25	2	11 oz.
1584	Gear Shifter Shaft Pin	56	$\frac{1}{2}$ " x $1\frac{1}{2}$ "	05	2	1 oz.
533	Gear Shifter Plunger Spring	56	Steel Wire	05	1	1 oz.
1834	Gear Shifter Plate Cap	56	Cast Iron	25	1	3 oz.
2202	Gear Shifter Interlock	56	Steel	05	1	2 oz.

CLUTCH

1660	CLUTCH ASSEMBLY	56		17 50	1	22 lb.
175	Church Housing—Front	56	Steel	1 00	1	1 lb. 4 oz.
2193	Church Housing—Rear Assem.	56	Cast Iron and Steel	3 00	1	4 lb. 11 oz.
2347	Church Housing Cap Screw	56	$\frac{1}{4}$ " x $\frac{3}{4}$ " x 28 thds.	05	8	
2348	Church Housing Cap Screw Nut	56	$\frac{1}{4}$ " x 28 thds.	2 for	8	
416	Church Plate Driver	56	Steel	35	8	6 oz.
417	Church Plate Driven	56	Steel	35	9	6 oz.
944	Church Spring	56	Spring Steel	10	6	2 oz.
2194	Church Driven Drum and Keys	56	Malleable Iron	6 50	1	6 lb.
1591	Church Driven Drum Ring	56	Steel	05	1 Pr.	1 oz.
1589	Church Driven Drum Nut	56	Steel	40	1	4 oz.

DASH

*2308	DASH ASSEMBLY	57	Cast Iron	26 50	1	32 lb.
2266	Dash With Lining	57	Cotton Webbing	12 50	1	2 oz.
1817	Dash Cotton Lining	57	$\frac{1}{8}$ " x $\frac{9}{8}$ "	10	2	
1578	Dash Split Rivet	57	$\frac{1}{8}$ " x $1\frac{1}{8}$ " x 12 thds.	05	2	
587	Dash Cap Screw	57	$\frac{1}{8}$ " x $1\frac{1}{8}$ " x 12 thds.	05	2	

CLUTCH LEVER BRACKET ASSEMBLY

†1789	CLUTCH LEVER BRACKET ASSEMBLY	57		5 00	1	5 lb.
1758	Church Lever Bracket	57	Cast Iron	2 00	1	2 oz.
1260	Church Lever Bracket Bolt	57	$\frac{1}{2}$ " x $1\frac{1}{2}$ " x 13 thds.	05	4	2 lb.
1760	Church Lever	57	Steel	1 50	1	4 oz.
1339	Church Lever Pin	57	$\frac{1}{8}$ " x $3\frac{1}{8}$ "	1 00	1	15 oz.
1759	Church Release Plate	57	Steel	3 00	1	4 lb.
1587	Church Pedal	57	Steel	75	1	7 oz.
1761	Church Pedal Cam	57	Steel	05	1 Pr.	1 oz.
1762	Church Pedal Cam Retainer	57	Steel	05	1	
1853	Church Pedal Spring	57	Steel Wire	05	1	

\*When supplied as Spare Part No. 2308 Dash includes parts 2266, 1437, 1772, 1745, 1731, 1738, 1423, 1635, 1761, 1762, 1853, 1887.  
 †When supplied as Spare Part No. 1789 includes parts 1758, 1760, 1339, 1759.

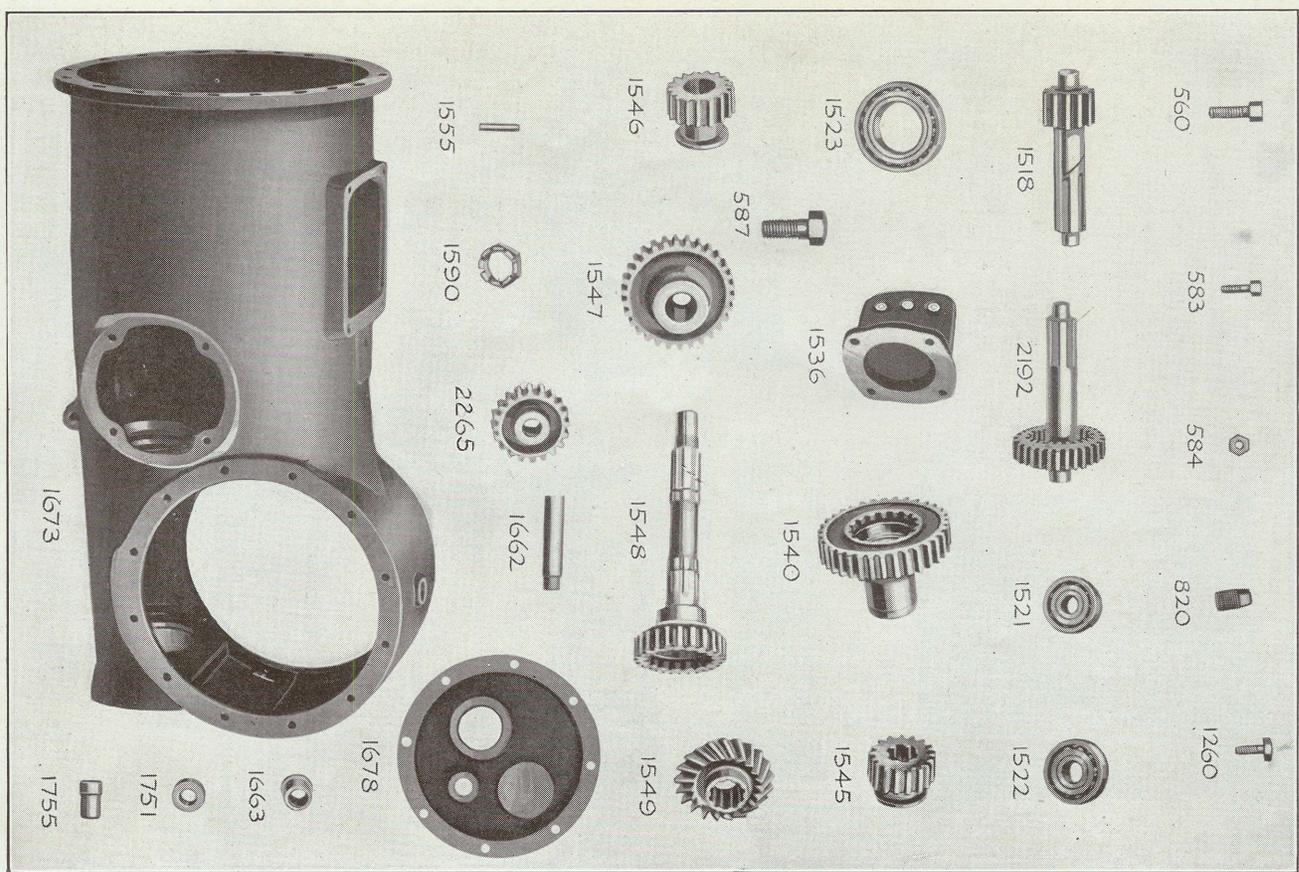


Plate No. 55

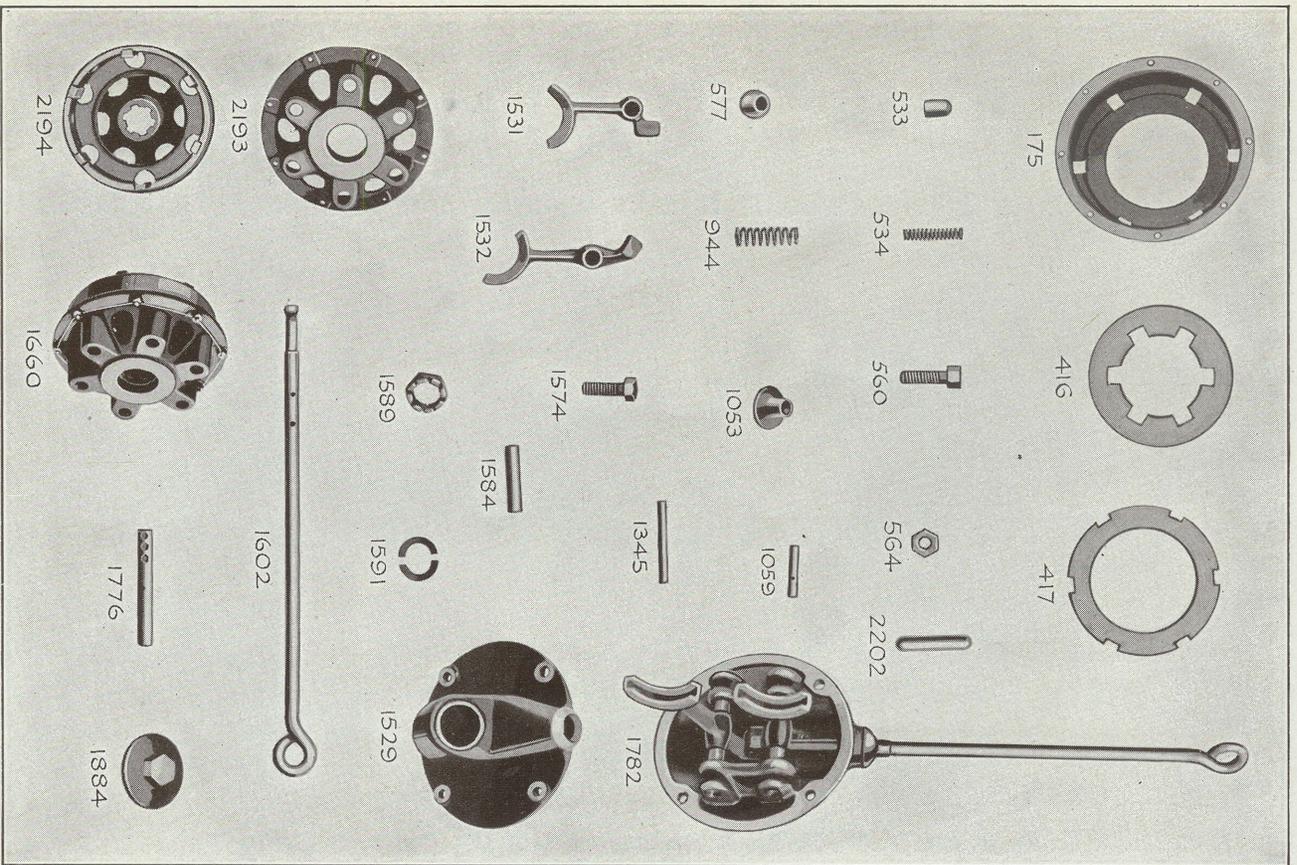


Plate No. 56

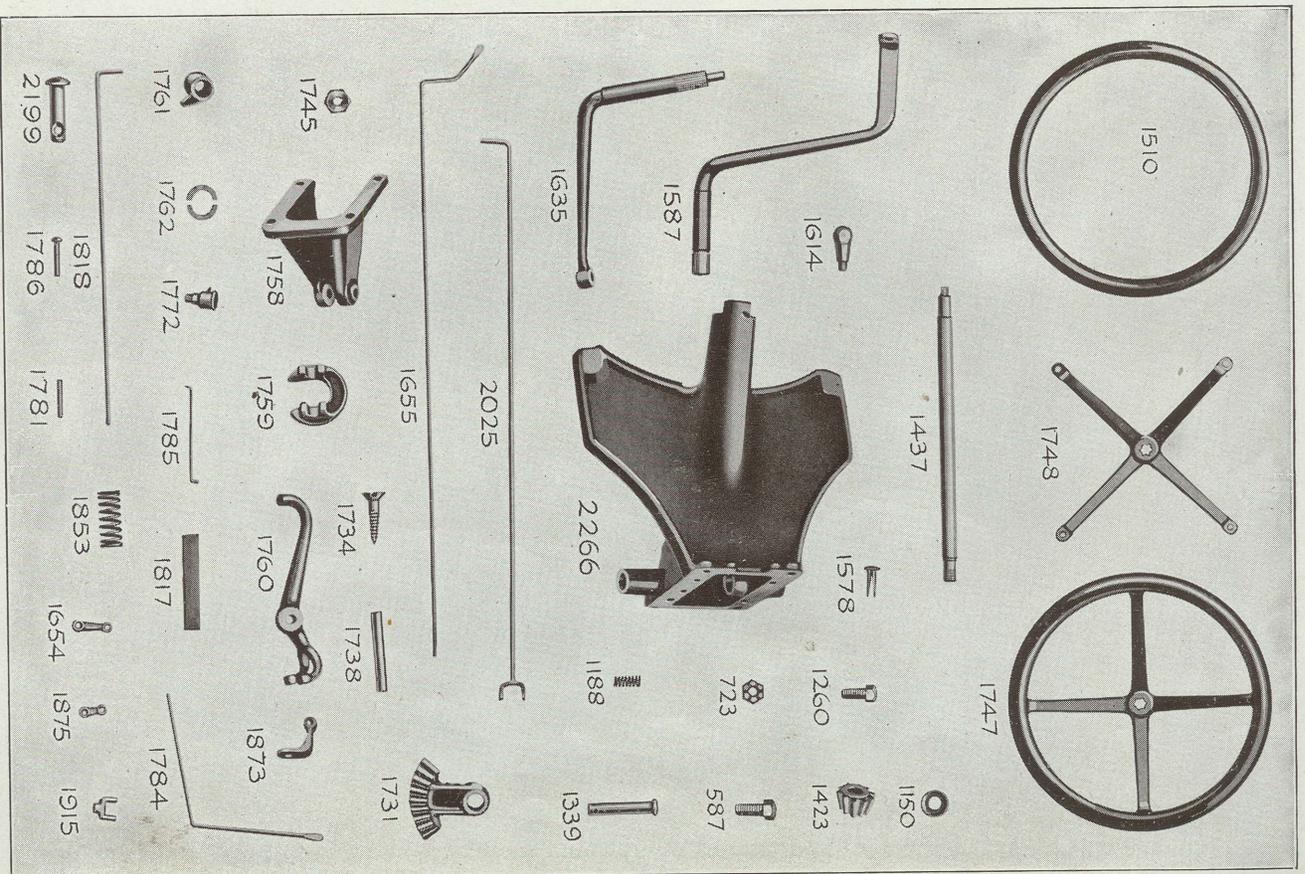


Plate No. 57

Part No.	Name of Part	Plate No.	Specifications	Price	No. per Tractor	Req. Mailing Weight
1747	STEERING WHEEL ASSEMBLY	57		\$ 3 00	1	5 lb. 7 oz.
1510	Steering Wheel Rim	57	Maplewood	1 50	1	1 lb. 15 oz.
1734	Steering Wheel Rim Screw	57	Steel	4 for 05	4	3 lb. 8 oz.
1748	Steering Wheel Spider	57	Cast Iron	1 50	1	3 lb. 11 oz.
1437	Steering Shaft	57	Steel	1 75	1	1 oz.
1772	Steering Shaft Grease Cup	57	Whitely No. 000	10 05	1	1 oz.
1744	Steering Shaft Nut	57	$\frac{5}{8}$ " x 18 thds.	1 50	1	1 lb. 15 oz.
1731	Steering Sector	57	Malleable Iron	05 11	1	1 oz.
1738	Steering Sector Pin	57	$\frac{1}{2}$ " x 1 $\frac{1}{4}$ "	3 00	1	12 oz.
1423	Steering Pinion	57	Steel	3 50	1	7 oz.
1635	Steering Arm—Rear	57	Steel	4 45	1	1 oz.
1614	Steering Arm Ball Nut	57	Steel	05	1	1 oz.
723	Steering Arm Ball Nut	57	$\frac{5}{8}$ " x 18 thds.	05	1	1 oz.
1784	THROTTLE CONTROL HANDLE	57	Steel	15	1	6 oz.
1785	Throttle Con. Lever Connect'n	57	Steel	10	1	2 oz.
1818	Throttle Control Rod	57	Steel	25	1	9 oz.
1654	Throttle Control Rod Lever	57	Steel	25	2	1 oz.
1786	Throttle Con. Rod Lever Pin	57	$\frac{1}{2}$ " x $\frac{5}{8}$ "	05	4	1 lb.
1655	SPARK CONTROL ROD	57	Steel	35	2	3 oz.
1873	Spark Control Rod Support	57	Steel	15	1	1 oz.
1875	Spark Control Rod Lever	57	Steel	15	1	1 oz.
1188	Control Rod and Priming Rod Plunger Spring	57	Steel Wire	05	4	6 oz.
1150	Control Rod Spring Retainer	57	Steel	05	2	2 oz.
1781	Control Rod Spring Ret. Pin	57	$\frac{1}{8}$ " x $\frac{1}{2}$ "	05	1	1 oz.
2199	Priming Rod Plunger	57	Steel	25	1	5 oz.
2025	Needle Valve Adjusting Rod	57	Steel	15	1	1 oz.
1915	Throttle Control Rod Yoke	57	Steel	15	1	6 oz.
2037	Priming Rod	57	Steel	15	1	6 oz.
*1849	DIFFERENTIAL ASSEMBLY	58		142 50	1	6 lb. 6 oz.
1304	Differential Gear	58	Steel	6 50	2	6 oz.
1340	Differential Gear Lock Ring	58	Steel	05	2	1 oz.
1315	Differential Pinion Spider	58	Steel	4 00	4	6 oz.
1314	Differential Pinion	58	Steel	5 00	2	20 lb.
1314	Differential Housing	58	Cast Iron	6 50	2	2 oz.
1155	Differential Housing Bolt	58	$\frac{3}{8}$ " x 2 $\frac{1}{2}$ " x 20 thds.	05	12	2 oz.
1526	Differential Housing Bolt Nut	58	$\frac{3}{8}$ " x 20 thds.	05	12	2 oz.
	Differential Housing Ball Bearing	58	$3\frac{1}{16}$ " dia. inside, $6\frac{5}{16}$ " dia. outside, No. 218 R.T.	19 75	2	5 lb.
1305	REAR AXLE SHAFT	58	Steel	6 50	2	23 lb.
1674	Rear Axle Housing	58	Cast Iron	15 00	2	67 lb.
1643	Rear Axle Housing Cap Screw	58	$\frac{3}{16}$ " x 1 $\frac{1}{2}$ " x 12 thds.	05	24	3 oz.
2036	Rear Axle Roller Bearing	58	Steel	3 25	2	2 lb.
2036	Rear Axle Roller Bearing Sleeve	58	Steel	05	2	1 lb.
1630	Rear Axle Shaft Bearing Cover	58	Steel	05	2	6 oz.
1632	Rear Axle Shaft Felt	58	Felt	15	2	5 oz.
1629	Rear Axle Shaft Felt Retainer	58	Steel	25	2	5 oz.
820	Rear Axle Housing Plug	58	$\frac{1}{2}$ " Pipe Plug	2 for 05	2	1 oz.
	WORM WHEEL AND WORM	58		40 00	1	30 lb.
1294	Worm Wheel	58	Bronze	21 00	1	20 lb.
1528	Worm Shaft Trust Ball Bearing	58	$2\frac{1}{8}$ " dia. inside, $5\frac{1}{2}$ " dia. outside, No. 411 D200	33 00	1	set
1528	Worm Shaft Trust Ball Bearing	58	$1\frac{1}{2}$ " x 12 thds.	75	1	5 lb. 8 oz.
1406	Worm Nut	58		75	1	1 lb.
+2223	REAR WHEEL ASSEMBLY	60		45 00	1	315 lb.
+1777	RIGHT HAND REAR WHEEL ASSEMBLY	60		45 00	1	315 lb.
790	Rear Wheel Assen. Bolt (Left)	60	$\frac{3}{4}$ " x $2\frac{1}{2}$ " x 10 thds.	45 20	8	7 oz.
1303	Rear Wheel Hub Cap Screw	60	Steel	6 25	2	8 lb.
675-16	Rear Wheel Bushing (Right)	60	Used on 16 Clear Wheel	1 00	16	8 oz.
675-16	Rear Wheel Clear (Right)	60	Used on 16 Clear Wheel	1 00	16	8 lb.
675-14	Rear Wheel Clear (Right)	60	Used on 14 Clear Wheel	1 00	14	8 lb.
676-14	Rear Wheel Clear (Left)	60	Used on 14 Clear Wheel	1 00	14	8 lb.
634	Rear Wheel Clear Rivet	60	$\frac{3}{8}$ " x $1\frac{1}{4}$ " Iron Rivet, 3 for 05	128	18	1 oz.

\*1849 Differential Assembly includes parts 1294, 1304, 1305, 1340, 1313, 1314, 1315, 1152, 567 and 1526.

†When supplied as Spare Part, 2223, 1777 Rear Wheel Assembly has clears riveted on.


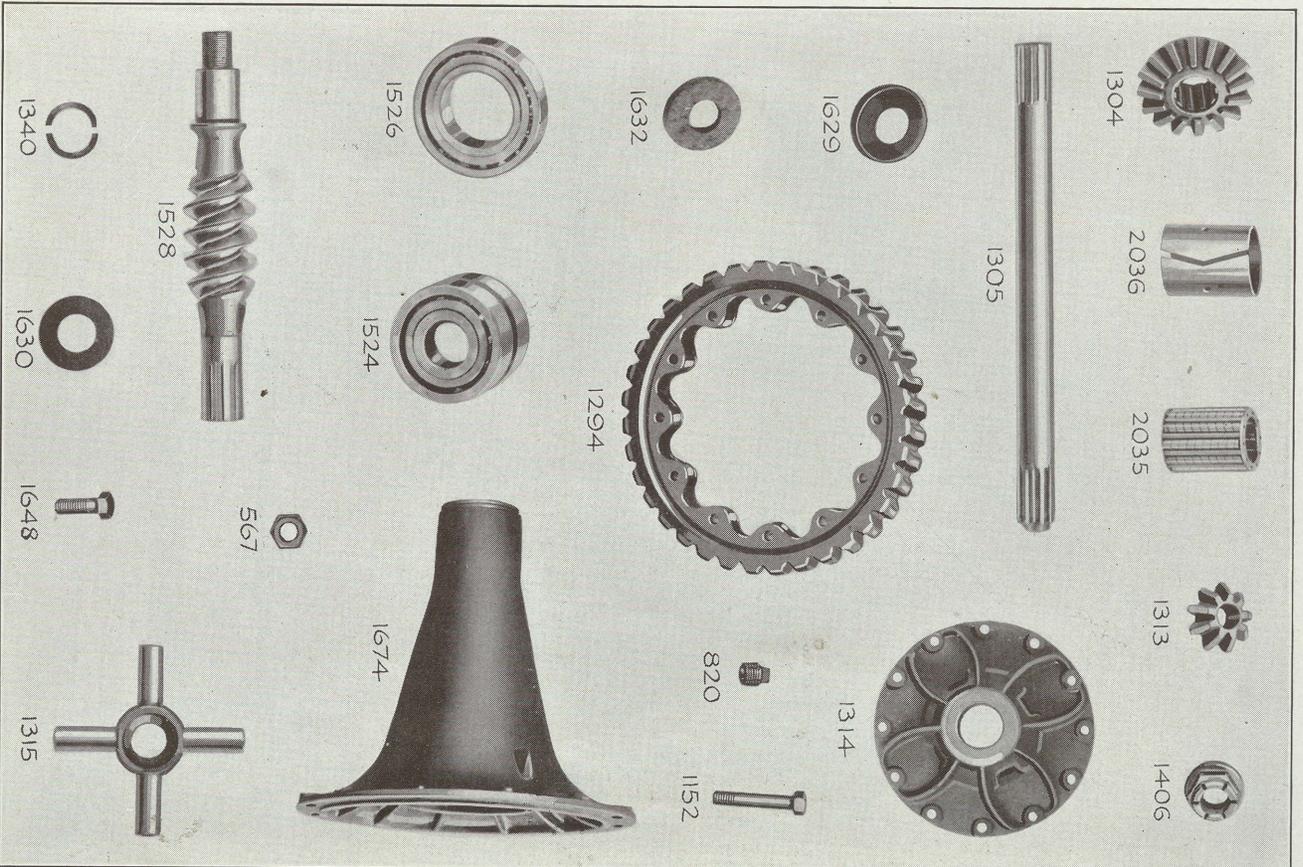


Plate No. 58

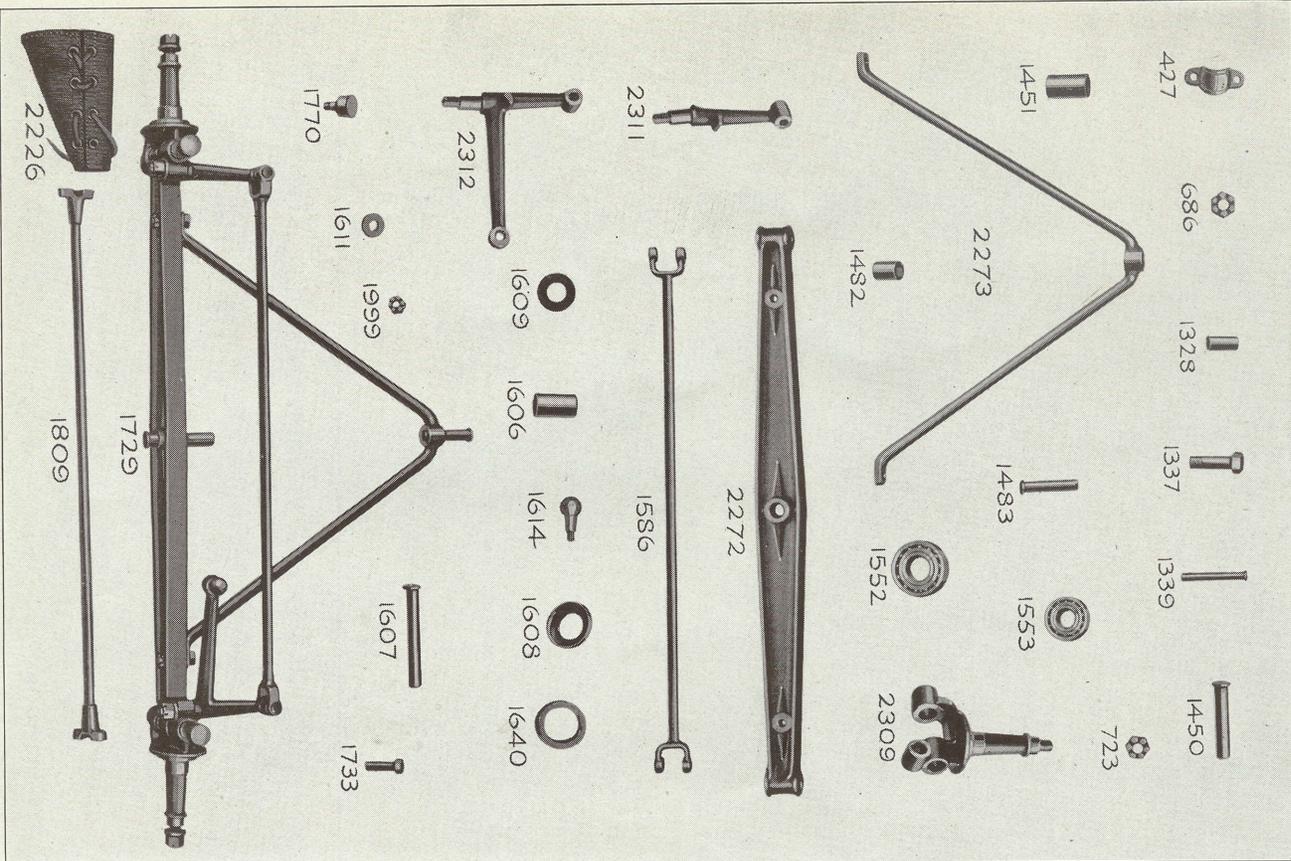


Part No.	Name of Part	Plate No.	Specifications	Price	No. Req. per Tractor	Mailing Weight
<b>FRONT AXLE</b>						
1729	FRONT AXLE ASSEMBLY	59		\$41 25	1	70 lb.
2272	Front Axle—With Bushing	59	Steel	10 00	1	28 lb.
1450	Front Axle Trunnion	59	1" x 4 3/4"	50	1	1 lb.
1451	Front Axle Trunnion Bushing	59	Steel	15	1	3.0z.
<b>RADIUS ROD—With Bushing</b>						
2273	RADIUS ROD—With Bushing	59	Steel	3 50	1	9 lb.
1482	Radius Rod Bushing	59	Steel	15	1	2.0z.
1483	Radius Rod Pin	59	3/8" x 3 1/4"	25	1	8.0z.
1337	Radius Rod Bolt	59	5/8" x 9 1/8" x 18 thds.	15	2	3.0z.
723	Radius Rod Bolt Nut	59	5/8" x 18 thds.	05	2	1.0z.
<b>FRONT WHEEL SPINDLE ASSEMBLY</b>						
1606	Front Wheel Spindle Bushing	59	Steel	5 50	2	7 lb.
1607	Front Wheel Spindle Pin	59	1" x 6 1/4"	15	2	2.0z.
1609	Front Wheel Spindle Pin Washer	59	1" x 6 1/4"	1 25	4	1 lb., 6.0z.
1770	Front Wheel Spindle Pin Washer	59	Steel	05	4	1.0z.
1640	Grease Cup	59	Winkley—No. 0	15	2	3.0z.
1608	Front Wheel Spindle Felt Retainer	59	Felt	10	2	2.0z.
1611	Front Wheel Spindle Washer—Outside	59	Steel	10	2	1.0z.
1553	Front Wheel Spindle Washer—Inside	59	1 1/8" dia. inside x 2 1/4" dia. outside, No. 308 R. F.	5 25	2	14.0z.
1552	Front Wheel Ball Bearing—Inside	59	1 1/8" dia. inside x 3 1/4" dia. outside, No. 308 R. F.	7 50	2	1 lb., 7.0z.
686	Front Wheel Spindle Nut	59	3/4" x 16 thds.	05	2	2.0z.
<b>STEERING ARM FRONT RIGHT ASSEMBLY</b>						
2311	STEERING ARM FRONT RIGHT ASSEMBLY	59		1 75	1	2 lb.
2312	Steering Arm Front—Left	59		3 50	1	3 lb., 4.0z.
1328	Steering Arm Front Bushing	59	Steel	10	2	1.0z.
1611	Steering Arm Front Washer	59	Steel	05	2	1.0z.
686	Steering Arm Front Nut	59	3/4" x 16 thds.	05	2	2.0z.
1586	Steering Connecting Rod	59	Steel	2 00	1	6 lb., 2.0z.
1339	Steering Conn. Rod Yoke Pin	59	1" x 2 1/4"	10	2	4.0z.
1614	Steering Arm Ball	59	Steel	45	1	7.0z.
723	Steering Arm Ball Nut	59	5/8" x 18	05	1	1.0z.
<b>STEERING DRAG LINK ASSEMBLY</b>						
1809	Steering Drag Link	59	Steel	4 00	1	5 lb., 10.0z.
427	Steering Drag Link Cap	59	Steel	50	2	3.0z.
1733	Steering Drag Link Cap Bolt	59	1/4" x 1 1/4" x 20 thds.	05	4	2.0z.
1999	Steering Drag Link Cap Nut	59	1/4" x 20 thds.	05	4	2.0z.
2226	Steering Drag Link Boot		Leather	50	4	
<b>FRONT WHEEL</b>						
2039	FRONT WHEEL ASSEMBLY	60		16 00	2	66 lb.
1603	Front Wheel Hub Cap	60	Cast Iron	25	2	1 lb., 2.0z.
<b>FUEL TANK</b>						
<b>FUEL TANK ASSEMBLY</b>						
1618	FUEL TANK ASSEMBLY	60	Steel	12 50	1	25 lb.
1572	Fuel Tank Cap	60	Cast Iron	10	1	3.0z.
1926	Fuel Tank Strap—Front Assm.	60		90	1	1 lb., 8.0z.
1927	Fuel Tank Strap—Rear Assm.	60	Cotton Webbing	15	2	1 lb., 8.0z.
1579	Fuel Tank Strap Lining	60	Steel	13	2	2.0z.
1578	Fuel Tank Strap Rivet	60	Steel	05	10	
1651	Fuel Tank Strap Lock Washer	60	Steel	05	4	
884	Fuel Tank Strap Nut	60	1" x 20 thds.	05	4	
1622	Sediment Bulb Assembly	60	Copper Tubing	2 90	1	1 lb., 2.0z.
1930	Kerosene Feed Tube	60	Brass	25	1	2.0z.
1964	Sediment Bulb Pack Nut	64		05	1	1.0z.
2230	Sediment Bulb Pack Nut Packing		Felt	2 for	1	

When supplied as Spare Parts:

- \*2309 Front Wheel Spindle Assembly includes parts 1606, 686, 1611, 1573.
- †2310 Steering Arm Front Right Assembly includes parts 1328, 686, 1611, 1599.
- ‡2312 Steering Arm Front Left Assembly includes parts 1809, 427, 1733, 1614, 1600.
- §1926 Fuel Tank Strap Assembly includes parts 1578, 1579, 1651, 584, 1448.
- ||1927 Fuel Tank Strap Rear includes parts 1578, 1579, 1651, 584, 1449.

Plate No. 59

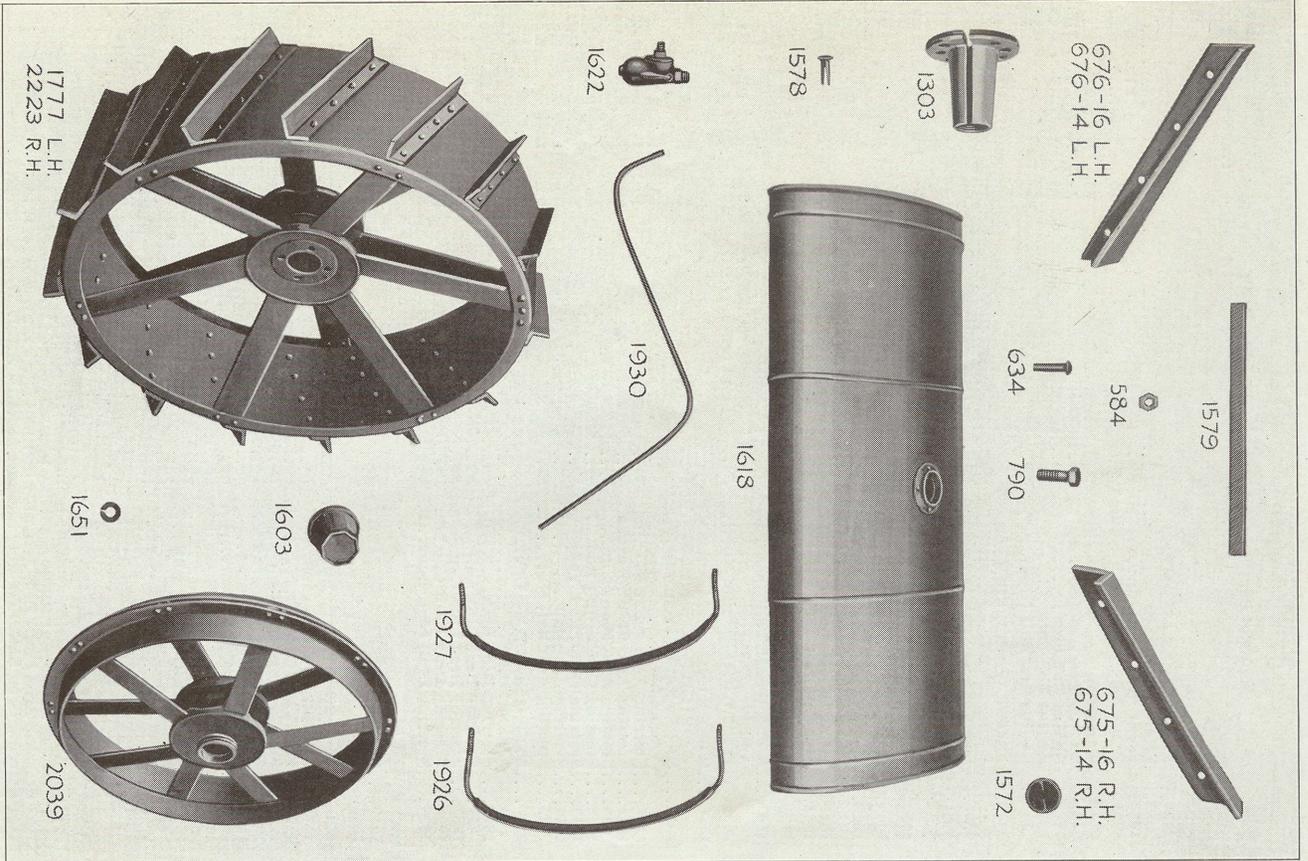

Part No.	Name of Part	Plate No.	Specifications	Price	No. Req. per Tractor	Mailing Weight
<b>VAPORIZER</b>						
<b>VAPORIZER ASSEMBLY COMPLETE</b>						
H175	Vaporizer Assembly	61		\$40 00	1	5 lb. 10 oz.
H234-1	Mixer Chamber	61	Cast Iron	15 80	1	3 lb. 11 oz.
H234-2	Mixer Chamber Stud—Long	61	Cast Iron	5 90	1	6 oz.
H10797	Mixer Chamber Cover	61	1/2" x 1 1/2" x 20 thds.	30	4	6 oz.
H10848	Mixer Chamber Screw	61	1/2" x 1 1/2" x 20 thds.	05	1	
H221-58	Mixer Chamber Cover Gasket	61	Copper Asbestos	10	1	
H220-60	Mixer Chamber Gasket	62	Copper Asbestos	05	1	
<b>AIR VALVE</b>						
H10850	Air Valve	61	Brass	1 40	1	2 oz.
H221-68	Air Valve Guide	61	Cast Iron	70	1	4 oz.
H221-64	Throat Choke Tube	62	Die Casting	55	1	3 oz.
H220-65	Throat Retainer Screw	62	Brass	20	1	1 oz.
H234-88	Shifter Valve Assembly	62	Steel	1 20	1	5 oz.
<b>PRIMING VALVE LEVER ASSEMBLY</b>						
H234-12	Priming Valve Lever	61	Brass	40	1	3 oz.
H220-93	Priming Valve Plate	61	Brass	05	1	1 oz.
H27	Priming Valve Plate Pin	61	Brass	05	1	1/4"
<b>THROTTLE LEVER ASSEMBLY</b>						
H234-11	Throttle Lever	61	Brass	2 85	1	2 oz.
H28-1 1/2	Throttle Plate	61	Brass	05	1	1 oz.
H170	Throttle Plate Pin	61	Brass	05	1	1 oz.
H221-52	Vapor Tube Pack Nut	61	Brass	30	1	1 oz.
H221-54	Vapor Tube Packing	61	Brass	05	1	1 oz.
<b>FLOAT CHAMBER ASSEMBLY</b>						
H234-75	Float Chamber	62	Cast Iron	12 95	1	21 lb. 6 oz.
H234-17	Float Chamber Cover	62	Brass	6 55	1	2 lb.
H234-87	Float Chamber Cover Spring	62	Steel	15	1	1 oz.
H234-42	Float Chamber Cover Screw	62	Steel	05	1	1 oz.
H234-39	Float Chamber Cover Spacer	62	Steel	05	1	1 oz.
H234-40	Float Chamber Cover Gasket	62	Copper	35	1	1 oz.
<b>FLOAT CHAMBER ASSEMBLY</b>						
H234-84	Float Lever and Clamp Screw	62	Brass	50	1	1 oz.
H234-46	Float Lever Pin	62	Brass	05	1	1 oz.
H234-83	Float Valve	62	Brass	30	1	1 oz.
H234-49	Float Valve Seat	62	Brass	15	1	1 oz.
<b>ADJUSTING NEEDLE ASSEMBLY</b>						
H234-56	Adjusting Needle	62	Brass	70	1	2 oz.
H234-67	Adjusting Needle Pilot	62	Brass	30	1	1 oz.
H10849	Nozzle and Low Speed Nozzle	62	Brass	20	1	1 oz.
H220-47	Nozzle Gasket	62	Copper Asbestos	05	1	1 oz.
H220-43	Nozzle Plug	62	Brass	30	1	1 oz.
H220-44	Nozzle Plug Gasket	62	Copper Asbestos	05	1	1 oz.
H150-AX	Drain Plug	62	Brass	20	1	1 oz.
H10876	Pipe Plug 1/8"	62	Iron	05	2	8 oz.
H234-27	Float Chamber Gasket	62	Iron	05	1	1 oz.
<b>SHUNT VALVE LEVER ASSEMBLY</b>						
H234-73	Shunt Valve Lever	61	Steel	1 80	1	8 oz.
H10837	Shunt Valve Lever Stud	61	Steel	10	1	1 oz.
H10838	Shunt Valve Lever Stud Nut	61	Brass	25	1	1 oz.
H234-52	Shunt Valve Lever Shim	61	Steel	05	2	1 oz.
<b>EXHAUST SHUNT VALVE ASSEMBLY</b>						
H234-74	Exhaust Shunt Valve	61	Steel	85	1	1 lb. 6 oz.
<b>MANIFOLD AND STUD ASSEMBLY</b>						
H234-76	Manifold and Stud	61	Steel	12 40	1	21 lb.
H234-58	Mixer Chamber Stud—Short	61	3/8" x 1 1/8" x 24	05	1	2 oz.
H234-57	Mixer Chamber Stud—Long	61	3/8" x 2 1/8" x 24	05	1	2 oz.
H234-28	Float Chamber Stud	61	1/2" x 2 3/8" x 24	10	2	1 oz.
H234-30	Exhaust Manifold Studs	61	1/2" x 1 1/8" x 20	05	2	1 oz.
2200	Exhaust Pipe Flange	61	Mall. Iron	50	1	13 oz.
H234-71	Manifold Outlet and Studs	61	Iron	3 55	1	8 oz.
H234-30	Exhaust Manifold Outlet Studs	61	1/2" x 20"	05	2	2 oz.
H234-31	Exhaust Manifold Stud Nuts	61	3/8" x 24	05	2	1 oz.
H234-59	Mixer Chamber Stud Nuts	61	3/8" x 24	05	2	1 oz.
H234-60	Mixer Chamber Stud Lock Washer	61	3/8" x 24	05	2	1 oz.
H10827	Float Chamber Stud Nut	61	1/8" x 24	05	2	1 oz.
H212-37	Lock Washer	61	Steel	3 for	2	1 oz.
H234-51	Vapor Tube Complete	61	Brass	3 00	1	12 oz.
H10874	Fuel Inlet Elbow	62	Mall. Iron	15	2	1 oz.
HG222	Fuel Inlet Elbow Pack Nut	62	Steel	05	2	1 oz.

Plate No. 60

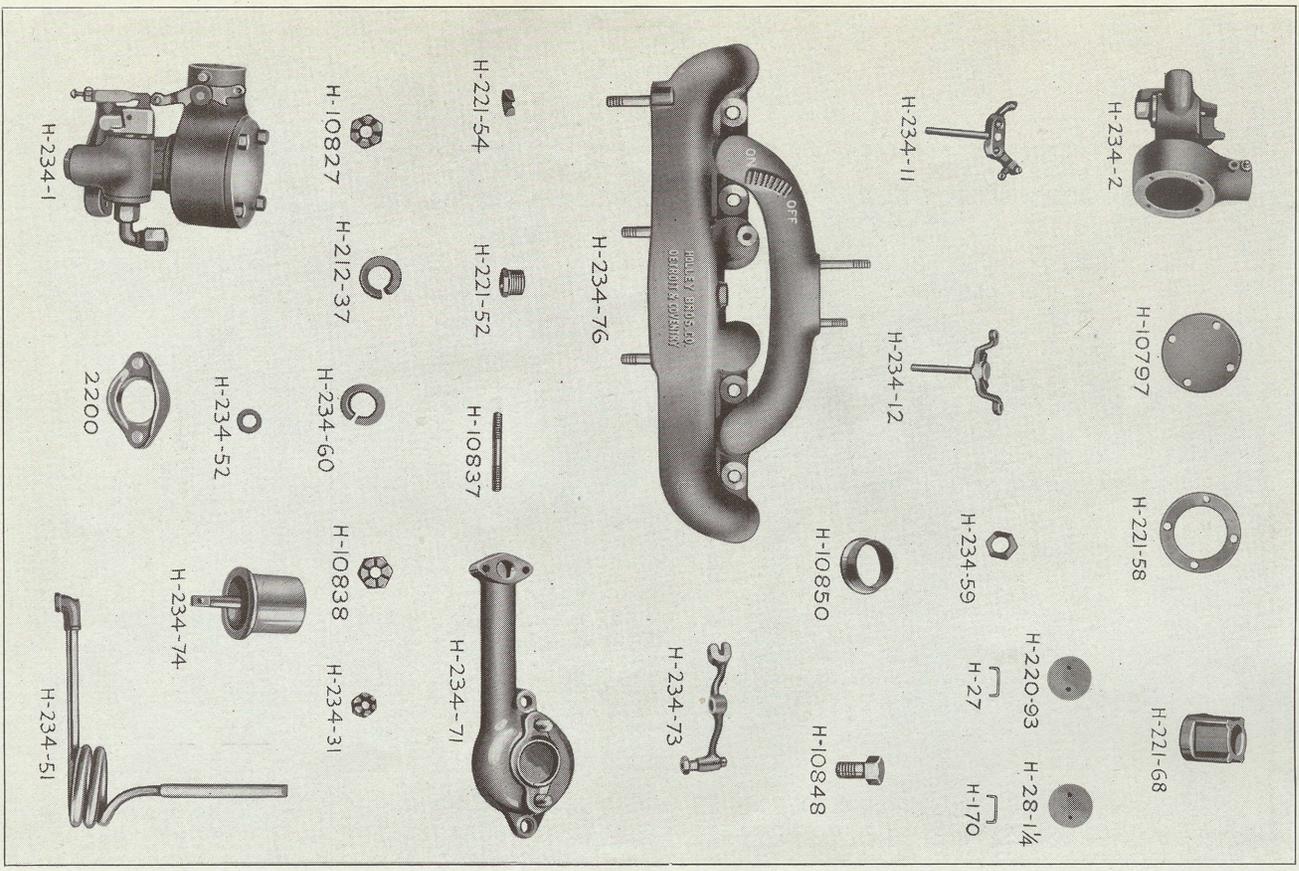


Plate No. 61

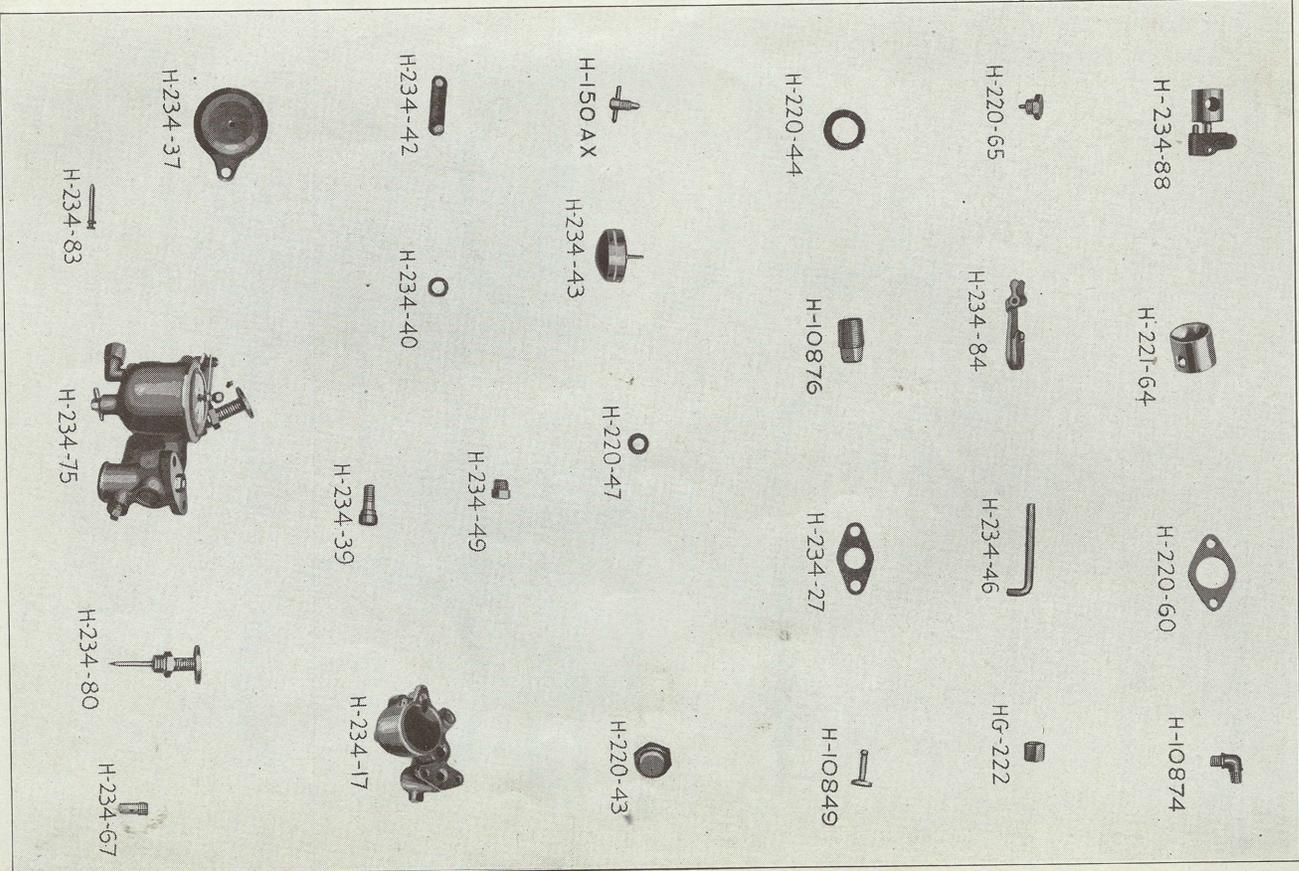


Plate No. 62



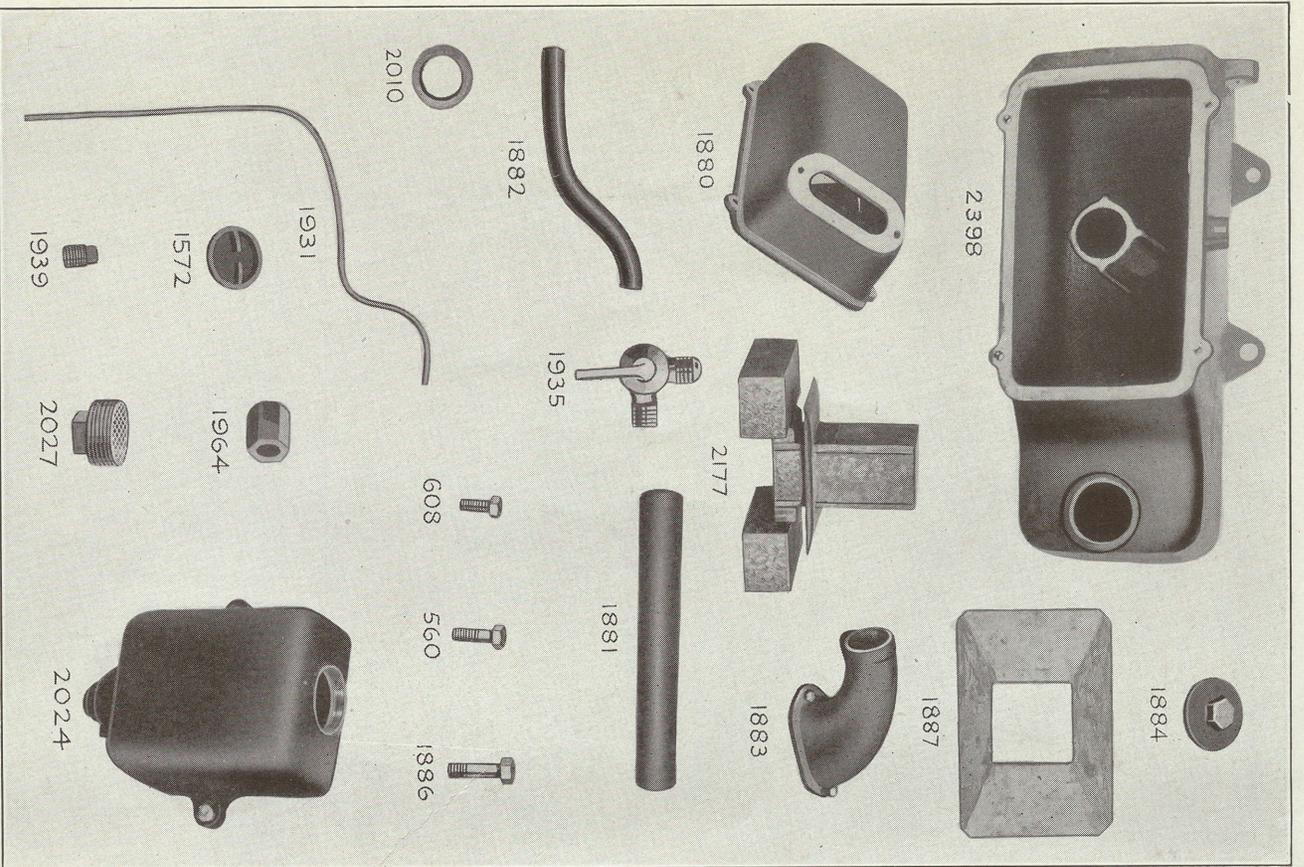


Plate No. 64

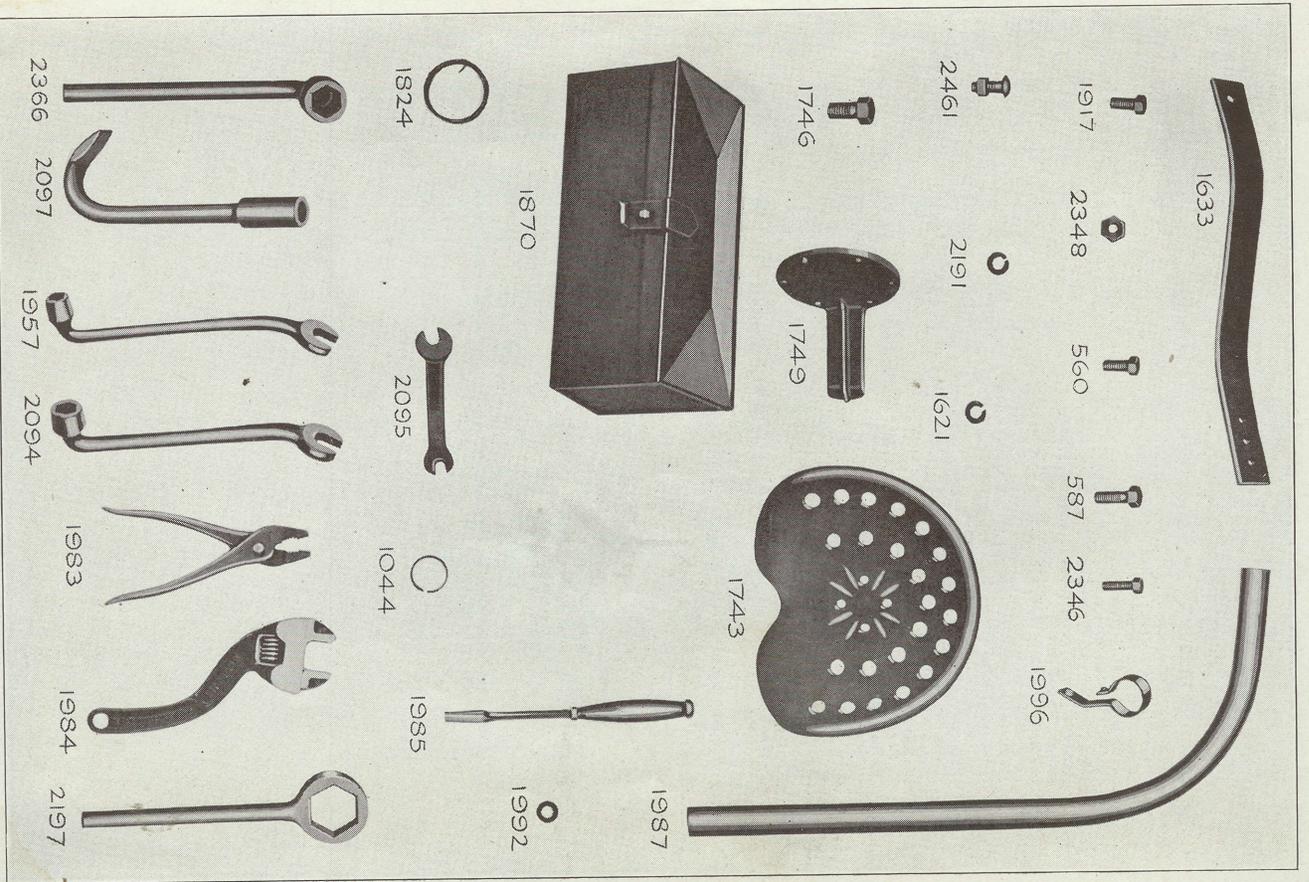


Plate No. 65

Part No. Name of Part Plate No. Specifications Price No. Req. Mailing Weight

MISCELLANEOUS FITTINGS AND ACCESSORIES—Continued.

1984	Wescott Wrench.....	65	10" Keystone.....	1 50	1	1 lb.	8 oz.
1985	Screw Driver.....	65	9 1/2".....	1 35	1	1 lb.	10 oz.
1987	Combination Spark Plug and Cylinder Head Wrench.....	65	.....	1 37	1	1 lb.	4 oz.
2095	7/8" x 1/2" Nut Wrench.....	65	Steel.....	75	1	1 lb.	5 oz.
2094	5/8" Cap Screw Wrench.....	65	Steel.....	75	1	1 lb.	4 oz.
2366	Rear Wheel Wrench.....	65	Steel.....	75	1	2 lb.	.....
2097	Rear Wheel Bar.....	65	Steel.....	75	1	2 lb.	.....
2197	Front Hub Cap Wrench.....	65	Steel.....	1 00	1	2 lb.	1 oz.
1044	Manifold Gland.....	65	Steel.....	1 05	1	.....	.....
1621	Manifold Lock Washer.....	65	1/8" x 1 1/2" Std.....	3 for 05	4	.....	2 oz.
2201	Exhaust Tube Assembly.....	61	Mail Iron.....	2 00	1	.....	13 oz.
1987	Exhaust Tube Flange.....	65	Steel 2" dia.....	1 50	1	3 lb.	2 oz.
1996	Exhaust Tube Bracket.....	65	Steel.....	1 20	1	.....	7 oz.
2346	Exhaust Tube Bracket Cap.....	65	1/4" x 1" x 28 thds.....	05	1	.....	.....
2348	Exhaust Tube Bracket Cap.....	65	1/4" x 28 thds.....	05	1	.....	.....
1743	Screw Nut.....	65	Steel.....	2 for 05	1	5 lb.	.....
1433	Seat Spring.....	65	Steel.....	1 00	1	10 lb.	.....
2461	Seat Spring Bolt and Nut.....	65	1/2" x 1 1/2" x 13.....	1 40	1	.....	.....
1746	Seat Spring Cap Screw.....	65	3/4" x 10 x 1 1/2".....	20	1	.....	5 oz.
2191	Seat Spring Cap Screw Lock Washer.....	65	3/4" Std.....	2 for 05	1	.....	1 oz.
1749	Foot Bracket.....	65	Cast Iron.....	1 00	1	4 lb.	.....
1824	Wire for Locking Screws and Nuts.....	65	1/2" x 1 1/4" x 13 thds.....	05	6	.....	2 oz.
2237	Brass Wire for Locking Bolts and Nuts.....	65	Iron Wire.....	05	.....	.....	.....
2187	Tractor Cover.....	.....	Brass.....	per coil 15 00	1	0 lb.	8 oz.

COTTER PINS

Part No.	Name of Part	Price
1963	1/8" x 3/8" Cotter Pin.....	Per Doz. 08
1787	1/8" x 1/2" Cotter Pin.....	Per Doz. 08
H-234-62	1/8" x 3/8" Cotter Pin.....	Per Doz. 08
1061	1/8" x 1/2" Cotter Pin.....	Per Doz. 08
594	1/8" x 1" Cotter Pin.....	Per Doz. 08
2403	1/8" x 1 1/2" Cotter Pin.....	Per Doz. 08
1672	1/8" x 1 1/2" Cotter Pin.....	Per Doz. 08
1806	1/8" x 1 1/2" Cotter Pin.....	Per Doz. 08
726	1/8" x 2" Cotter Pin.....	Per Doz. 08
1592	1/8" x 2" Cotter Pin.....	Per Doz. 15
1671	1/8" x 1 1/2" Cotter Pin.....	Per Doz. 15
1593	1/8" x 2 1/2" Cotter Pin.....	Per Doz. 15

\*2201 Exhaust Tube Assembly Includes parts 2200 and 1987.

Numerical

Part No.	Name	Page	Part No.	Name	Page
109	Valve (Intake and Exhaust)	90	1378	Connecting Rod Cap Bolt	90
112	Valve Bushing	90	1379	Connecting Rod Cap Nut	90
117	Connecting Rod Flange	90	1380	Cylinder Front Cover	90
133	Valve Spring Head	90	1381	Radiator Front Cover	90
137	Chassis Head	90	1382	Radiator Bottom Tank	90
143	Chassis Shaft Bearing Cap	90	1405	Radiator Top Tank Connection	90
144	Cam Shaft Gear	90	1406	Worm Nut	94
157	Cylinder Shaft Taper Gear	107	1425	Radiator Top Tank Cover Knob	94
172	Primary Housing, Assembly	92	1426	Radiator Top Tank Cover Knob	94
179	Primary Insulating Look Nut	92	1432	Radiator Top Tank Cover Bolt	100
383	Piston Ring	90	1433	Steering Pinion	100
381	Radiator Core Assembly	94	1437	Steering Shaft	92
392	Cam Shaft Nut, Large	90	1446	Eye/Wheel Trunnion	103
416	Valve Spring Seat	90	1451	Front Axle Trunnion Bushing	92
417	Chutch Plate Driver	103	1452	Pan Belt	92
427	Steering Drag Link Cap	97	1482	Radiator Rod Bushing	103
440	Cam Shaft	90	1483	Radiator Rod Pin	92
450	Flywheel Stud	90	1484	Rear Hub Pulley	92
451	Flywheel Stud Spring	90	1485	Rear Hub Washer	92
460	Starting Crank Handle Pin	90	1499	Fan Drive Pulley	92
518	Flywheel Magnet Champ Screw	92	1510	Fan Drive Pulley	92
520	Starting Crank Handle	92	1511	Steering Wheel Rim	102
533	Flywheel Magnet Support	97	1514	Fan Shaft Washer	92
534	Gear Shifter Pulley Spring	97	1515	Fan Shaft Retainer	92
566	1/2" x 1 1/2" x 13 thds. Cap Screw	97	1518	Fan Fel Retainer	94
564	Coil Box Cap Screw Nut	92	1521	Transmission Shaft Ball Bearing, Small	97
565	Crank Shaft Bearing Cap Screw	92	1522	Transmission Shaft Ball Bearing, Large	97
597	Flywheel Nut	92	1523	Transmission Drive Shaft and Large	97
577	Gear Shifter Lever Bolt	97	1524	Worm Shaft Thrust Ball Bearing, 2 per set	100
584	1/2" x 1 1/2" x 20 thds. Std. Bolt	90	1526	Differential Housing Ball Bearing	102
584	1/2" x 1 1/2" x 20 thds. Std. Plain Nut	90	1527	Fan Ball Bearing	100
587	2 1/2" x 1 1/2" x 12 thds. Cap Screw	97	1528	Worm	97
589	2 1/2" x 1 1/2" x 12 thds. Cap Screw	112	1530	Radiator Side Member	94
608	1/2" x 1 1/2" x 20 thds. Cap Screw	92	1531	Gear Shifter, Upper	97
634	Rear Wheel Cleat Rivet	100	1532	Gear Shifter, Lower	94
661	Starting Crank	90	1533	Radiator Strip, Front	94
675	Rear Wheel Cleat, Right	100	1534	Radiator Strip, Rear	97
676	Rear Wheel Cleat, Left	100	1535	Transmission Gear, Large	94
716	Cylinder Front Cover Felt	103	1544	Transmission Gear, Large	90
717	Valve Spring Cover	103	1545	Cylinder Plug	90
723	1/2" x 1 1/4" Cotter Pin	103	1546	Transmission Pinion, Splined	94
726	Breather Cover	92	1547	Transmission Pinion, Reverse, Plain	94
735	Breather Strainer	92	1548	Transmission Gear, Shaft	94
742	Rear Wheel Hub Cap Screw	92	1549	Transmission Shaft Bevel Gear	103
805	Flywheel Magnet Washer	90	1552	Front Wheel Ball Bearing, Inside	94
820	1/2" Std. Pipe Plug	90	1553	Flywheel Ball Bearing and Front Wheel	103
944	Chutch Spring Support Shim	90	1554	Transmission Reverse Connection Gasket	109
946	Cam Shaft Nut, Small	92	1555	Radiator Top Tank Gasket	109
1021	Starting Pin	90	1556	Radiator Bottom Tank Gasket	109
1044	Manifold Gland	109	1557	Fuel and Gasoline Tank Cap	103
1043	Rear Shifter Lever Plate Retainer	97	1558	Rear Drive Pulley Pin	94
1061	Gear Shifter Lever Plate Retainer Pin	112	1559	1/2" x 3/8" Split Axle Shank Strap Linning	97
1069	Crank Shaft Bearing Cap Shim	90	1560	Steering Connecting Rod	97
1070	Connecting Rod Shim	90	1561	Chutch Pedal	97
1145	Crank Shaft Spring Retainer	100	1562	Chutch Drive Drum Nut	94
1146	Primary Housing	100	1563	Chutch Drive Drum Ring	94
1152	Differential Housing Bolt	100	1564	5/32" x 2 1/2" Cotter Pin	112
1188	Piston Pin	105	1565	1/2" x 2 1/2" Cotter Pin	112
1175	Vaporizer Assembly Complete	105	1602	Gear Shifter Lever	103
1188	Control Rod and Priming Rod Plunger	100	1603	Front Wheel Hub Cap	103
1196	Cotter Pin	92	1604	Front Wheel Spindle Pin	103
1210	Smart Plug Wire No. 1 and No. 2 CV1	92	1605	Front Wheel Spindle Felt Retainer	103
1212	Smart Plug Wire No. 3 and No. 4 CV1	92	1609	Front Wheel Spindle Pin Washer	103
1214	Commutator Wire Assembly	92	1611	1/2" Washer	100
1215	Magneto Coil Wire	92	1612	Steering Arm Ball	109
1280	1/2" x 1 1/4" x 13 thds. Cap Screw	92	1613	Steering Arm Body Gasket	109
1303	Worm Wheel Bushing	100	1614	Steering Arm Ball	109
1304	Differential Gear	100	1615	Steering Arm Body Gasket	106
1305	Rear Axle Shaft	100	1621	Manifold Lock Washer	103
1314	Differential Pinion	100	1622	Sediment Bowl Assembly	102
1313	Differential Housing	100	1629	Rear Axle Shaft Bearing Cover	100
1315	Differential Housing Splitter	100	1632	Rear Axle Shaft Bearing Felt	100
1331	Crank Case	90	1635	Steering Arm Rear	117
1337	Radiator Rod Bolt	97	1648	Front Wheel Spindle Felt	103
1339	1/2" x 2 1/2" Pin	103	1648	Rear Axle Housing Cap Screw	103
1340	Differential Gear Lock Ring	100	1651	1/2" Lock Washer Rod Lever	100
1345	Gear Shifter Lever Ball Pin	97	1652	Throttle Control Rod	100
			1653	Commutator Control Rod	94

[113]

Parts List Index—Continued

Part No.	Name	Page	Part No.	Name	Page
1660	Clutch Assembly	97	1957	Combination Spark Plug and Cylinder	112
1662	Transmission Reverse Idler Shaft	97	1963	Head Wrench	112
1671	Transmission Reverse Idler Bushing	97	1964	Gasoline Tank and Sediment Bulb Pack	109
1672	1/2" x 1 1/2" Cotter Pin	112			
1673	Transmission Housing	112			
1674	Rear Axle Housing	94	1983	Pliers	109
1675	Transmission Housing Plate	94	1984	Wescott Wrench	112
1676	Rear Axle Housing	100	1985	Screw Driver	112
1677	Transmission Housing	94	1987	Exhaust Tube	112
1678	Steering Wheel Rim	100	1988	Top Box Washer	109
1679	Steering Wheel Rim Screw	100	1992	Arm Wrench	109
1733	Steering Wheel Rim	100	1996	Exhaust Tube Bracket	112
1734	Steering Wheel Rim	100	1999	Steering Drag Link Cap Bolt Nut	103
1735	Steering Sector Pin	100	2002	Commutator Case with Fibre	94
1736	Steering Sector Pin	112	2003	Commutator Roller Pin	94
1745	Steering Shim Nut	112	2004	Commutator Roller Pin	94
1746	Steering Shim Screw	110	2007	Commutator Arm Spring	94
1747	Steering Wheel Assembly	100	2008	Commutator Arm Pin	94
1748	Steering Wheel Assembly	100	2009	Commutator Oiler	94
1749	Foot Bracket	112	2010	Air Washer Tube Felt Collar	109
1750	Commutator Case Spring	94	2011	Bolt	92
1751	Transmission Reverse Idler Collar	97	2012	Brush	92
1752	Clutch Lever Bracket, Small	97	2016	Brush	92
1753	Clutch Release Plate	97	2017	Brush	92
1761	Clutch Lever	97	2022	Commutator Case Spring Stud	94
1762	Clutch Pedal Cam Retainer	97	2023	Commutator Assembly with Brush	94
1763	Clutch Pedal Cam Retainer	97	2024	Gasoline Tank Finishing Rod	109
1764	Cylinder Front Cover Drain Cook	90	2026	Gasoline Tank Assembly	109
1769	Front Wheel Spindle Pin Grease Cup	103	2027	Gasoline Tank Plug	109
1770	Steering Shaft Grease Cup	100	2030	Air Washer Tube Flange Gasket	109
1772	Steering Shaft Grease Cup	100	2035	Rear Axle Shaft Roller Bearing Sleeve	100
1776	Gear Shifter Shaft	97	2036	Rear Axle Shaft Roller Bearing	100
1777	Gear Wheel Assembly Left Hand	100	2038	Commutator Roller Arm Assembly	103
1778	Gear Shifter Assembly	109	2039	Front Wheel Assembly	94
1782	Gear Shifter Retainer Pin	97	2061	Coil Box Cover	92
1783	Valve Spring Cover Gasket	109	2072	Coil Switch Assembly	92
1784	Throttle Control Lever Connection	100	2073	Coil Switch Blade Moulding	92
1785	Throttle Control Lever Connection	100	2077	Coil Switch Base Assembly	92
1789	Church Lever Bracket Assembly	112	2094	1/2" Cap Screw Wrench	112
1806	1/2" x 1" Cotter Pin	103	2095	1/2" x 1/2" Nut Wrench	112
1809	Steering Drag Link	90	2106	Commutator Cable Support	112
1816	Cylinder Oil Line	97	2108	Commutator Cable Support	112
1817	Push Cotton Liner	97	2131	Coil Vibrator Bridge with Contact Point	92
1822	Radiator Overflow Tube and Gland	94	2177	Air Washer Floet Assembly	109
1823	Starting Crank Spacer	112	2187	Traetor Cover	112
1824	Wire for Locking Screws and Nuts	94	2191	Seat Spring Cap Screw Lock Washer	112
1836	Radiator Top Tank Cover Bolt Nut	109	2192	Transmission Shaft Lower Assembly	97
1837	Radiator Top Tank Cover Gasket	90	2194	Church Driven Drum and Keys	97
1843	Starting Crank Handle Spring	90	2196	Air Washer Cover Gasket	109
1844	Starting Crank Assembly	92	2197	Front Hub Cap Wrench	112
1845	Breather Assembly	92	2199	Priming Rod Plunger	100
1846	Rear Assembly	92	2200	Cam Shaft Bushing	100
1847	Radiator Assembly	94	2206	Exhaust Tube Assembly	112
1848	Church Pedal Spring	109	2207	Gear Shifter Interlock	97
1853	Tool Box Assembly	109	2208	Cylinder Front Cover Plug	90
1870	Spark Control Rod Support	100	2209	Flywheel Magnet 16 per set	92
1873	Spark Control Rod Lever	100	2210	Flywheel Magnet Gland	92
1880	Air Washer Cover	109	2211	Steering Drag Link Assembly	103
1882	Air Washer Tube Small	109	2224	Steering Drag Link Boot	103
1883	Air Washer Tube	109	2226	Gasoline Tank and Sediment Bulb Pack	103
1884	Air Washer and Gear Shifter Plug	97	2230	Nut Packing	103
1885	Air Washer Plug Gasket	109	2237	Brass Wire for Looking Holes and Nuts	112
1889	Air Washer Cap Screw	109	2260	Cylinder Assembly	109
1892	Cylinder Front Cover Gasket	109	2261	Radiator Top Tank and Liner	90
1894	Transmission Housing Gasket	109	2263	Connecting Rod Assembly	90
1895	Rear Axle Housing Gasket	109	2264	Pliston Complete	94
1899	Gear Shifter Plate Gasket	109	2265	Transmission Reverse Idler with Bushing	94
1899	Worm Thrust Bearing Cap Gasket	109	2272	Front Axle with Bushing	103
1900	Foot Bracket Gasket	109	2273	Radiator Rod with Bushing	103
1915	Throttle Control Rod Yoke	100	2284	Radiator Top Tank Stud	94
1917	1/2" x 1 1/2" x 13 thds. Cap Screw	90, 92, 109	2308	Dash Assembly	97
1922	Commutator Lock Nut	103	2309	Front Wheel Spindle Assembly	103
1925	Fuel Tank Strap Front Assembly	109	2311	Steering Arm Pin	103
1930	Fuel Tank Strap Rear Assembly	109	2312	Steering Arm Pin	103
1931	Gasoline Feed Tube	109	2344	1/2" x 1 1/2" x 28 thds. Cap Screw	94
1935	Gasoline Tank Shut-off Cock	109	2346	1/2" x 28 thds. Std. Nut	94, 97, 109, 112
1938	Coil Unit	90, 109	2347	Church Housing Cap Screw	94, 97, 109, 112
1939	1/2" Pipe Plug	92	2377	Rear Wheel Wrench	92
1954	Coil Box Support, K. H.	92	2378	Fan Hub Pulley Plug	92
1955	Coil Box Support, L. H.	92	2398	Air Washer Bowl with Plug	109
			2403	Crank Case Plug	112
			2444	Seat Spring Bolt and Nut	112
			2461		

Parts List Index Assemblies

Assemblies	Page
Motor	90
Fan	92
Flywheel	92
Magneto	92
Primary Contact	92
Ignition System—Coil	92
Ignition System—Wiring	92
Ignition System—Commutator	94
Radiator	94
Transmission	94
Gear Shifter	97
Clutch	97
Dash (with Control and Steering)	97
Differential and Rear Axle	100
Worm Wheel and Worm	100
Rear Wheel	100
Front Axle	103
Front Wheel	103
Fuel Tank and Connections	103
Vaporizer	105
Gaskets	109
Air Washer and Gasoline Tank	109
Miscellaneous Fittings and Accessories	109
Cotter Pins	112

